


## HONEYWELL UDC2500L KEYS

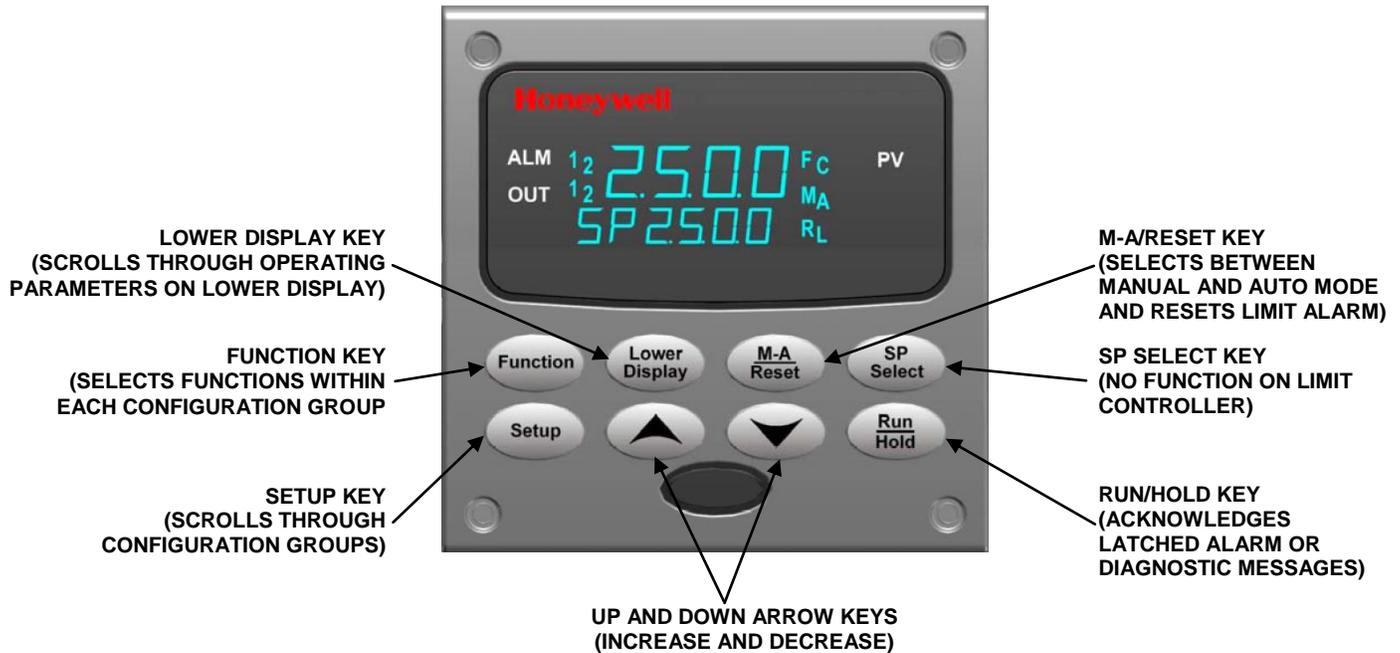

### A. CHANGING THE SETPOINT

1. Press  until Upper Display shows the PV Value and the Lower Display shows SP.
2. Press  or  to change the setpoint.
3. Press  to accept the change.