

HONEYWELL UDC3200 KEYS



A. CHANGING THE SET POINT

1. Press  until Upper Display shows the PV Value and the Lower Display shows SP.
2. Press  or  to change the set point.
3. Press  to accept the change.

B. RUNNING A PROFILE (IF APPLICABLE)

For information on how to configure a profile, refer to UDC3200 User Manual, pages 125-131.

1. Press  to start a profile. "R" displays in Upper Display to indicate a profile is running.

C. TO HOLD A PROFILE (IF APPLICABLE)

1. Press  to hold a profile. “H” displays in Upper Display to indicate a profile is held at the current setpoint.

D. PERFORMING ACCUTUNE

1. Press  until **ACCUTUNE** is shown on the lower display.
2. Press  until **ACCUTUNE** is shown on the lower display. Press  to enable Accutune (**TUNE**).
3. Press  to return to **MAIN MENU**.
4. Set the controller to the desired set point.
5. Press  to return until **TUNE OFF** is shown on the lower display.
Press  until **DoFast** is shown on the lower display.
6. Press  to return to **MAIN MENU**. “T” displays in Upper Display as long as Accutune is in process. Once complete, lower display will show **TUNE OFF** and PID values will be filled in under **TUNING** menu.