


PANASONIC LT4H KEYS

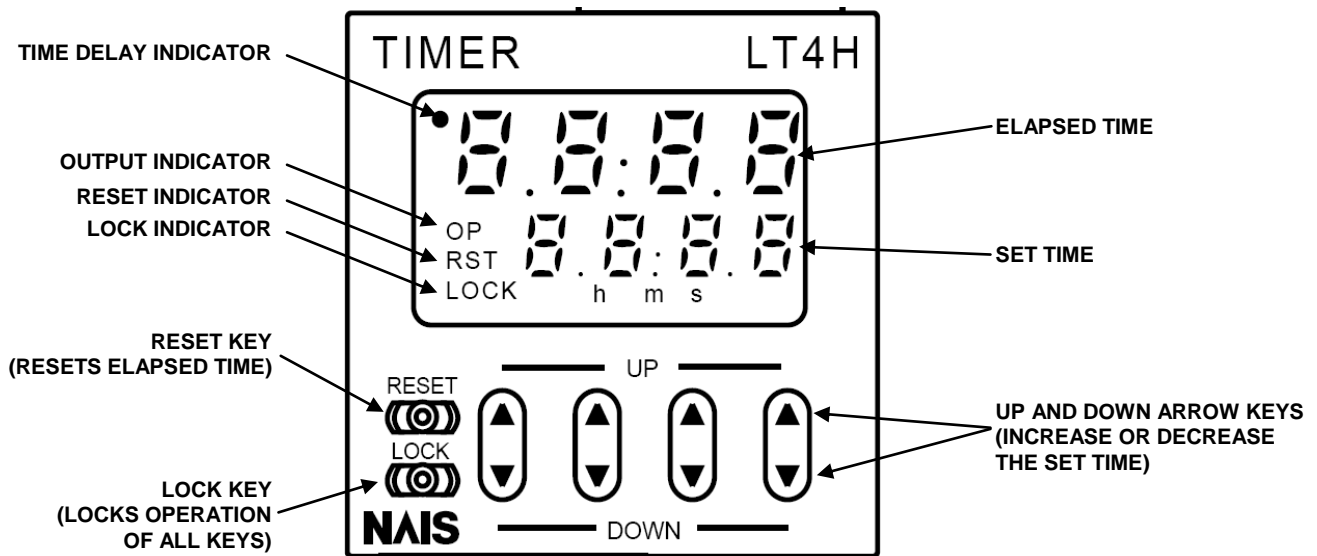

A. BASIC OPERATION

1. To reset timer, turn timer selector switch (installed on oven control panel) to “**RESET**” position or press reset on timer face. Operation indicated by **RST** indicator on timer display. Upper display will reset to set time.
2. To set time, press the up or down arrow below the desired digit on the lower display. Up will increase the time setting, down will decrease the time setting.
3. To start timer, turn timer selector switch to “**START**” position. Operation indicated by time delay indicator on timer face. Upper display will begin counting down from set time. Default time setting is from 0h01m to 99h59m.
4. When upper display reaches 0, output is energized. Operation indicated by **OP** indicator on timer face.
5. To lock all buttons on timer, press lock key on timer face. Operation indicated by **LOCK** indicator on timer face. Press lock key again to unlock.