

2104

Chromalox[®]

Temperature Controller



Issue Date
May 1996

Technical Manual
0037-75276

Table of Contents ---

Sections

<u>Section</u>	<u>Topic</u>	<u>Page</u>
1	Getting Started	1
2	Installation	3
3	Operation	21
4	Controller Setup Pages	33
5	Ramp/Soak Operation	41
6	Alarms	47
7	Digital Input and AUX Function	59
8	Remote Setpoint & Analog Process Output	67
9	Digital Communications	71
10	Calibration	75
11	Specifications	83
12	Troubleshooting	87
13	Warranty and Return	89

Appendices

I	Setup Pages	91
---	-------------------	----

Menu Index

Index	103
-------------	-----

Illustrations

<u>Figure</u>	<u>Topic</u>	<u>Page</u>
1.1	Application	1
1.2	Model Identification.....	2
2.1	Sensor Selection Dip Switch Settings	3
2.2	Mounting Dimensions	5
2.3	Mounting Diagram	5
2.4	Wiring Terminal Identification	7
2.5	Thermocouple Connections.....	8
2.6	3-Wire RTD Connections	9
2.7	2-Wire Connections	9
2.8	Current Input Wiring (Self-powered)	9
2.9	Voltage Input Wiring.....	10
2.10	Current Input Wiring (Loop-power)	10
2.11	Event Input Connections External Switch.....	10
2.12	Momentary Contact Pushbutton for Ramp/Soak ..	10
2.13	Relay Output Connections	11
2.14	SSR Drive Output Jumper Positions	12
2.15	Solid State Relay Drive Output Connections	13
2.16	Current/Voltage Output Jumper Positions	14
2.17	Triac Output Connections	15
2.18	4-20mA Analog Output Connections	15
2.19	1-5 Vdc Output Connections	15
2.20	Dual Relay Output Wiring	16
2.21	Dual Triac Output Wiring	16
2.22	Dual Analog Output Wiring	16
2.23	Dual SSR Drive Output Wiring	16
2.24	Dual 1-5 Vdc Output Wiring	17


Illustrations

Figure	Topic	Page
2.25	Dual Output SSR/Relay Wiring	17
2.26	Dual Output SSR/Triac Wiring	17
2.27	Dual Output Analog/Relay Wiring	18
2.28	Dual Output Analog/Triac Wiring	18
2.29	100-240 Vac Instrument Power Connections	19
2.30	12-24 Vac/Vdc Instrument Power Connections ...	19
2.31	Alarm/Event Outputs #3 and #4	19
2.32	Alarm/Event Output #5	20
3.1	Front Panel Identification	22
3.2	PAGE/MENU Setup Structure	23
3.3	Sample of PAGE/MENU Table	25
3.4	Security Levels and PAGE/MENU Contents	26
3.5	Security Codes and View/Adjust Levels	27
5.1	Ramp/Soak Profile	41
5.2	Event Outputs in Ramp/Soak Profile	41
5.3	Looping Intervals	42
5.4	Guaranteed Soak	42
6.1	CLP Alarm Connections	55
8.1	Remote Setpoint Input Signal	67
8.2	2-Wire 4-20mA Transmitter (Loop-powered)	68
8.3	2-Wire 4-20mA, 1-5 Vdc Transmitter (Self-powered) ...	68
8.4	3-Wire 4-20mA, 1-5 Vdc Transmitter	68
8.5	Analog Process Output Signal	69
8.6	Process Output Wiring	70
9.1	RS422/RS485 Communications Switches	72
9.2	RS232 Wiring Connections	72
9.3	RS422A Wiring Connections (4-wire)	73
9.4	RS485 Wiring Connections (2-wire)	73

Section 1 Getting Started

The Chromalox 2104 1/4 DIN temperature and process controller is a low-cost, high-performance, single-loop controller that can be used for temperature, flow, pressure and level control applications. With universal sensor inputs and front panel operator setup, one 2104 controller can be easily field configured for a wide variety of applications, and simply reconfigured as application needs change. This makes it an exceptional choice for OEMs with multiple control needs, manufacturing facilities, testing facilities and testing applications.

Figure 1.1
Typical Application

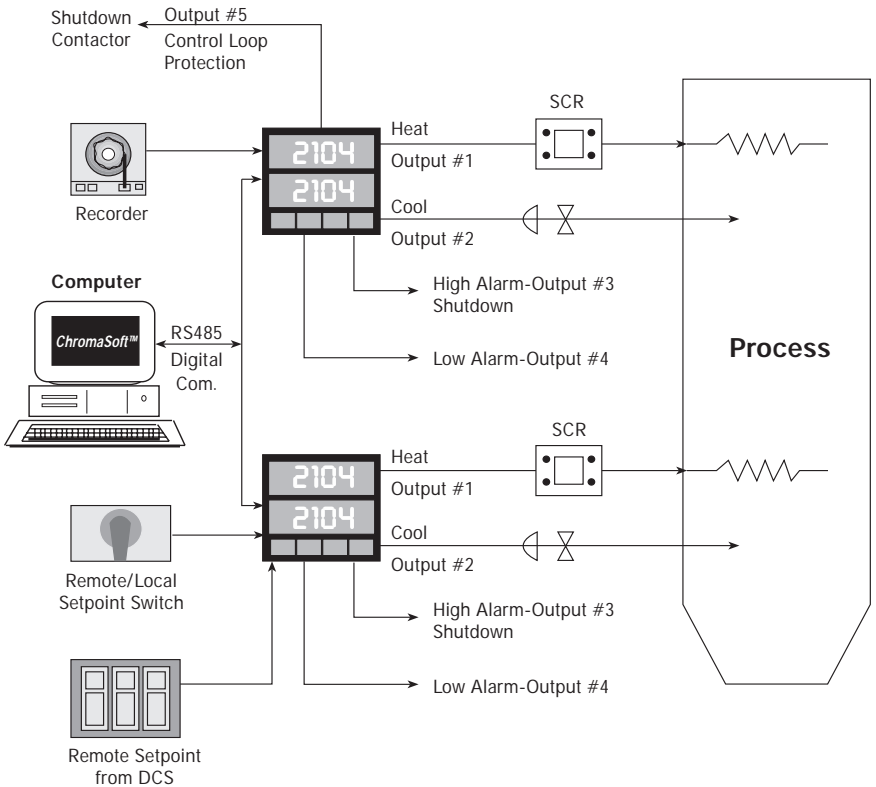

Model Identification

Before installation, please identify your controller model number. The model number is written on the tag on the side of the housing.

Figure 1.2 Model Identification

Model	Temperature Controller
2104	Microprocessor-based 1/4 DIN Temperature Controller. Universal Sensor Input accepts Thermocouple, RTD, Current or Voltage Inputs. PID, ON/OFF with Fuzzy Logic Control Capability. One Digital Input and Analog Remote Set Point.
Code	Outputs #1—Single Output Control
RO	Output #1 Single Output Control Relay/SSR Drive (jumper selectable) Relay—N.O. Form A Contact, 1A at 120 or 230 Vac SSR Drive—24Vdc at 40mA
TO	Triac—1 Amp at 120 or 230 Vac
AO	Analog—4-20mA or 1-5 Vdc, non-isolated
	Outputs #1 & #2 - Heat/Cool Control
RR	Relay/Relay
TT	Triac/Triac
AA	Analog/Analog
SS	SSR Drive/SSR Drive
AR	Analog/Relay
AT	Analog/Triac
SR	SSR Drive/Relay
ST	SSR Drive/Triac
	Code
0	None
1	Dual Relay—Two (2) Form A contacts, 1A at 120 or 230 Vac with shared common terminal
	Code
	Isolated Digital Communications, Output #5 (Alarm/Event Output), and Analog Output Option
0	None
1	RS-422/485 Digital Communications and Output #5
2	RS-232 Digital Communications and Output #5
3	Analog Output Option
4	RS-422/485 Digital Communications, Output #5 and Analog Output Option
5	RS-232 Digital Communications, Output #5 and Analog Output Option
	Code
	Power Supply
0	100 - 240 Vac or Vdc
1	12-24 Vdc or Vac
2104-	RO
	1
	1
	0
	Typical Model Number

**Inspection
and
Unpacking**

On receipt of your 2104 controller, immediately make note of any visible damage to the shipment packaging and record this damage on the shipping documents. Unpack the controller and carefully inspect it for obvious damage due to shipment. If any damage has occurred, YOU must file a claim with the transporter, as they will not accept a claim from the shipper.


If the controller will not be immediately installed and placed into operation, it should be stored in a cool, dry environment in its original protective packaging until time for installation and operation. Temperature extremes and excessive moisture can damage the instrument.

**Switch
Settings**

The 2104 has up to seven (7) hardware switches located on the bottom of the controller. The switches are accessible through cutouts in the controller housing and do not require that you remove the controller from its housing to access the switches.

Figure 2.1 identifies the switches. Instructions for switch settings are given in the corresponding sections of the manual.

Figure 2.1
Sensor Selection
Dip Switch
Settings

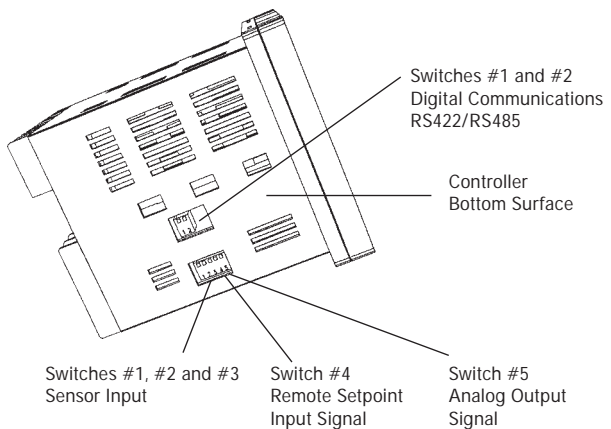

Sensor Selection Switches

Sensor selection requires that you:

1. Set the sensor switches for the correct sensor type.
2. Program the input sensor type in sensor selection setup on the μ PC Page (see page 36).

It is much easier to set the sensor input switches before you mount and wire the controller.

To set the sensor switches:

1. Locate the sensor switches—#1, #2 and #3—on the bottom of the controller, as shown in Figure 2.1 on the previous page.
2. Place the switches in the appropriate Up or Down position for your input type:


Input Type	Switch #		
	1	2	3
T/C	Up	Up	Up
RTD	Down	Up	Up
4-20mA	Up	Down	Down
1-5 Vdc	Up	Up	Down

Mounting

Figure 2.2, on the following page, shows the mounting dimensions for the controller:


1. Cut out the square “panel cutout” mounting hole and install the unit as shown in Figure 2.3.
2. Place the controller through the square panel cutout and replace the mounting clip.
3. Tighten the mounting clip screw (do not over-tighten) to secure the controller firmly against the mounting surface.

Figure 2.2 Mounting Dimensions

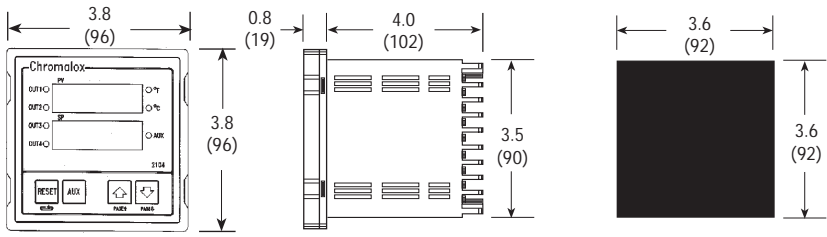

Measurements are shown in inches. Millimeters are shown in parentheses.

Figure 2.3 Mounting Diagram

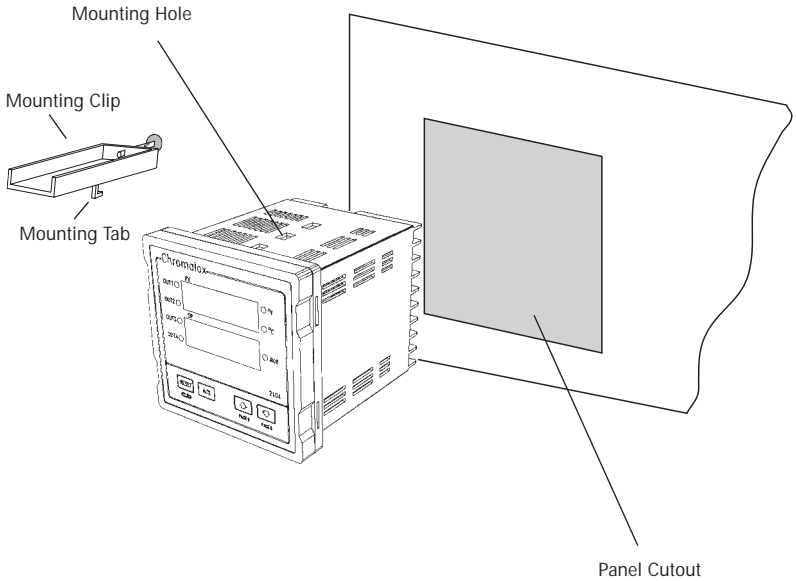

Wiring Instructions

Good Wiring Practices


1. When planning the system wiring, separate wiring into functionally similar bundles - i.e., power leads, sensor leads, output signal lines, etc. If the power leads and sensor leads must cross, they should cross at a 90° angle to each other (perpendicular).
2. Locate all sources of electrical noise in your system, and separate these sources from the control systems—motors, contacts, solenoids, etc. Electrical noise can affect the function of any control system. When driving a contactor coil or other inductive load, an appropriately rated AC snubber circuit is recommended (Chromalox Part. No. 0149-01305), as described on page 11, “Relay Output Wiring.”
3. For sensor wiring practices, see Sensor Wiring Notes, next page.
4. Additional information on good wiring practices is available from IEEE, 345 East 47th St., NY, NY 10017. Request IEEE Standard No. 518-1982.

Make all electrical wiring connections to the back of the controller before power is applied to the unit.

All wiring must comply with local codes, regulations and ordinances. This instrument is intended for panel mounting and the terminals must be enclosed within a panel. Use National Electric Code (NEC) Class 1 wiring for all terminals except the sensor terminals.

Check the wiring decal on the side of the unit to verify the model number. The wiring decal shows the wiring terminations. All wires will be connected to the terminals on the back of the instrument case. Specific wiring instructions for different input and output types are given in this section.

Figure 2.4 Wiring Terminal Identification

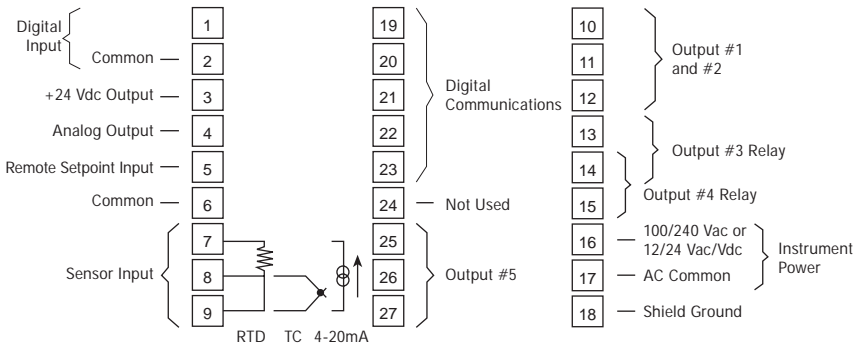

Sensor Input Wiring

Sensor Input Wiring Notes:

- Sensor leads (thermocouple and RTD) should not be run together in the same conduit as power wiring.
- Twisted pair, shielded wire is recommended for sensor connections.
- False process readings can occur if the sensor wire is exposed to electrical noise.
- Ungrounded thermocouples are recommended.
- If thermocouple extension wire is required, it must be the same type as the thermocouple (i.e., if a Type K thermocouple is used, then Type K extension wire must be used).
- Thermocouple wires should connect directly to the controller terminals. Do not use copper crimp terminals or solder terminals to make connections.
- If shielded thermocouple wire is used, the shield must be grounded at one end only, preferably at the shield ground terminal on the controller, as shown in Figure 2.5.
- Three wire RTDs are recommended for greatest accuracy.
- Standard shielded copper wire is recommended for RTD extensions.


Thermocouple Inputs

It is important to observe polarity (+, -) when connecting thermocouple leadwires. The table below shows ANSI color coding for the thermocouples used with this instrument.

T/C Type	Material	Polarity (+)	Polarity (-)
B	Plat, 30% Rhodium/ Plat, 6% Rhodium	Gray	Red
J	Iron/Constantan	White	Red
K	Chromel/Alumel	Yellow	Red
E	Chromel/Constantan	Purple	Red
T	Copper/Constantan	Blue	Red
R	Plat, 13% Rhodium/Plat	Black	Red
S	Plat, 10% Rhodium/Plat	Black	Red

Make the thermocouple wiring connections to terminals as shown in Figure 2.5.


Figure 2.5
Thermocouple
Connections

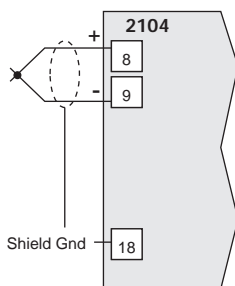

3-Wire RTD Inputs

When making the 3-wire RTD input connection, it is important to make the resistance of all three extension leadwires equal by using the same gauge and same length of wire for optimum leadwire compensation. Chromalox recommends 3-wire RTDs for greatest accuracy, and standard shielded copper wire for RTD extensions. Make 3-wire RTD connections to terminals 7, 8 and 9 as shown in Figure 2.6 on the following page.


Figure 2.6
3-Wire RTD
Connections

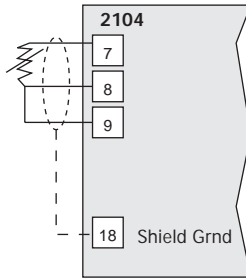

2-Wire RTD Inputs

If using a 2-wire RTD input, use heavier gauge leadwires to reduce leadwire resistance. Any leadwire resistance adds directly to sensor resistance, thus adding error to the process temperature measurement. It is also necessary to jumper terminals 8 and 9 on the instrument to complete a 2-wire hookup.

Figure 2.7
2-Wire
Connections

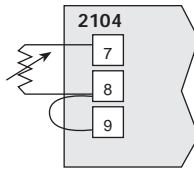

Current/Voltage Inputs

Figure 2.8
Current
Input Wiring
(Self-powered)



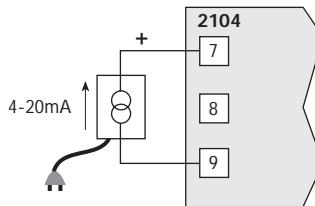


Figure 2.9
Voltage
Input Wiring
(Self-powered)

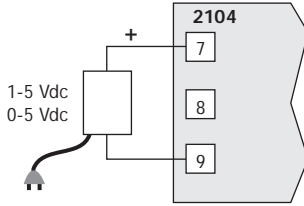

The 2104 has a +24 Vdc power supply which can be used to power a 4-20mA transmitter.

Figure 2.10
Current
Input Wiring
(Loop-powered
by controller)

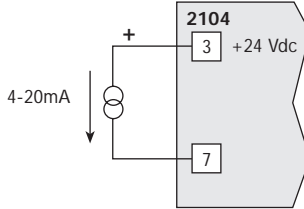

Digital Input Connections

The digital input can be used in a number of ways:

- to control ramp/soak operations
- to switch between two setpoints, PID parameters, or Auto/Manual control
- to reset an alarm
- to disable the control output.

Setup for the digital input is shown on the $\square E T$ setup page. An external switch, pushbutton or dry contact can be connected to this input. Use isolated switches only. Do not tie the Digital Input terminals to ground.

Figure 2.11
Digital Input
Connections
External Switch


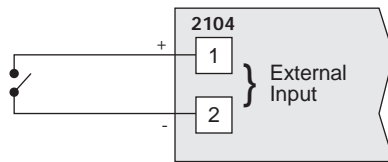


Figure 2.12
Momentary
Contact
Pushbutton for
Ramp/Soak

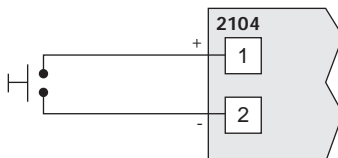

Output Wiring

The 2104 is supplied with either:

- 1 Control Output for Single Output Control (#1)
- 2 Control Outputs for Heat/Cool Control (#1 and #2)

The output wiring varies depending on the control type and applications. The wiring instructions are presented separately for each of these two controller types/applications.



Warning


Incorrect output wiring may cause system/process damage.

Single Output Control Wiring

Relay Output

Output Code “RO” on the 2104 (2104 - RO***) gives you the option of SSR Drive or Relay control for output #1. When shipped from the factory, the relay output is active.



Figure 2.13
Relay Output Connections

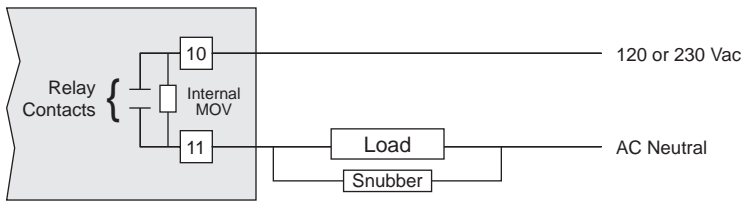

SSR Drive Output

For SSR drive output applications, you must move an internal jumper on the Output #1 module to select SSR drive output. Remove the controller from its housing, and locate the output module as shown in Figure 2.14 on the following page. Reposition the jumper to select SSR Drive output.

Figure 2.14
SSR Drive Output
Jumper Position

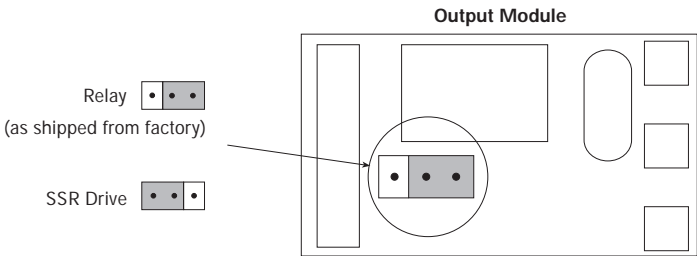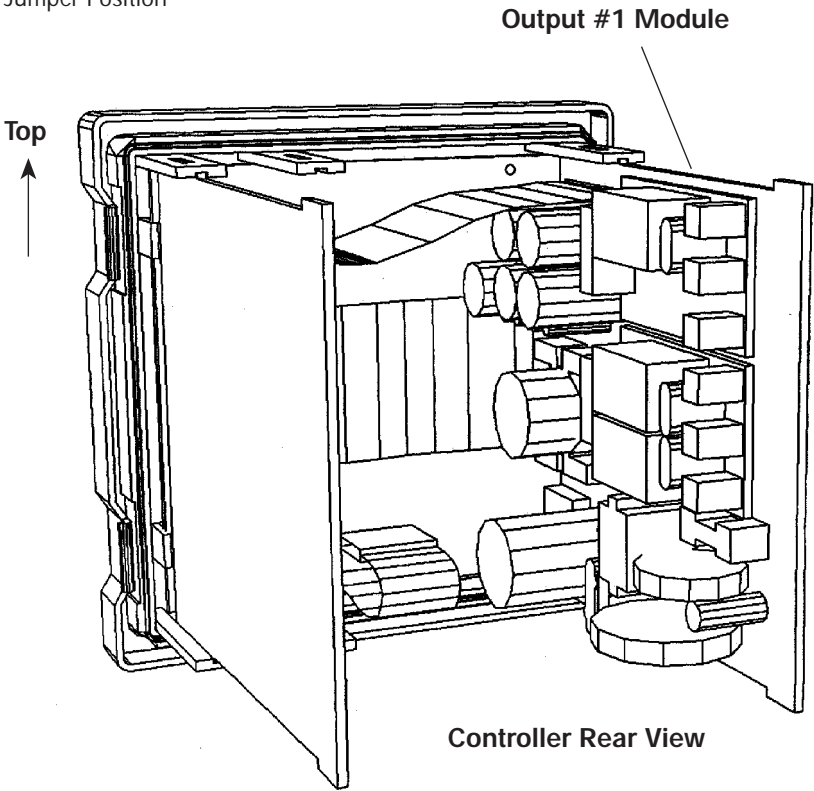


Solid State Relay Drive Connections

The solid state relay drive output drives solid-state relays, such as the Chromalox 4115 or 4117 power modules, which accept 3 to 32 Vdc input ON signals and 0 Vdc OFF signals. See Figure 2.15 for solid state relay drive output connections.

Note: Negative lead connects to Terminal #2.



Figure 2.15
Solid State Relay Drive Output Connections

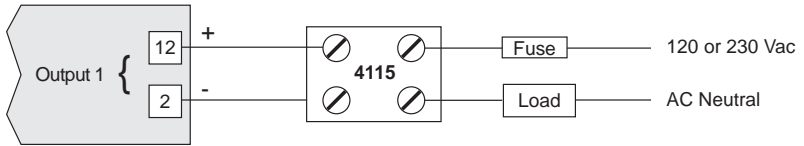

Current/Voltage Output

Controllers with output codes "AO," "AA," "AR" and "AT" give you the option of 4-20mA or 1-5 Vdc output. When shipped from the factory, these control outputs are configured for 4-20mA output. For 1-5 Vdc output, you must access the internal output board and move the jumper(s) to the 1-5 Vdc position, as shown in Figure 2.16 on the following page.

Figure 2.16
 Current/Voltage
 Output Jumper Positions

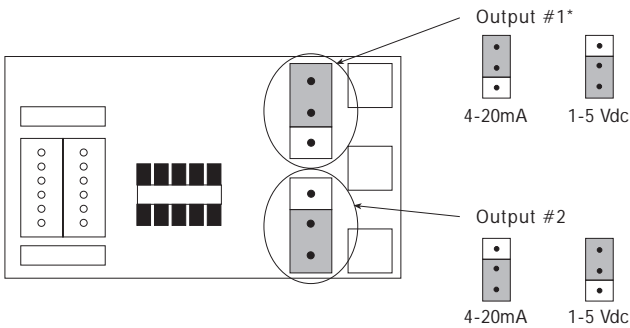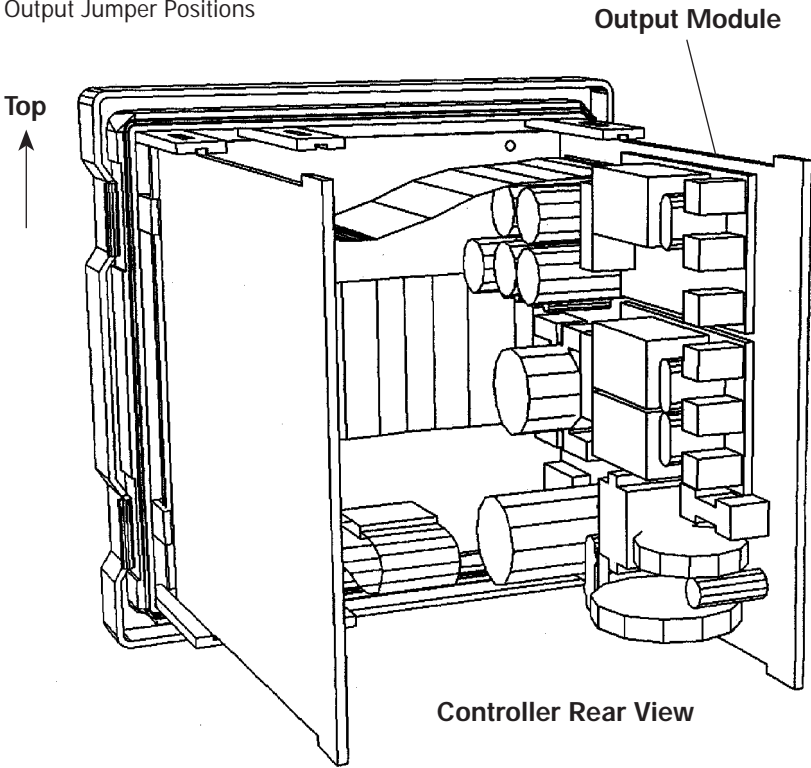

*All controllers with Analog Output (output codes AR, AT) for output #1 use same 4-20mA/1-5 Vdc jumper positions as shown here.

Figure 2.17
 Triac Output Connections

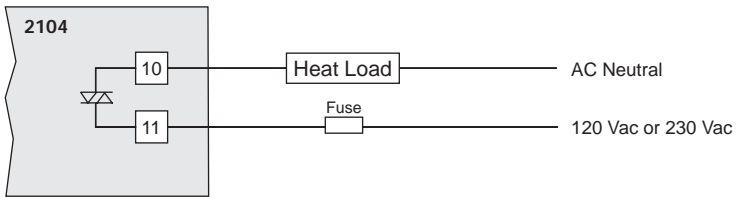


Figure 2.18
 4-20mA Analog Output Connections


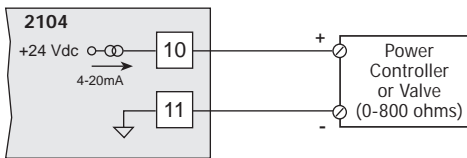


Figure 2.19
 1-5 Vdc Output Connections

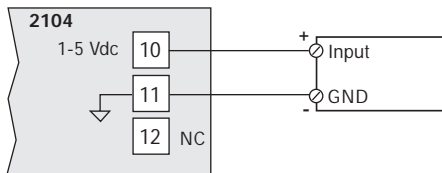

Heat/Cool Control Output Wiring

Figure 2.20
Dual Relay Output Wiring

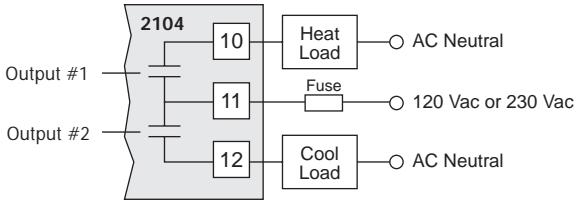


Figure 2.21
Dual Triac Output Wiring

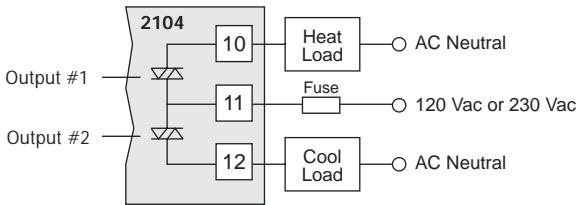


Figure 2.22
Dual Analog Output Wiring



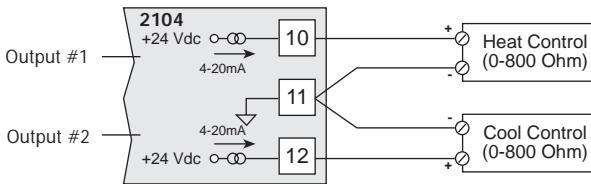


Figure 2.23
Dual SSR Drive Output Wiring

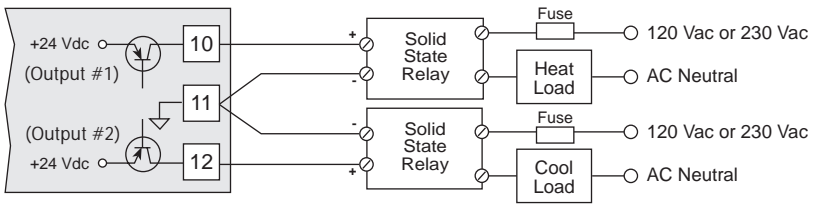

Heat/Cool Control Output Wiring (continued)

Figure 2.24
Dual 1-5 Vdc Output Wiring*

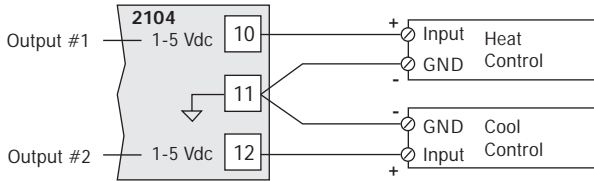

*Note: See page 14 for Analog/Voltage jumper positions.

Figure 2.25
Dual Output SSR/Relay Wiring


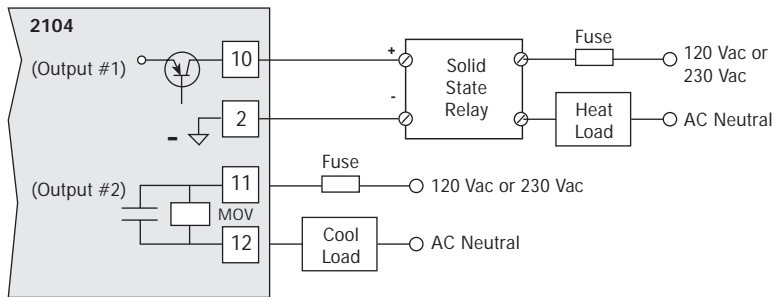


Figure 2.26
Dual Output SSR/Triac Wiring

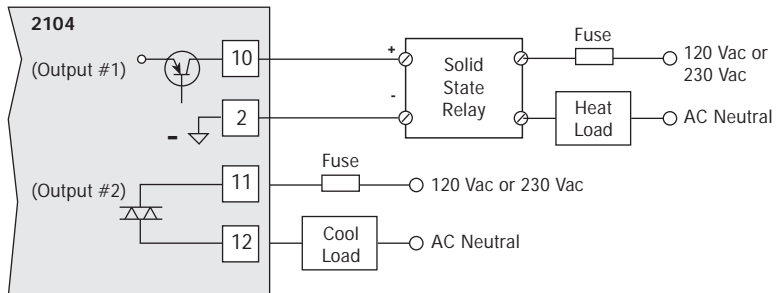

Heat/Cool Control Output Wiring (continued)

Figure 2.27
Dual Output Analog/Relay Wiring


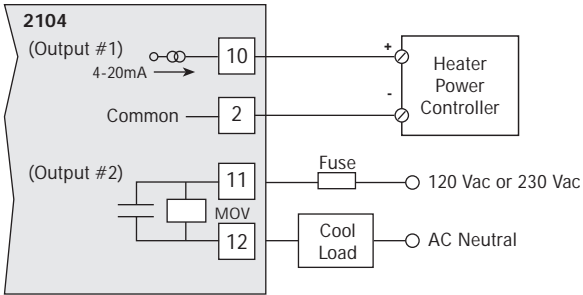


Figure 2.28
Dual Output Analog/Triac Wiring

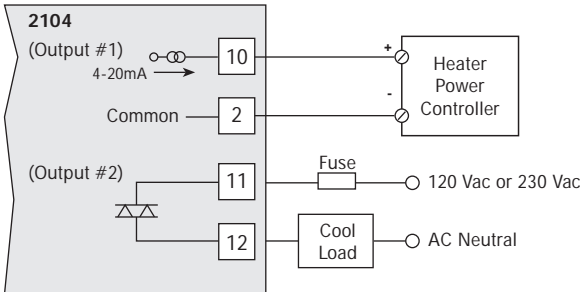

Instrument Power Wiring

Make 120 Vac or 230 Vac instrument power connections to terminals 16-18 as shown in Figure 2.29.

Figure 2.29
100-240 Vac
Instrument
Power
Connections
(2104-****0)


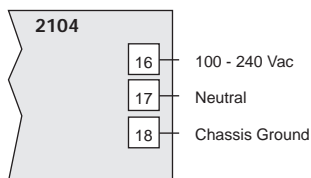



Figure 2.30
12-24 Vac/Vdc
Instrument
Power
Connections
(2104-****1)

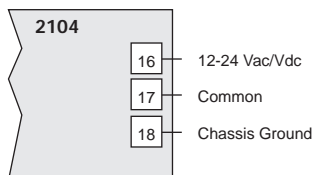

Alarm/Events Outputs #3 & #4

The two independent alarm (Output #3 or #4) relay outputs are connected as shown in Figure 2.31.


Figure 2.31
Alarm/Event Outputs #3 and #4

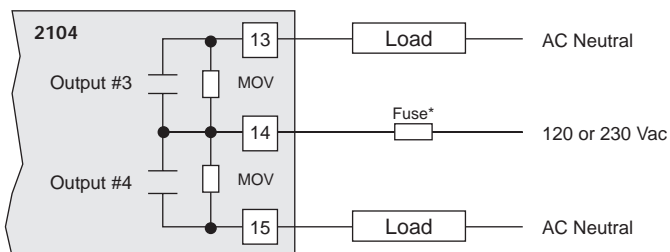

* Fuse should be sized for the combined current of Output #3 and #4.

Alarm/Event Output #5 The Form C Relay Output is connected as shown in Figure 2.32.

Figure 2.32
Alarm/Event
Output #5

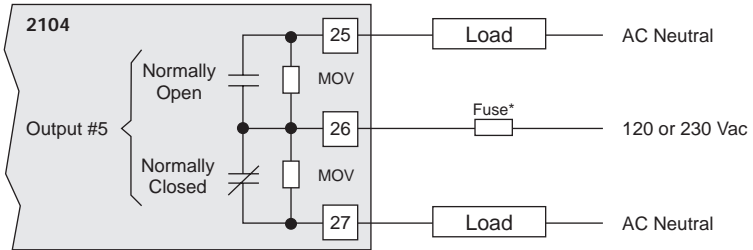

* Fuse should be sized for the current of Output #5.

**Section
Contents**

Pushbuttons and Indications

Security Codes and Levels

Controller Operation


**Pushbuttons
and
Indications**

Control programming is easily accomplished with the front panel pushbuttons. The displays provide a constant overview of the process. Figure 3.1, on the next page, summarizes the functions of the pushbuttons and displays.

Normal Display Mode


At powerup, and when the controller is not being programmed, the upper display shows the Process Value and the lower display shows the setpoint.

The setpoint can be changed in the Normal Display Mode using the ▲ and ▼ pushbuttons, if the Security Level allows setpoint changes (see page 26 for Security Levels).

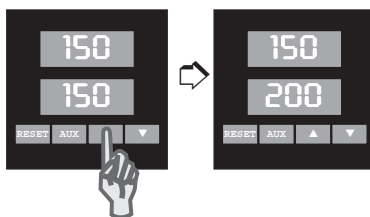

Use ▲ and ▼ to change setpoint in Normal Display Mode.

Figure 3.1
Front Panel
Identification

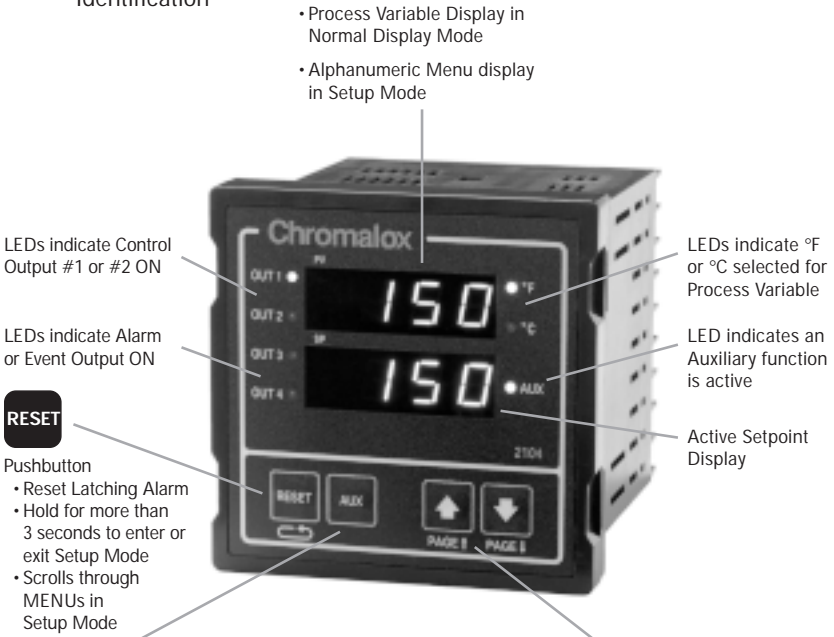

- In Normal Display Mode, pushbuttons adjust Setpoint.
- In Setup Mode, pushbuttons increase/decrease MENU values.
- Ramp to Setpoint, press once to determine target setpoint.
- For Ramp/Soak Operation:




PAGE/MENU Setup

All control parameters, selections and calibration procedures for the 2104 are accomplished through simple MENU selections. These MENU selections are organized into PAGES. On each PAGE you will find a specific set of related functions.

This organization allows you to go directly to the parameter to be adjusted, without stepping through a long series of unrelated entries. Figure 3.2 illustrates the 2104 PAGE/MENU setup structure. Only pages that apply to your unit will be displayed (i.e. if you do not have Digital Communications option, this page will not appear).


Figure 3.2
PAGE/MENU Setup Structure

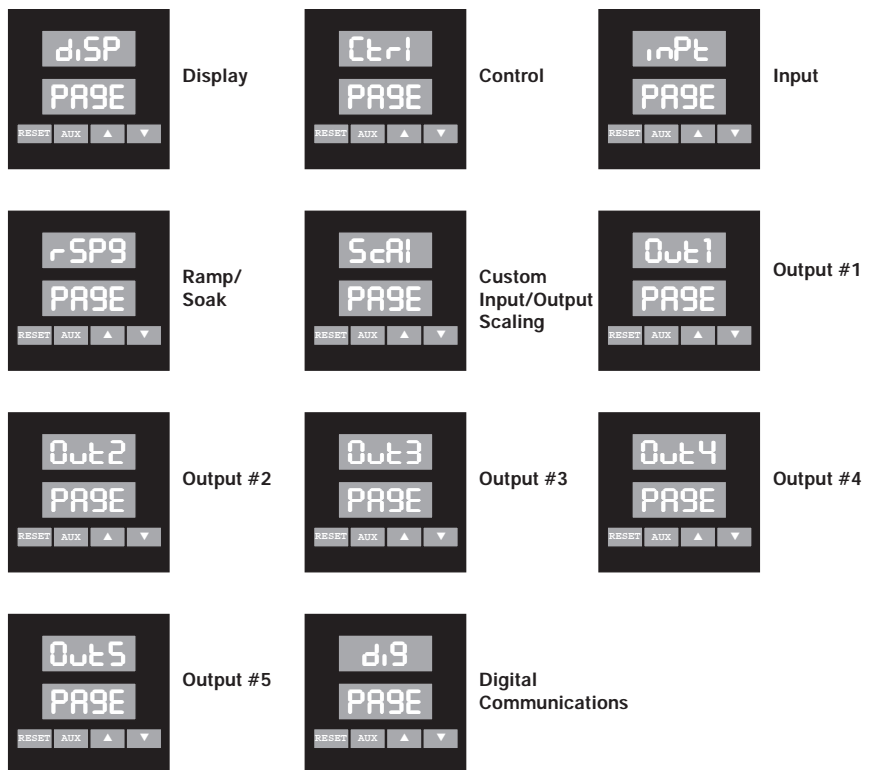

Accessing a MENU is accomplished by entering the Setup Mode, then selecting a PAGE and MENU.


To enter Setup Mode:

Hold down the RESET pushbutton for longer than 3 seconds.

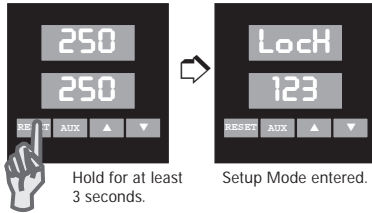


To select a PAGE:

Press and hold the Reset pushbutton, while pressing the ▲ or ▼ Pushbutton. The upper display will increment (or decrement) through the PAGES, and PAGE will be displayed in the lower display.

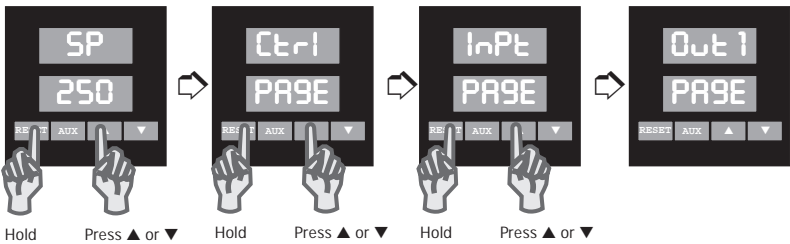


To select a MENU:

After reaching the correct PAGE, press RESET to move through the MENUS. The alpha cue for the MENU will appear on the upper display, and the current value will appear in the lower display.

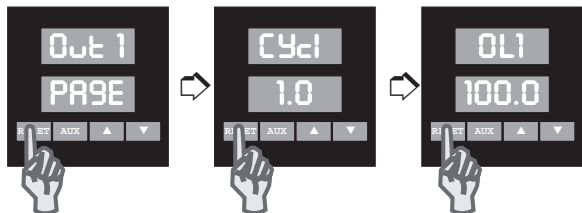

To change a MENU value:

After the MENU is selected and displayed, use the ▲ and ▼ pushbuttons to change the value. For large adjustments (for example, 100 to 200), hold the pushbutton pressed and the display will change more quickly.

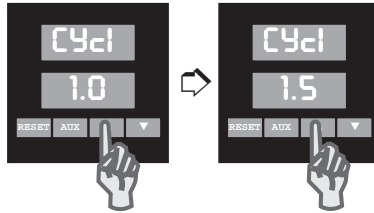

To return to Operating Mode:

Press and hold RESET for more than 3 seconds. The controller will automatically return to operating mode after 10 minutes of no pushbutton activity.

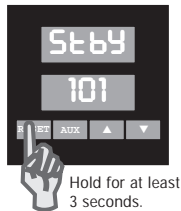


Figure 3.3
Sample of
PAGE/MENU
Table

Control Page			
MENU	Description	Available Settings	Security
Loch	Security Lock 26	0 to 9999	A
SP	Setpoint	Instrument sensor span	B
AuSP	Auxiliary SP	Auxiliary setpoint is accessible only if AUX pushbutton or Event Input is setup for Auxiliary Setpoint. Instrument Sensor Span	C
tune	Self Tune 29	Self-Tune automatically adjusts PID parameters on powerup (P-rUP) or on demand (BE9n).	
		OFF = Self-tuning disabled P-rUP = Power-up tuning BE9n = Begin tuning	

Security Levels

Every parameter or selection in the 2104 controller's setup PAGES has an identifying MENU. Each MENU is assigned one of four Security Levels, A-D. In each level you may view certain MENUs, and *adjust* certain MENUs. This allows you to set the Security level that is appropriate for your operating environment, prohibiting unauthorized access to or accidental changing of control parameters.

Figure 3.4
Security Levels and PAGE/MENU Contents

Level	Code	Description
A	---	Display Page and Security Lock
B	123	Setpoint and Auxiliary Setpoint
C	458	Settings for: Control Input Ramp/Soak Digital Communications
D	736	Calibration Security Codes


Entering the Security Code

The Security Code is entered on the Control PAGE **Ctrl**, at the MENU **Lock**. This code determines which MENUs may be viewed and adjusted.

The controller is set at Security Level A (view only, no adjustments) when you receive it from Chromalox.

To access and enter the Security Code:

1. Press and hold RESET for more than 3 seconds to enter Setup Mode. Security Lock is the first menu that will appear.

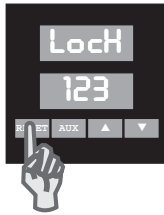

Security Codes

Figure 3.5 lists the Security Codes for each of the four Security Levels, along with the levels that may be viewed and adjusted.

Figure 3.5
Security Codes &
View/Adjust
Levels

<u>Security Level</u>	<u>Security Code</u>	<u>View Level</u>	<u>Adjust Level</u>
A	- - -	A	A
B	123	A, B	A, B
C	458	A, B, C	A, B, C
D	736	A, B, C, D	A, B, C, D

If a number other than one of the three codes listed above is entered at Loch on the **Ctrl PAGE**, adjustment of all parameters is locked out. An additional security number can be added using the menu for User Selectable Security Code (**Ctrl PAGE**, menu **Code**).


Control Operation

The 2104 Controller is capable of single output and heat/cool PID control. The selection for single or heat/cool control is made in the Controller Type menu (Ctrl PAGE, Cont) with PID settings also in the Control Page. Additionally, the 2104 features ramp to setpoint and ramp/soak capabilities.



Control Algorithms

PID is the standard control algorithm of the 2104. ON/OFF control action is selected by setting the proportional band (Ctrl PAGE, Pbl or Pbz) to zero. Two sets of PID and ON/OFF control parameters are located in the Control Page for increased flexibility. Additionally, a Fuzzy Logic algorithm can be used to help prevent overshoot at power-up or during upsets.

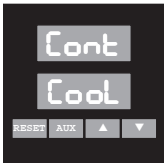


Standard Single Output Control

In standard single output control (Ctrl PAGE, Cont = HEAT or Cool) the Sensor Input is used to measure the process variable and Output #1 is used to control the process. PID1 parameters (Ctrl PAGE, Pbl, R-1, rAe1) are used to determine the response of the control loop.



Heat/Cool Control

In heat/cool control (Ctrl PAGE, Cont = HECL) Outputs #1 and #2 are used to control the process. Output #1 acts as the Heat output and Output #2 acts as the Cool output. PID1 parameters (Ctrl PAGE, Pbl, R-1, rAe1) are used to determine the response of the Heat output and PID2 parameters (Ctrl PAGE, Pbz, R-2, rAe2) are used for the cool output.

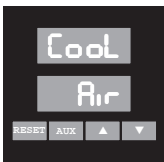

One way to automatically set the PID2 parameters is via the cooling medium parameters. These are setup at menu Cool on the Ctrl PAGE.

Cooling Medium parameters automatically establish the optimum PID2 cooling parameters, based on the cooling medium used/selected. If air, oil or water cooling medium is selected, and PID1 parameters change (during self-tune OR Manually), PID2 parameters will also be adjusted. If "Pid2" is selected (PAGE Ctrl, Cool = Pid2, no cooling medium specified), the PID2 parameters will change only if changed in Menus Pbz, R-2 and rAe2.

Control Operation (continued)



Self-Tuning

The 2104 tuning algorithm establishes PID constants ($Pb1$, $Rr1$, $rAt1$) that will bring the process to setpoint as quickly as possible with little overshoot. Tuning can be performed at powerup (Ctrl PA9E, $tunE = PrUp$) or can be initiated immediately (Ctrl PA9E, $tunE = BEgn$). When tuning, the 2104 will flash “tunE” in the lower display.

If the process variable is not at least 50°F (28°C) away from setpoint, the 2104 will turn off the control output until the process temperature is 50°F from setpoint. If the 50°F temperature difference is not reached within 30 minutes, “tErr” will be displayed, indicating that tuning was not successful (tuning error). Press RESET to clear “tErr”. After successfully tuning, tuning is turned OFF in the tuning menu (tunE).

Heat/Cool Self-Tuning

For heat/cool control applications, when the cooling medium is specified (PA9E Ctrl, $CoOL = Rr, H2O, Oil$), both heat (PID1) and cool (PID2) parameters are computed during a heat tune (tuning is invoked while the process temperature is at least 50°F below setpoint). If no cooling medium is specified (PA9E Ctrl, $CoOL = PID2$) the PID2 parameters ($Pb2$, $Rr2$, $rAt2$) will not change during a self-tune.

A cool tune (tuning is invoked while the process temperature is at least 50°F above setpoint) will compute PID parameters for cooling only. One way to initiate a cool tune is to first heat tune, then lower the setpoint by 50°F (28°C) and initiate self-tuning for cooling (Ctrl PA9E, $tunE = BEgn$). A cool tune will change PID2 settings if Heat/Cool control is selected for the control type (Ctrl PA9E, $CoOL HtCl$).

Control Operation (continued)



Fuzzy Logic Overshoot Protection

Fuzzy Logic Overshoot Protection (CTRL PAGE, FL) works to minimize the overshoot that accompanies standard PID control. The 2104 actively learns the characteristics of the load and adjusts the PID control algorithm to reduce overshoot. Overshoot Protection, when combined with PID constants established by the 2104 tuning algorithm, produces a response that brings the process to setpoint with a minimum of overshoot. Fuzzy Logic overshoot protection is not possible with ON/OFF type control. It is recommended that Fuzzy Logic is always enabled.



Ramp to Setpoint

(CTRL PAGE, RRt = 1 to 9999 degrees/hour or OFF)

The Ramp to Setpoint feature allows the control setpoint to be ramped to the final value at powerup or during operation when the setpoint is adjusted. At powerup, the setpoint is ramped from the current measured process temperature to the control setpoint. During operation, the setpoint is ramped from the current value to the new value. When enabled, Ramp to Setpoint will begin in any of the following situations:

- Powerup
- Change of setpoint from front panel
- Change of setpoint from digital communications
- Digital Input or Aux Key used to change between the local and auxiliary setpoints
- Digital Input or Aux Key used to change between the local and remote setpoints
- Remote Setpoint is active and the remote device changes the setpoint faster than the programmed ramp rate

Control Operation (continued)



Manual Operation

Manual operation allows the controller output command to be controlled from the front panel Keyboard. On initial powerup, the controller enters Automatic control mode (closed loop). When Manual Mode is entered, the output command appears in the lower display. The output command can be adjusted using the up and down arrow keys. The manual mode can be entered by using the Aux Key or the Digital Input (ENTER, **PAUSE**, **Ent1** or **Auto**). Manual Operation is not possible when ramp/soak is enabled. In the heat/cool control mode, only the currently active control output can be adjusted.

The transfer between Automatic and Manual operation is bumpless and balanceless. When switching from automatic to manual control, the controller assumes the last output command from automatic mode. When returning to automatic control, the output is forced to be the last manual mode output command.

If automatic reset is enabled (ENTER **PAUSE**, $R_r = \text{non-zero value}$) the integral value slowly changes the output value until it reaches the correct automatic (PID) output value. If automatic reset is not enabled, the output is ramped from the last manual output command to the current automatic output command at a rate determined by the disintegration time menu (ENTER **PAUSE**, **Auto**).

Section 4 Controller Setup PAGES

Section Contents

This section contains detailed information for the following controller setup pages:

diSP: Display
Ctrl: Control
INPt: Input
ScAL: Custom Scaling
Out1: Output #1
Out2: Output #2

Setup PAGES specific to certain functions are located in the section of this manual that addresses that function specifically.

Section	Page	Topic	Setup PAGE
5	41	Ramp/Soak	rSPG
6	47	Alarms and Events	Out3, Out4, Out5
8	67	Remote Setpoint Input and Analog Output Option	Ctrl, INPt, ScAL
9	71	Digital Communications	diS

More
Info.

Throughout the following Setup PAGES you will find these symbols **40**. This indicates a section of this User's Manual where more specific information on a parameter/application/feature can be found.



The Display Page is for status only.
None of the settings can be changed.

Display Page

<u>MENU</u>	<u>Description</u>	<u>Displays</u>	<u>Security</u>
Proc	Process Variable	Sensor Span	A
ASP	Active Setpoint	Sensor Span	
Out1	Output #1 Command	0.0 to 100.0%	
Out2	Output #2 Command	0.0 to 100.0%	
rSP	Remote Setpoint Input	Sensor Span	
rS	Ramp/Soak Status	OFF = Program not running run = Program running Hold = Program in hold Stby = Program in standby 95 = Guaranteed soak	
int	Ramp/Soak Interval Number	0 - 16	
LEft	Ramp/Soak Time Left in Interval	0.0 to 999.9 hr/min/sec	
Loop	Ramp/Soak Loops Remaining	0 - 9999	
Al r	Alarm Output Status	None = No alarms A3 = Alarm Output #3 A4 = Alarm Output #4 A43 = Alarm Outputs #4 and #3 A5 = Alarm Output #5 A53 = Alarm Outputs #5 and #3 A54 = Alarm Outputs #5 and #4 A543 = Alarms 5, 4 and 3	
Ent	Event Output Status	None = All off E3 = Event Output #3 E4 = Event Output #4 E43 = Event Outputs #4 and #3 E5 = Event Output #5 E53 = Event Outputs #5 and #3 E54 = Event Outputs #5 and #4 E543 = Events 5, 4 and 3	



Control Page

MENU	Description		Available Settings	Security
LoCh	Security Lock	26	0 to 9999	A
SP	Setpoint		Instrument sensor span	B
AuSP	Auxiliary SP		Auxiliary setpoint is accessible only if AUX pushbutton or Event Input is set up for Auxiliary Setpoint. Instrument Sensor Span	
tune	Self-Tune	29	Self-Tune automatically adjusts PID parameters on powerup (PrUP) or on demand (BEgn). OFF = Self-tuning disabled PrUP = Power-up tuning BEgn = Begin tuning	C

PID1 (Pb1 - db1) applies to Output #1 in heat/cool mode. For single output control, PID1 (Pb1-db1) can be switched with PID2 (Pb2 - db2) settings via AUX pushbutton or Digital Input.

Pb1	Proportional Band 1		0°F to sensor range 0°F displays as ON/OFF to indicate ON/OFF control	C
Rr1	Automatic Reset 1		0.00 to 99.99 repeats/minute	
rRt1	Rate 1		0 to 500 seconds	
db1	Dead Band 1		db1 is not used unless Pb1 is set to zero. 1 to 100°F 0.01 to 6.25% span for analog inputs	

PID2 (Pb2 - db2) applies to Output #2 in heat/cool mode. For single output control, can be used for Output #1, if switched via AUX pushbutton or Digital Input.

Pb2	Proportional Band 2		0°F to sensor range 0°F displays as ON/OFF to indicate ON/OFF control	
Rr2	Automatic Reset 2		0.00 to 99.99 repeats/minute	
rRt2	Rate 2		0 to 500 seconds	
db2	Dead Band 2		db2 is not used unless Pb2 is set to zero. 1 to 100°F 0.01 to 6.25% span for analog inputs	



Control Page (continued)

MENU	Description	Available Settings	Security
OFFst	Manual Reset	-99.9 to 99.9	C
FL	Fuzzy Logic	29 OFF = Disabled ON = Enabled	
OpenS	Open Sensor Output Command	In the event of an open sensor, control output will automatically adjust to % output preset. For Heat Only or Cool Only control, adjustable 0.0 to 100.0%. For Heat/Cool Control, adjustable: -100.0 to 100.0%: -100.0 to -0.1 for cooling 0.1 to 100.0 for heating	
LOOP	Control Loop Protection Timer	55 OFF, 0.1 to 999.9 minutes	
Auto	Auto/Manual Disintegration Timer	0 to 100 seconds	
r-rAt	Ramp Rate	OFF 1 to 9999 degrees/hour	
Cont	Controller Type	28 Controller type can be used as heat/cool (HECL) only if controller is equipped with Output #1 (Heat) and Output #2 (Cool). HEAt = Reverse Acting Single Output Controller COOL = Direct Acting Single Output Controller HECL = Heat/Cool Controller	
COOL	Cooling Medium	28 PID2 = Uses PID2 settings for cooling AIR = Air Cooling OIL = Oil Cooling H2O = Water Cooling	
r-SP	Remote Setpoint Enable	OFF ON	
Ent1	Event/Digital Input Function	59 nonE = Disabled PID2 = PID2 enable RUSP = Auxiliary SP enable r-SP = Remote SP enable Outd = Output disable rS = Ramp/Soak Auto = Auto/Manual Al r = Alarm Reset	



Control Page (continued)

<u>MENU</u>	<u>Description</u>		<u>Available Settings</u>	<u>Security</u>
Aux	Auxiliary Pushbutton Function	60	nonE = Disabled PID2 = PID2 enable AuxSP = Auxiliary SP enable rSP = Remote SP enable Outd = Output disable Auto = Auto/Manual	C
Out	Analog Output Assignment	70	nonE = Disabled Proc = Process Variable ASP = Active Setpoint Out1 = Control Output 1 Out2 = Control Output 2	
rSEn	Ramp/Soak	41	Ramp/Soak "On" enables the Ramp/Soak Setup Page (rSP9) OFF On	
Code	User Selected Security Code	26	Allows you to establish your own user-defined security code. 0-122 = Level A 123-457 = Level B 458-735 = Level C 736-999 = Level D	D



Input Page

MENU	Description	Available Settings	Security
SEnS	Sensor Type 4	Sensor Type selected here must agree with dip switch settings. J = J Thermocouple K = K Thermocouple T = T Thermocouple E = E Thermocouple R = R Thermocouple S = S Thermocouple B = B Thermocouple rtd = 100Ω Pt RTD ($\alpha = .00385$) 4-20 = 4 to 20mA 0-5 = 0 to 5 Vdc 1-5 = 1 to 5 Vdc rtdt = 100 Ω Pt RTD (0.1° resolution)	C
unit	Display Units	none = no units °F = Degrees Fahrenheit °C = Degrees Celsius	
COFF	Display/Calibration Offset 82	Display/Calibration Offset offsets temperature process reading. -100°F to 100°F	
Setpoint Limits prevent setpoints from being adjusted above or below these pre-established limits.			
SPLL	Setpoint Low Limit	Instrument Sensor Span	
SPUL	Setpoint Upper Limit	Instrument Sensor Span	
CALS	Sensor Calibration	inLo inHi donE	D
CALr	Remote Setpoint Calibration	inLo inHi donE	
AO0	Analog Output Zero Calibration	0 to 4095	
AO5	Analog Output Span Calibration	0 to 4095	
rECc	Factory Calibration Recovery	rdy = Ready --- = Wait donE = Finished	
Digital Filtering menu (FLT) can be used to stabilize a fluctuating 0.1° resolution process variable display. To stabilize the display, increase the menu value (adjustable from 1 to 60 seconds).			
FLt	Digital Filter	0 to 60 seconds	
hPrC	High (max.) Process Input	Instrument Sensor Span	
lPrC	Low (min.) Process Input	Instrument Sensor Span	
hAR	High (max.) Ambient Temp.	Instrument Sensor Span	
lAR	Low (min.) Ambient Temp.	Instrument Sensor Span	



This PAGE appears only when Analog Input is selected, Remote SP is enabled, or Analog Output is enabled on Ctrl PAGE.

Custom Scaling Page

MENU	Description		Available Settings	Security
DP	Analog Input Decimal Pts.	9	0 = none 1 = 123.4 2 = 12.34 3 = 1.234	C
ALL	Analog Input Low	9	-500 to 5000	
AH	Analog Input High	9	-500 to 5000	
OLL	Analog Output Low	70	-500 to 5000	
OH	Analog Output High	70	-500 to 5000	
rSPL	Remote SP Input Low	67	-500 to 5000	
rSPH	Remote SP Input High	67	-500 to 5000	



Output #1 Page

MENU	Description		Available Settings	Security
CYc1	Output #1 Cycle Time		0.0 to 60.0 seconds 0.0 = Voltage/Current algorithm	C
OLI	Output #1 Limit		0.0 to 100.0%	
HoFF	Heat Offset		0°F to PB1 setting	



This PAGE is visible only if setup for heat/cool control on Ctrl PAGE.


Output #2 Page

MENU	Description		Available Settings	Security
CYc2	Output #2 Cycle Time		0.0 to 60.0 seconds 0.0 = Voltage/Current algorithm	C
OLI2	Output #2 Limit		0.0 to 100.0%	
CoFF	Heat Offset		0°F to Pb2 setting	

Section 5 Ramp/Soak Operation

The 2104 controller features a Ramp/Soak Program. The program consists of 16 intervals plus a standby interval. The time span and setpoint for each interval are individually adjustable. These intervals make up a Ramp/Soak Profile. An example of a typical 8-interval Ramp/Soak program is shown below.

Figure 5.1
Ramp/Soak Profile

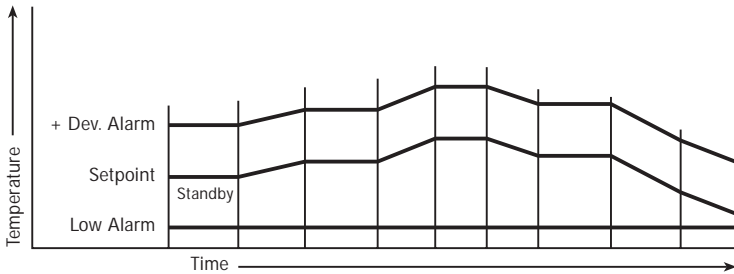


Event Outputs

Event Outputs may be configured to turn ON or OFF during each of the intervals. Event outputs are merely timed outputs that are either ON or OFF during an entire interval.

Examples of event outputs might be annunciation of a soak interval, an indicator light or addition of a product to the process. Outputs #3, #4 and #5 (if your controller was purchased with these options) may be set up as event outputs. For Outputs #3, #4 or #5 to be used as Events, the output must be set up as an Event on its setup page (i.e. $\square\text{J}\text{E}\text{E}$). For example, for Output #3 to turn on during interval 2, set menu 2E (interval 2 event) to E3 (Output #3 on). See page 43 for details.


Figure 5.2
Event Outputs in Ramp/Soak Profile

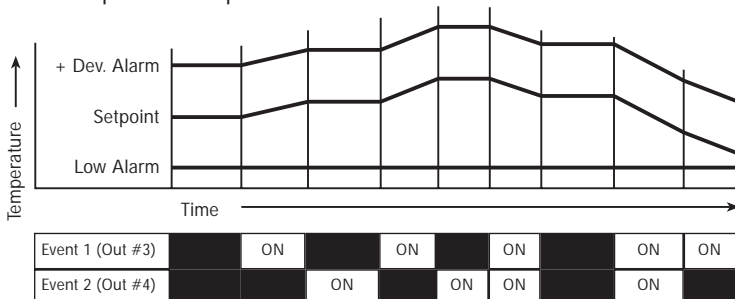

Looping Intervals

Looping means that intervals within a Program may be repeated 1 to 9999 times. If a loop is inserted in the program shown in Figure 5.1, so that intervals 4, 5 and 6 will be repeated 2 times in addition to the single Program run of these intervals, the final profile would look Figure 5.3.


Figure 5.3
Looping Intervals

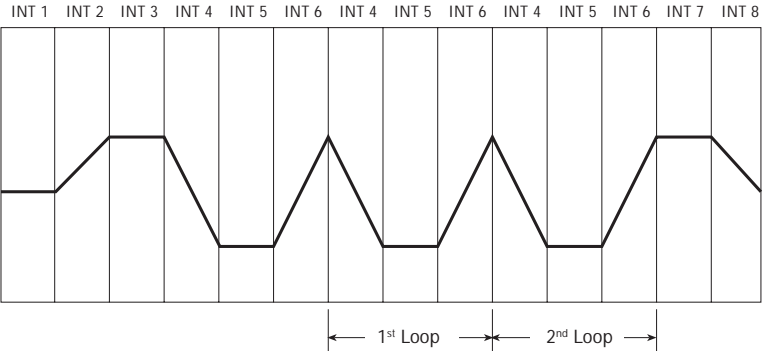

Guaranteed Soak

This Ramp/Soak feature of the 2104, when enabled, assures that the “soaking” time in a “soak” interval does not begin until the process reaches setpoint or is within the guaranteed soak differential band. A soak interval has the same setpoint at the beginning and end of the interval.

Figure 5.4
Guaranteed Soak

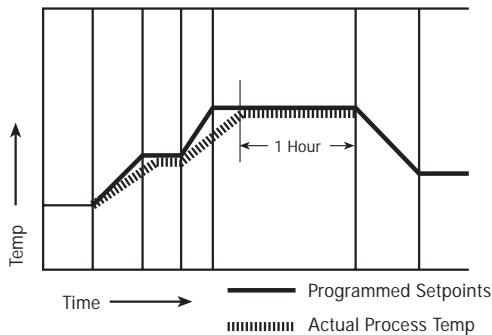

Guaranteed Soak is enabled on the `rSP3 PAGE` by setting the differential band to a value greater than 0. It is adjustable from 1°F to the sensor span.



This setup PAGE appears only if Ramp/Soak control is turned on. The Ramp/Soak Enable parameter is the next to the last menu on **Ctrl PAGE, Menu Cont.**


Ramp/Soak Page

MENU	Description	Available Settings	Security
unit	Time Units	SEC = seconds (1 to 9999) min = minutes (0.1 to 999.9) hr = hours (0.01 to 99.99)	C
Stby	Standby Setpoint	Instrument Sensor Span	
int1	Interval 1 Time	see Time Units Menu (above)	
SP1	Setpoint 1 • Intervals 2-15 • Time and Setpoint	Instrument Sensor Span	
int16	Interval 16 Time	see Time Units Menu (above)	
SP16	Setpoint 16	Instrument Sensor Span	
Cont	Continuous Program	OFF On	
From	Loop from the end of interval	1 to 16	
to	To the beginning of interval	1 to 16	
no	Number of times	0 to 9999	
StEt	Standby Events	OFF = All off E3 = Event Output 3 On E4 = Event Output 4 On E43 = Event Outputs 4 & 3 On E5 = Event Output 5 On E53 = Event Outputs 5 & 3 On E54 = Event Outputs 5 & 4 On E543 = Event Outputs 5, 4, 3 On	
int1 E	Interval 1 Events	OFF = All off E3 = Event Output 3 On E4 = Event Output 4 On E43 = Event Outputs 4 & 3 On E5 = Event Output 5 On E53 = Event Outputs 5 & 3 On E54 = Event Outputs 5 & 4 On E543 = Event Outputs 5, 4, 3 On	
int16 E	Interval 16 Event	same as above	
GSdb	Guaranteed Soak differential	OFF, 1°F to sensor range	

Control Operation


In order to use the Ramp/Soak program, it must be enabled on the \square Page, $\square = \square$. Control of ramp/soak operation (Start, Stop and Hold) can be accomplished via the front panel. In the Setup mode, first return to the Normal Display Mode by holding the reset button for 3 seconds. Pressing the up arrow key **Starts** the program, pressing the down arrow key **Holds** the program, and pressing both together **Stops** the program.

To Start Ramp/Soak Program:

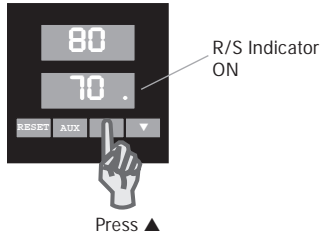


▲ **Starts** the Ramp/Soak program or if the program is on **Hold**, continues the program

To Hold Ramp/Soak Program:

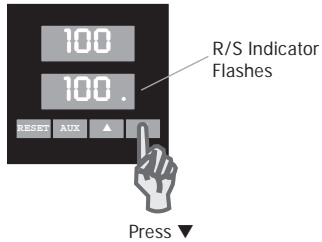

▼ (**Hold**) Stops the program in progress and "holds" the program until the ▲ (**Start**) button is pressed.

To Stop Ramp/Soak Program:

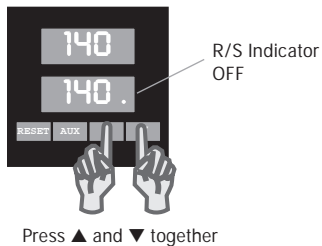

▼ and ▲ together (Stop Pushbutton) return the Ramp/Soak program to the Standby setpoint.


**Control
Operation**
(continued)

Ramp/Soak (continued)

Alternately, the Digital Input or *Chromasoft™* can be used to control program operation. The ramp/soak indicator LED (right-most decimal point in the lower display) is ON when a program is running, OFF in standby, and flashes in hold mode.



Note: If the Aux key function is set to none (Ctrl PAGE, Au = none), the current ramp/soak status will be displayed when the Aux key is pressed.

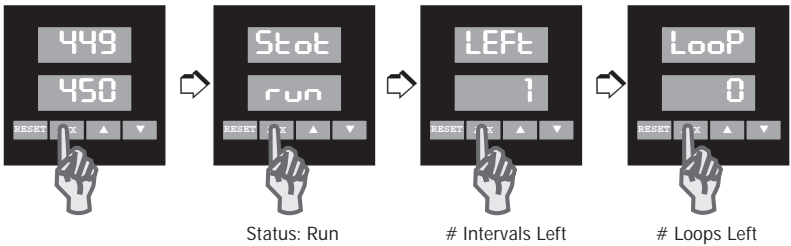

The 2104 controller can provide up to three alarm outputs using Output #3, #4 and #5. These optional outputs are indicated by the following controller model numbers:


<u>Optional Outputs</u>	<u>Model Number</u>
Outputs #3 and #4	2104 - **1**
Output #5	2104 - ***1* ***2*
	2104 - ***4* ***5*

Each alarm is individually setup with a high and low setpoint on its own Page:

- Output 3 PAGE
- Output 4 PAGE
- Output 5 PAGE

Outputs #3, #4 and #5 can be individually setup as Alarms or Events, and can be individually disabled.

To function as an alarm, the output type must be specified as an alarm output, ALR, in the first menu, output type (E4P3, E4P4, E4P5). If the function is an Event, the output type must be specified as ENT. The Events then are enabled in the Ramp/Soak (rSP3) page, menus S6E6 (Standby Event) through I6E.

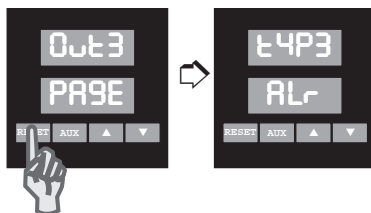

Alarm Types Each of the alarms can be set up for the following alarm types:

- Hi** High Alarm—Absolute Temperature Alarm
- Lo** Low Alarm—Absolute Temperature Alarm
- HiLo** High/Low Alarm—Absolute Temperature Alarm
- PdE** +Deviation Alarm—Setpoint Tracking Alarm
- dE** -Deviation Alarm—Setpoint Tracking Alarm
- dE** ±Deviation Alarm—Setpoint Tracking Alarm
- LoopP** Control Loop Protection Alarm—System Alarm
(see page 53 for detailed information)

The Absolute Temperature Alarms are set to a specific value; i.e. if the High Alarm is set for 100°F, the alarm will turn on at 100°F. The Deviation Alarms, or Setpoint Tracking Alarms, track the process setpoint. If the Alarm = 5°F and the setpoint is 70°F, the Alarm will energize at 75°F.

Alarm Inhibit

When enabled, the Alarm Inhibit feature prevents false alarms during initial powerup. For example, the low alarm will not be set until after the process temperature has initially reached setpoint. Alarm Inhibit is adjustable for each alarm output.



Alarm Wiring

Wiring instructions for Outputs #3, #4 and #5 are given on pages 19-20.


**Alarm
Relay
Action**

Output Relays #3, #4 and #5 can be set to be normally energized or de-energized, latching or non-latching. A normally de-energized relay is in its non-energized state when not in alarm. For example, Outputs #3 and #4 are normally-open contacts. When setup as normally de-energized, the relays will be open when not in alarm, and closed when in alarm.

A non-latching relay will not stay in alarm if the alarm condition goes away. A latching relay will not go out of alarm until the alarm condition no longer exists and **RESET** is pressed.

**Alarm
Operation**

Latching alarms can be reset by pressing the RESET pushbutton on the controller front panel. The alarm cannot be reset until the process is out of the alarm condition. The Digital Input can be setup to function as a remote alarm reset button (see pages 59-63).

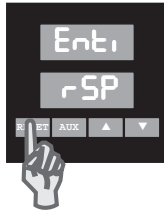



This setup PAGE appears only if the controller is equipped with Outputs #3 and #4.

Output #3 Page

MENU	Description		Available Settings	Security
Out 3	Output #3 Type	47	OFF = Disabled Al r = Alarm Output Ent = Event Output (Setup Event Output parameters on Ramp/Soak Page)	C
Al r 3	Alarm #3 Type	48	none = Disabled (off) Hi = High Alarm Lo = Low Alarm HiLo = High-Low Alarm PdE = Plus Deviation Alarm -dE = Minus Deviation Alarm dE = Plus/Minus Deviation Alarm Loop = Control Loop Protection Alarm	
rLY3	Alarm #3 Relay Action	49	ndE = Normally de-energized non-latching nE = Normally energized non-latching ndEL = Normally de-energized latching nEL = Normally energized latching	
Low Setpoint is used for low and -deviation setpoints				
ALo3	Alarm #3 Low Setpoint		Instrument Sensor Span	
High Setpoint is used for high and +deviation setpoints				
AHi3	Alarm #3 High Setpoint		Instrument Sensor Span	
db3	Output #3 Dead Band (Alarm Hysteresis)		0 to 100°F	
inh3	Alarm #3 Inhibit	48	OFF On	



This setup PAGE appears only if the controller is equipped with Outputs #3 and #4.

Output #4 Page

MENU	Description		Available Settings	Security
Output #4	Output #4 Type	47	OFF = Disabled AO = Alarm Output EO = Event Output (Setup Event Output parameters on Ramp/Soak Page)	C
Alarm #4	Alarm #4 Type	48	OFF = Disabled (off) Hi = High Alarm Lo = Low Alarm HiLo = High-Low Alarm PdE = Plus Deviation Alarm -dE = Minus Deviation Alarm dE = Plus/Minus Deviation Alarm Loop = Control Loop Protection Alarm	
Alarm #4	Alarm #4 Relay Action	49	ndE = Normally de-energized non-latching nE = Normally energized non-latching ndEL = Normally de-energized latching nEL = Normally energized latching	
Low Setpoint is used for low and -deviation setpoints				
ALo4	Alarm #4 Low Setpoint		Instrument Sensor Span	
High Setpoint is used for high and +deviation setpoints				
AHi4	Alarm #4 High Setpoint		Instrument Sensor Span	
db4	Output #4 Dead Band (Alarm Hysteresis)		0 to 100°F	
INH4	Alarm #4 Inhibit	48	OFF ON	




This setup PAGE appears only if the controller is equipped with Output #5.

Output #5 Page

MENU	Description	Available Settings	Security
47PS	Output #5 Type 47	OFF = Disabled RI r = Alarm Output ENT = Event Output (Setup Event Output parameters on Ramp/Soak Page)	C
RI rS	Alarm #5 Type 48	nonE = Disabled (off) Hi = High Alarm Lo = Low Alarm HiLo = High-Low Alarm PdE = Plus Deviation Alarm -dE = Minus Deviation Alarm dE = Plus/Minus Deviation Alarm LoopP = Control Loop Protection Alarm	
rLYS	Alarm #5 Relay Action 49	ndE = Normally de-energized non-latching nE = Normally energized non-latching ndEL = Normally de-energized latching nEL = Normally energized latching	
Low Setpoint is used for low and -deviation setpoints			
RLoS	Alarm #5 Low Setpoint	Instrument Sensor Span	
High Setpoint is used for high and +deviation setpoints			
RHiS	Alarm #5 High Setpoint	Instrument Sensor Span	
dbS	Output #5 Dead Band (Alarm Hysteresis)	0 to 100°F	
inhS	Alarm #5 Inhibit 48	OFF On	

Control Loop Protection Alarm (CLP)

Control Loop Protection (CLP) monitors the controller's process variable input and load output to detect and respond to conditions indicating a failure in the control loop (Sensor, Controller Output, Load or Process flow). CLP is selected by setting the Loop Timer on the CLP PAGE menu to a value from 0.1 to 999.0 minutes (0.0 disables CLP).

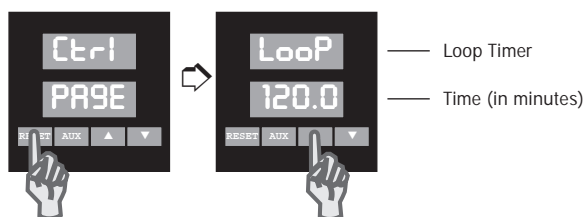

The timer setting should be chosen according to the response time of the system. The minimum time setting should be 0.25% of span divided by the normal load response rate to full ON or full OFF condition (whichever is slower).

$$\text{Minimum Timer Setting} = \frac{\text{Span} \times .0025}{\text{Slowest Response Rate (Heat or Cool)}}$$


Response Rate = Process Response (in degrees/minute) when
100% ON or 100% OFF

Example: For a controller with type J T/C (span -100°F to 1400°F), 0.25% of span is 3.75°F. If the heating response is 2°F/min., and the cooling response is 1°F/min., the minimum Loop Timer setting would be 3.8 minutes. To prevent false alarms, it is recommended that you start by doubling the setting to 7.6 minutes.

The CLP Alarm sequence begins when the control output reaches 0.0% or 100.0% (process variable outside of the proportional band). The controller then measures the time for the process variable to respond (increase or decrease the process variable) and compares the measured time to the Loop Timer value.

Control Loop Protection Alarm (continued)

If the control loop does not respond with a change in the process variable of 0.25% of span (3.75°F for a J thermocouple) within the programmed loop time, a Loop Error will result and the control output will turn off. The error will be indicated by the lower display flashing **Loop** and Loop Alarm Output (Output #3, #4, or #5 as selected on the menu) will be activated. The Loop Alarm is cleared by pressing **RESET**.

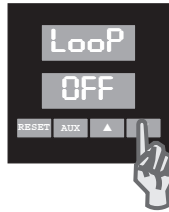

Press RESET
to clear Loop Alarm







Warning

The CLP is not a substitute for safety shutdown devices such as flow switches or overtemperature monitors. The CLP Alarm responds to specific conditions that may provide early warning of system loop failures or aid in troubleshooting failures.

CLP Loop Alarm Conditions






The following table details conditions that activate a loop alarm, and gives the controller response to the condition.

Figure 6.1 CLP Loop Alarm Conditions

<u>Probable Cause</u>	<u>Control Output Response</u>	<u>Display</u>
Loss of process flow	Turns control output off	 Flashing
<p>In a control application where the process is being heated at one point and measured at a point downstream, CLP Alarm could be used to detect a flow failure. If the process flow is interrupted and heat is no longer transferred to the sensor, the controller output will increase to 100%, the Loop alarm will start timing the load response and when the preset Loop Timer value is reached, the Loop Alarm will be activated and the control output will be turned off. The failure will be indicated by the lower display flashing LoOP. Loop Alarm Output (Output #3, #4 or #5) will be activated if selected.</p>		
<u>Probable Cause</u>	<u>Control Output Response</u>	<u>Display</u>
Load Power is interrupted (blown fuse or tripped circuit breaker)	Turns control output off	 Flashing
<p>If load power is interrupted by the circuit protection devices (user supplied fuse or circuit breaker), the Loop Alarm will be activated when the process variable goes outside of the proportional band for a time greater than the preset Loop Timer value. The control output will be turned off and the failure will be indicated by the lower display flashing LoOP. Loop Alarm Output (Output #3, #4, or #5) will be activated If selected.</p>		
<u>Probable Cause</u>	<u>Control Output Response</u>	<u>Display</u>
Load fails (open circuit)	Turns control output off	 Flashing
<p>If the load fails open, the Loop Alarm will be activated when the process variable goes outside of the proportional band for a time greater than the preset Loop Timer value. The control output will be turned off and the failure will be indicated by the lower display flashing LoOP. Loop Alarm Output (Output #3, #4, or #5) will be activated if selected.</p>		
<u>Probable Cause</u>	<u>Control Output Response</u>	<u>Display</u>
Load fails (short circuit)	Turns control output Off	 Flashing
<p>If the load fails shorted, power to the load will be interrupted by the circuit protection devices (user supplied fuse or circuit breaker). The Loop Alarm will be activated when the process variable goes outside of the proportional band for a time greater than the preset Loop Timer value. The control output will be turned off and the failure will be indicated by the lower display flashing LoOP. Loop Alarm Output (Output #3, #4, or #5) will be activated if selected.</p>		




(continue on the next page)

Figure 6.1 CLP Loop Alarm Conditions (continued)

<u>Probable Cause</u>	<u>Control Output Response</u>	<u>Display</u>
Controller or remote power control output fails (open circuit)	Turns control output off	 Flashing
<p>If the controller output or the remote power control device (SCR or contactor) fails open, the Loop Alarm will be activated when the process variable goes outside of the proportional band for a time greater than the preset Loop Timer value. The failure will be indicated by the lower display flashing LoOP. Loop Alarm Output (Output #3, #4, or #5) will be activated if selected.</p>		
<u>Probable Cause</u>	<u>Control Output Response</u>	<u>Display</u>
Controller or remote power control output fails (short circuit)	None (load must be interconnected with alarm)	 Flashing
<p>If the controller output or the remote power control device (SCR or contactor) fails shorted, the Loop Alarm will be activated when the process variable goes outside of the proportional band for a time greater than the preset Loop Timer value. The failure will be indicated by the lower display flashing LoOP. Loop Alarm Output (Output #3, #4, or #5) will be activated. To protect the loop under this condition, the Loop Alarm Output (Output #3, #4 of #5) should be interconnected to remove power from the load.</p>		
<u>Probable Cause</u>	<u>Control Output Response</u>	<u>Display</u>
Sensor wiring reversed (thermocouple only)	Turns control output off	 Flashing
<p>If the sensor wiring is reversed, the Loop Alarm will be activated when the process variable goes outside of the proportional band for a time greater than the preset Loop Timer value. The control output will be turned off and the failure will be indicated by the lower display flashing LoOP. Loop Alarm Output (Output #3, #4, or #5) will be activated if selected.</p>		
<u>Probable Cause</u>	<u>Control Output Response</u>	<u>Display</u>
Sensor loses contact with process	Turns control output off	 Flashing
<p>If the sensor loses contact with the process (sensor becomes dislodged or pulled loose), the Loop Alarm will be activated when the process variable goes outside of the proportional band for a time greater than the preset Loop Timer value. The failure will be indicated by the lower display flashing LoOP. Loop Alarm Output (Output #3, #4, or #5) will be activated if selected.</p>		
<u>Probable Cause</u>	<u>Control Output Response</u>	<u>Display</u>
Sensor fails (open circuit)	Defaults to preset (0-100%)	 Flashing
<p>If the sensing device fails open, the controller defaults to the preset output condition (0-100% \overline{ON} setting selected on the \overline{Ctrl} \overline{PRSE} menu) and uses both displays to indicate OPEN SENS. The Loop alarm is not activated for this condition. Alarms selected as Low, High-Low, + Deviation or +/- Deviation will actuate if selected.</p>		

(continued on the next page)

Figure 6.1 CLP Loop Alarm Conditions (continued)

Probable Cause	Control Output Response	Display
Sensor fails (short circuit, RTD only)	Defaults to preset (0-100%)	 Flashing
<p>If the RTD sensing device fails shorted, the controller defaults to the preset output condition (0-100% $\overline{0-100\%}$ setting selected on the \overline{CLP} \overline{PSET} menu) and uses both displays to indicate OPEN SENS. The Loop alarm is not activated for this condition. Alarms selected as Low, High-Low, - Deviation or +/- Deviation will actuate if selected.</p>		
Probable Cause	Control Output Response	Display
Controller Self Diagnostic (signal conversion)	Defaults to preset (0-100%)	 Flashing
<p>If a failure occurs in the signal conversion circuit of the controller, the controller defaults to the preset output condition (0-100% $\overline{0-100\%}$ setting selected on the \overline{CLP} \overline{PSET} menu) and displays Err4 on the lower display. Loop Alarm Output (Output #3, #4, or #5) will be activated if selected.</p>		
Probable Cause	Control Output Response	Display
Controller Self Diagnostic	Turns control output off	 Flashing
<p>If a failure occurs in the control circuitry of the controller, the control output will be turned off and Err3 will be displayed on the lower display. Loop Alarm Output (Output #3, #4, or #5) will be activated if selected.</p>		

Section 7

Digital Input and AUX Function

The 2104 controller gives you two different options for actuation of any one of several field-selectable controller functions:

1. A Digital Input that is hardwired to terminals 1 and 2 of the controller.
2. The AUX pushbutton located on the controller front faceplate.


You may choose to use either the Digital Input or the AUX pushbutton, but you cannot use both.

Digital Input


The Digital Input allows you to use a remote switch, pushbutton or contact to perform any one of seven possible functions:

- PID1/PID2 Switch
- Output Disable/Enable
- SP/AUX Setpoint Switch
- Ramp/Soak
- Local/Remote Setpoint Switch
- Alarm Reset
- Auto/Manual Control Switch

The external switching device is connected to the controller Digital Input at terminals 1 and 2 (see page 10 for wiring instructions). The Digital Input function is selected in the **Ctrl PAGE** programming.

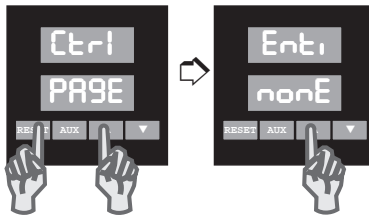


When the Digital Input is used, the AUX (Auxiliary) LED on the controller front panel is used for indication of the Digital Input function.

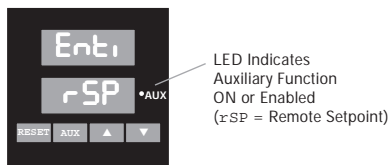

AUX Pushbutton


The AUX front panel pushbutton can be assigned to perform any one of six possible functions and the AUX LED is used for indication of that function. Like the Digital Input, its function is selected in the **CTRL PANE** programming. No wiring or hardware adjustments are required to use the AUX pushbutton as a function key.

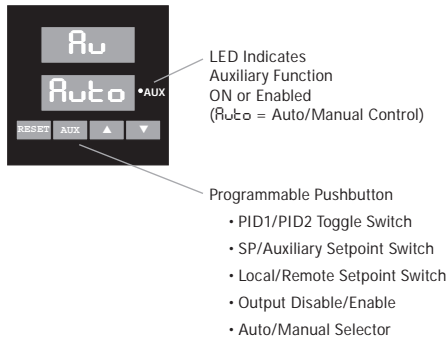

Remember:

- The Digital Input and AUX function pushbutton cannot be used at the same time.
- If the AUX pushbutton is set to **RAMP SOAK**, it will display the Ramp/Soak Program Status when pressed. **45**
- When the AUX function = **RAMP SOAK**, the Digital Input can be used.

Digital Input

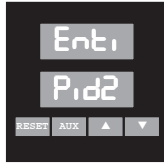

nonE = None

When disabled, the Digital Input has no effect on controller operation. If the AUX key is also disabled, the AUX light is used to indicate the output state (ON or OFF) of Output #5, if the controller has Output #5.

Pid2 = Enable

This function can be used in single output control applications only (Ctrl PASE, cont = HEAT or COOL). When this function is selected, the controller uses PID1 parameters (Ctrl PASE) when the Digital Input switch is open. The PID2 parameters will be used when the switch is closed. The AUX indicator is ON when PID2 parameters are selected and OFF when PID1 parameters are selected.

AuSP = Auxiliary Setpoint Enable

When this function is selected, the controller uses the Local Setpoint (Ctrl PASE, SP) when the Digital Input switch is open. The Auxiliary Setpoint (Ctrl PASE, AuSP) is used when the switch is closed. The AUX indicator is ON when the Auxiliary SP is selected and OFF when the Local Setpoint is selected. The setpoints are adjustable in the Operator Mode according to security. This function cannot be used when Ramp/Soak is enabled.

rSP = Remote SP Enable

When this function is selected, the controller uses the Local Setpoint (Ctrl PASE, SP) when the Digital Input switch is open. The Remote Setpoint is used when the switch is closed. Remote Setpoint must be enabled (Ctrl PASE, rSP = ON) for this function to operate. The AUX indicator is ON when the Remote Setpoint is selected and OFF when the Local Setpoint is selected. This function cannot be used when Ramp/Soak is enabled.

Digital Input (continued)



Outd = Output Disable

When this function is selected, the control output(s) are enabled when the Digital Input switch is open, and disabled, when the switch is closed. The AUX indicator is ON, when the control output(s) are disabled and OFF, when enabled.

Note: Disabling the outputs allows all control parameters to be set up without starting the process.



This setting is NOT intended for process shutdown. An external disconnect should be used for process shutdown.




rS = Ramp/Soak

This function allows the Digital Input to act as a Start/Stop and Hold button for controlling Ramp/Soak operation:

- Ramp/Soak operation is started when the Digital Input switch is closed (100 milliseconds), then opened (momentary action) while in Standby Mode.
- In Run Mode, this action will skip to the next interval.
- Hold Mode is entered by closing the Digital Input switch for 2 seconds while the program is running.
- Momentarily closing (100 milliseconds) the input switch while in HOLD will continue the program.
- Closing the Digital Input Switch for 2 seconds while in Hold Mode will stop the program and return to Standby.

Digital Input (continued)

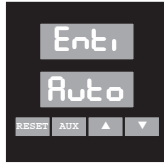

31

Auto = Auto/Manual Control

This function allows the Digital Input to act as an Auto/Manual Control selector. Manual operation is selected when the Digital Input switch is closed. Automatic operation is selected when the switch is open. The AUX light is ON in Manual, and OFF in Automatic Mode.

Alarm Reset

This function allows the Digital Input switch to be used as a remote Alarm Reset button for use with latching type alarms. The AUX light is used to indicate the state (ON or OFF) of Output #5, if the Output #5 option is installed in the controller.

AUX Key



The AUX Key can be setup for any of the functions listed below:

None = None

When disabled, the AUX Key has no effect on controller operation. AUX can be used to display the Ramp/Soak status, if Ramp/Soak is enabled. If the Digital Input is also disabled, the AUX light is used to indicate the state (ON or OFF) of Output #5, if installed.

AUX Key (continued)



PID2 = PID2 Enabled

This function can be used in single output control applications only (CET-1 PAGE CONT = HEAT or COOL). When this function is selected, pressing the AUX Key will toggle between PID1 (CET-1 PAGE, menus P_{b1}, R_{r1}, r_{A1}) and PID2 (CET-1 PAGE, menus P_{b2}, R_{r2}, r_{A2}) parameters. If the power is interrupted, the last active PID parameters will be used when power is restored. The AUX indicator is ON when PID2 parameters are selected and OFF when PID1 parameters are selected.


AUX SP = Auxiliary Setpoint Enable

When this function is selected, pressing the AUX Key will toggle between the Auxiliary and Local setpoints. If the power is interrupted, the last active setpoint will be used when power is restored. The AUX indicator is ON when the Auxiliary Setpoint is selected and OFF when the Local Setpoint is selected. The setpoints are adjustable in Operator Mode according to security. This function cannot be used when Ramp/Soak is enabled.

rSP = Remote Setpoint Enable

When this function is selected, pressing the AUX Key will toggle between the Remote and Local Setpoints. If the power is interrupted, the last active setpoint will be used when power is restored. Remote setpoint must be enabled (CET-1 PAGE, rSP = ON) for this function to operate. The AUX indicator is ON when the Remote Setpoint is selected and OFF when the Local Setpoint is selected. This function cannot be used when Ramp/Soak is enabled.

AUX Key (continued)

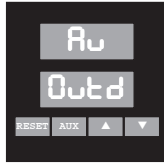

Outd = Output Disable

When this function is selected, pressing the AUX Key will toggle between outputs enabled and outputs disabled. The AUX indicator is ON when the control output(s) are disabled and OFF when enabled.

Note: Disabling the outputs allows for all the parameters to be set without starting the process.



This setting is not intended for shutdown of the process. An external disconnect should be used.

31

Auto = Auto/Manual

When this function is selected, pressing the AUX Key toggles between Manual and Automatic operation with Automatic as default at powerup. The AUX light is ON in Manual Mode, and OFF in Automatic Mode.

Section 8 Remote Setpoint & Analog Output Option


Remote Setpoint

The Remote Setpoint standard feature allows an external device to control the setpoint of the controller. The Remote Setpoint input accepts either 4-20mA or 1-5 Vdc input signals, selectable by a switch on the bottom of the controller. The Digital Input or AUX pushbutton can be set up to switch between the Local Setpoint and the Remote Setpoint.

To Select the Remote Setpoint Input Signal


Locate switch #4 on the bottom of the controller, as shown in Figure 8.1. Place the switch in the desired position.

Figure 8.1
Remote Setpoint Input Signal

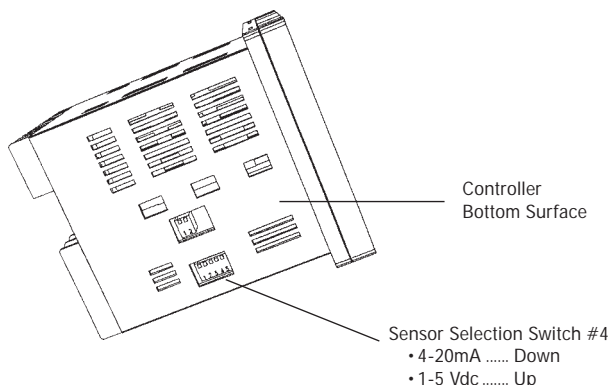

To Enable the Remote Setpoint

Go to MENU rSP on the Ctrl PAGE and select ON.

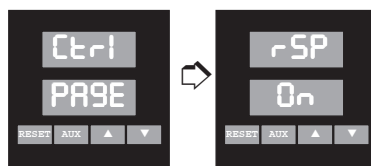

Note: The Digital Input or AUX pushbutton can be used to switch between Remote Setpoint and Local Setpoint (see page 57 for setup).

To Scale the Input Signal

Go to the **ScAL PAGE**, **MENU**s **rSPL** (remote setpoint low) and **rSPH** (remote setpoint high). Enter the sensor span low and high ranges. For example, for a 100 to 500°F range, 4mA would equal 100°F setpoint, and 20mA would equal 500°F setpoint.



This page appears only if Remote Setpoint and/or Analog Process Output are Enabled.

Custom Scaling Page

MENU	Description	Available Settings	Security
rSPL	Remote Setpoint-Low	Instrument Sensor Span	C
rSPH	Remote Setpoint-High	Instrument Sensor Span	C

Remote Setpoint Wiring

Figure 8.2
2-Wire 4-20mA
Transmitter
(Loop-Powered)

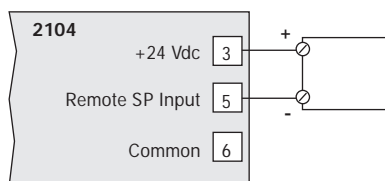


Figure 8.3
2-wire 4-20mA,
1-5 Vdc Transmitter
(Self-Powered)


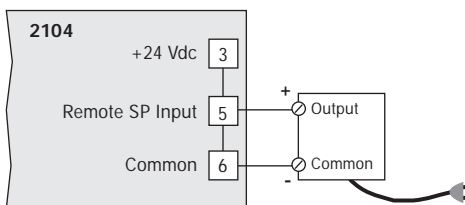


Figure 8.4
3-wire 4-20mA,
1-5 Vdc Transmitter

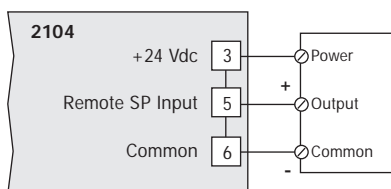

Analog Output Option

The Analog Output Option is provided on controllers with model number

- 2104 - ***3*
- 2104 - ***4*
- 2104 - ***5*

This option can be used to transmit any one of four process parameters:


- **Proc** Process Variable
- **ASP** Active Setpoint
- **Out1** Output #1 Command (%ON)
- **Out2** Output #2 Command (%ON)

The variable can be transmitted to a remote recorder, computer or other device via a 4-20mA or 1-5 Vdc signal, selectable by a switch on the bottom of the controller.

To Select the Analog Process Output Signal

Locate switch #5 on the bottom of the controller, as shown in Figure 8.2. Place the switch in the desired position.

Figure 8.5
Analog Output
Signal

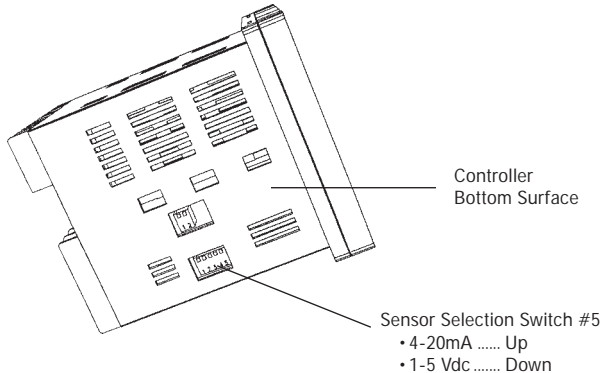

To Enable the Analog Output Option:

Go to MENU ROOT on the CTRL PAGE and select one of the 4 parameters.


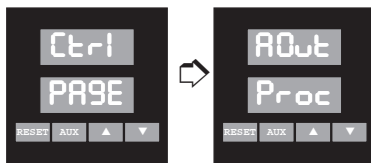


Figure 8.6
Process
Output Wiring



To Scale the Output Signal

When the Process Variable or Active Setpoint is selected for transmission, the output signal is scaled using the Analog Output scaling MENUs. Go to the SCAL PAGE, MENU ROOT (analog output low) and ROOTH (analog output high). Enter the output signal range to be sent to your recorder or computer (i.e., 100 = 4mA and 500°F = 20mA).

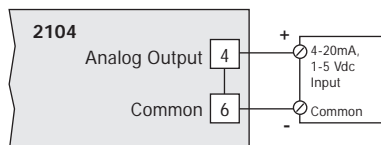

Custom Scaling Page

MENU	Description	Available Settings	Security
ROOTL	Analog Process Output - Low	Instrument Sensor Span	C
ROOTH	Analog Process Output - High	Instrument Sensor Span	C

When Output #1 or Output #2 are selected for transmission, the low end of span (4mA or 1 Vdc) represents 0.0% output, and the high end of span (20mA or 5 Vdc) represents 100.0% output.

The Digital Communications option is provided on the following controllers:

<u>Model</u>	<u>Communications</u>
2104 - ***2*	RS232
2104 - ***5*	RS232
2104 - ***1*	RS485/422
2104 - ***4*	RS485/422

The Digital Communications option gives the 2104 the ability to interface with computers using either Chromalox's Computer Interface mode or ASCII Line mode. These modes implement communications that can address up to 255 Chromalox controllers on an RS422A/RS485 multidrop line. The protocols for these two modes are described in the Digital Communications User's Manual (P/N 0037-75129) that is supplied with controllers containing the Digital Communication option.

ChromaSoft™

If a prepackaged software program is preferred for multidrop digital communication with up to 255 Chromalox controllers, Chromalox offers *ChromaSoft* remote operator interface software. *ChromaSoft* is DOS-based and communicates with the controllers via a serial interface port. Instructions for using *ChromaSoft* are given in the User's Manual provided with the software.

Hardware Setup


RS232 can be used to connect a computer or modem to a single 2104 controller. RS232 lines can be run over distances up to 50 feet.

RS422 and RS485 provide multidrop network communications where up to 255 controllers can communicate with a single computer at a distance of up to 4000 feet.

Hardware Setup (continued)

When shipped from the factory, the multidrop communications interface is set for RS422. If you are using RS485, two switches in the controller hardware must be positioned for the communications interface. Locate the switches on the bottom of the controller and position them as shown in Figure 9.1.


Figure 9.1
RS422/RS485
Communications
Switches

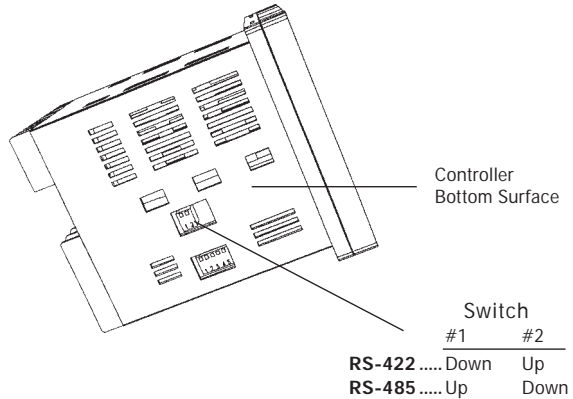

Digital Communications Wiring


Wiring connections for the digital communications interface are made on terminals 9-13 using shielded serial interface cable.

Figure 9.2
RS232 Wiring
Connections

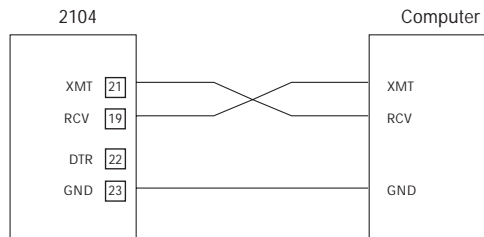


Note: The DTR output is always enabled when the 2104 power is on.

Figure 9.3
RS422A Wiring Connections (4-wire)

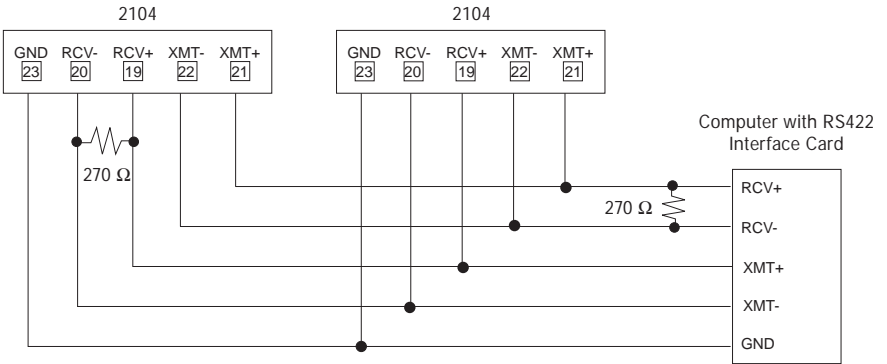

Note: 270 Ω resistors recommended across receive line on computer and last controller.

Figure 9.4
RS485 Wiring Connections (2-wire)

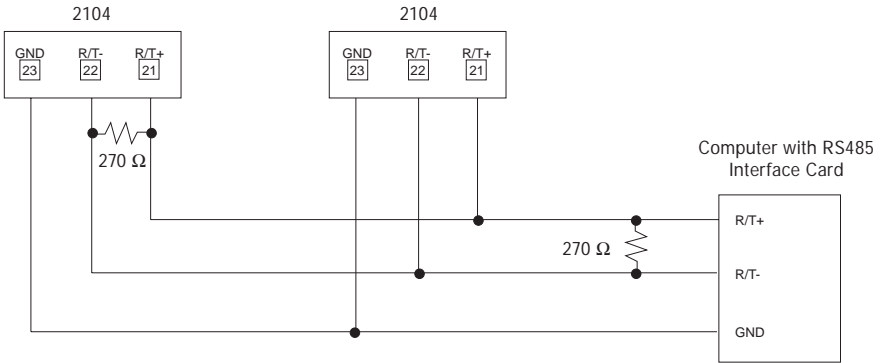

Note: 270 Ω resistors recommended across receive line on computer and last controller.

Digital Communications Programming and Setup

All programmed selections are made on the **DIS PAGE** of the controller.



This setup PAGE appears only if the controller is equipped the digital Communications option.

Digital Communications Page: DIS PAGE

<u>MENU</u>	<u>Description</u>	<u>Available Settings</u>	<u>Security</u>
DIS	Mode Selection	OFF = Disabled CIP = Computer Interface LINE = ASCII Line	C
baud	Baud Rate	1200 2400 4800 9600 19.2K	
Addr	Address	1 to 255	

In this section you will find calibration instructions for calibrating:

- *Sensor Input*
- *Remote Setpoint Input*
- *Analog Output*

Instructions are also given for:

- *Factory Calibration Recovery*
- *Calibration Offset*

When is Calibration Required?

The 2104 controller is factory calibrated before shipment to you, therefore, it is not necessary to calibrate the controller when you receive and install it. Periodic calibration checks or adjustments of the unit should not be required under normal operating conditions. Chromalox recommends that you recalibrate the controller in the following instances:

- all instruments in your facility are periodically calibrated to one device (metrology)

Important Calibration Notes

1. Disconnect load power when calibrating or disable the control output using the **AUX** pushbutton.
2. RTD inputs should be calibrated using copper (Cu) wire, and thermocouple inputs should be calibrated using thermocouple extension wire of the same type as the thermocouple you are calibrating.
3. Substitute a precision sensor simulator (thermocouple simulator or resistance decade box) for the sensor inputs. The controller should be allowed to warm-up with the appropriate sensor simulator connected for at least one hour prior to calibration.
4. To access the calibration, you will need to be at LEVEL D security. Enter Security Code "736" at menu LOCK on the CRT PAGE.

Sensor Input Calibration

The sensor input of the 2104 can be calibrated using an appropriate sensor simulator and the Sensor Calibration menu on the Input Page.



1. Connect the sensor simulator to the sensor input terminals.
2. Go to menu CALS. The lower display will show **inLo**, indicating that you should first calibrate the sensor low end.




**Sensor
Input
Calibration**
(continued)

3. Adjust the simulator to output the low end of the selected sensor range. Sensor minimum ranges are:

<u>Sensor</u>	<u>°F</u>	<u>°C</u>
J T/C	-100	-73
K T/C	-300	-184
T	-350	-212
E	-100	-73
R	0	-18
S	0	-18
B	50	10
RTD	48.46Ω	
RTD (0.1°)	70.98Ω	
4-20mA	4mA	
0-5 Vdc	0 Vdc	
1-5 Vdc	1 Vdc	

4. Wait 30 seconds for the electronics to fully stabilize. Press **▲**. Dashes will appear in the lower display while the controller calibrates the low end of span.

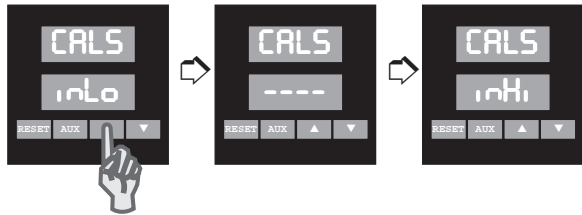


5. When the controller prompts **inHi** in the lower display, adjust the sensor simulator to output the high end of the currently selected sensor span. Sensor maximum ranges are:

<u>Sensor</u>	<u>°F</u>	<u>°C</u>
J T/C	1400	760
K T/C	2400	1316
T	750	399
E	1100	593
R	3200	1760
S	3200	1760
B	3300	1816
RTD	293.49Ω	
RTD (0.1°)	275.04Ω	
4-20mA	20mA	
0-5 Vdc	5 Vdc	
1-5 Vdc	5 Vdc	

Sensor Input Calibration (continued)

6. Wait 30 seconds for the electronics to stabilize. Press ▲. Dashes will appear in the lower display while the controller calibrates the high end of span. When finished, the controller will display done.

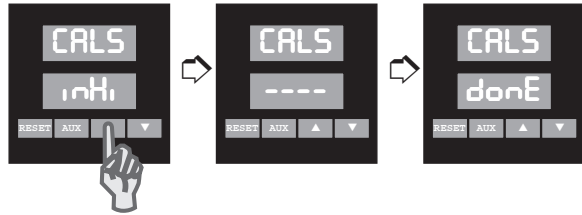

7. Press RESET to exit calibration.

Remote Setpoint Input Calibration


The Remote Setpoint Input is calibrated using an appropriate 4-20mA or 1-5 Vdc simulator. Calibration is performed in the menu `CALr` on the Input Page.

1. Connect the simulator to the remote setpoint input terminals.
2. Go to menu `CALr`. The lower display will show `inLo`, indicating that you should first calibrate the input low end (4mA or 1 Vdc).




**Remote
Setpoint
Input
Calibration**
(continued)

3. Adjust the simulator to output the low end of the selected range. Wait 30 seconds for the electronics to fully stabilize. Press ▲. Dashes will appear in the lower display while the controller calibrates the low end of span.

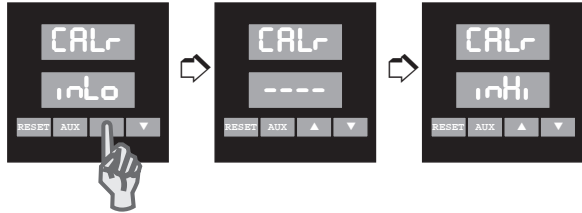

4. When the controller prompts inHi in the lower display, adjust the simulator to output the high end of the currently selected input span (20mA or 5 Vdc).
5. Wait 30 seconds for the electronics to stabilize. Press ▲. Dashes will appear in the lower display while the controller calibrates the high end of span. When finished, the controller will display done.

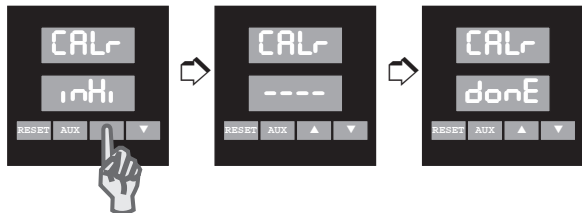


6. Press RESET to exit calibration.

Analog Output Option Calibration


The Analog Output signal is calibrated using an appropriate current or voltage meter. Calibration is performed in the two analog output calibration menus (R0 0 and R0 5) on the Input Page.

1. Connect the meter to the analog process output terminals. To calibrate the analog output, the output must be forced to the low end of span. If the setpoint is selected for transmission (CTRL PAGE, ROUT = RSP) this can be done by adjusting the setpoint to the low end of span (i.e. J T/C = -100°F).
2. Go to menu R0 0. Adjust the Analog Output (using ▲ and ▼) until the meter reads 4mA or 1.000 Vdc.

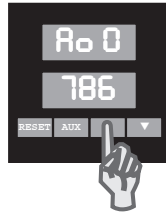

Note: The number displayed in the lower display page is for reference only.

3. Go to menu R0 0 = RSP and adjust the setpoint to the high end of span (i.e., for J T/C = 1400°F).
4. Go to menu R0 5. Adjust Analog Output (using ▲ and ▼) until the meter reads 20mA or 5.000 Vdc.

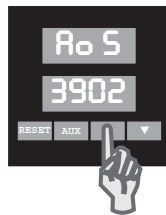

5. Press and hold **RESET** for 3 seconds to exit calibration mode.

Factory Calibration Recovery


This option allows you to return the controller to its factory calibration settings in the event that it is severely out of calibration due to poor technique or unauthorized calibration. Although the factory calibration settings are recovered, this does not guarantee original calibration accuracy. The Factory Calibration Recovery should be used as a “starting point” for recalibration, should the unit become severely out of calibration.

Factory Calibration Recovery is performed on the **MPt PAGE**, menu **rECc**.



To reestablish the factory calibration constants:

1. Disconnect load power.
2. Go to menu **rECc** and press **▲**. The controller will automatically recalibrate.

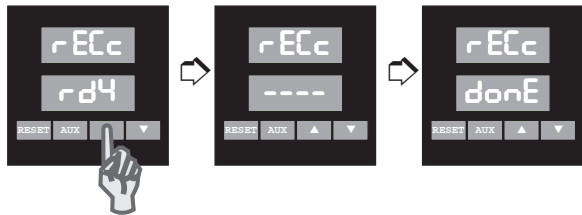

3. The lower display cycles from “----” to “done”. Press **RESET** to exit the calibration mode.

Display Calibration Offset

If an offset on the temperature reading is desired, the Display/Calibration Offset menu may be used. In some applications, this offset may be desired to match another instrument or an inferred temperature in another part of the system.

To establish the calibration offset:

1. Go to menu CoFF on the Input Page.



2. Use ▲ and ▼ to set the calibration offset, adjustable from -100 to 100°F.



Section 11

Specifications

Control Modes

Automatic	On/Off Proportional (P) PID-Proportional with Integral and/or Derivative (PID, PI, PD) PID + Fuzzy Logic Heat/Cool (Dual PID)
-----------	---

Control Adjustments

Control Setpoint	Sensor Range
Setpoint Limits	Sensor Range
Deadband	1 to 100°F
Proportional Band	Sensor Range
Manual Reset	-99.9 to 99.9
Automatic Reset	0.00 to 99.99 repeats per minute
Rate	0 to 500 seconds
Output Cycle Time	0.1 to 60.0 seconds
Output Limit	0.0 to 100.0%
Open Sensor & Out of Range	
Output Command	0.0 to 100.0%
Display Offset	-100 to 100°F

Heat/Cool Adjustments

Output Offsets	0 to 100% of Proportional Band
Cooling Medium	Air, Water or Oil

Alarm Adjustments

Setpoints	High and Low Settings for each Alarm Output
Alarm Types	Absolute: High, Low and High/Low Tracking: + Deviation, - Deviation and +/- Deviation
Relay Action	Latching or Non-Latching, Energized or De-Energized
Alarm Deadband	Adjustable, 0 to 100°F
Alarm Inhibit	On Power-Up, Enabled or Disabled

Control/Alarm Outputs

Relay	Total of five (5) Control/Alarm outputs possible Relay—Form A contacts, 1.0 Amps at 120/230 Vac (resistive)
Solid State Relay Drive	24 Vdc nominal at 40mA
Triac	1 Amp continuous, 10 Amp in-rush, at 120 or 230 Vac
Current/Voltage	4 to 20mA into 0 to 800Ω, field changeable to 1-5 Vdc

Output #5 (Optional)

Relay—N.O. Form C contact, 5A at 120 or 2.5A at 230 Vac (resistive)

Sensor Input

Field selectable Thermocouple, RTD, Current or Voltage

Input Update Rate

2 Samples per Second

Input Specifications	<u>Range °F</u>	<u>Range °C</u>	<u>Accuracy @ 77°F ambient</u>
J T/C	-100 to 1400	-73 to 760	± 0.2% of sensor span
K T/C	-300 to 2400	-184 to 1316	± 0.2% of sensor span
T T/C	-350 to 750	-212 to 399	± 0.2% of sensor span for PV > -80°C ± 0.4% of sensor span for PV < -80°C
E T/C	-100 to 1100	-73 to 593	± 0.2% of sensor span
R T/C	0 to 3200	-18 to 1760	± 0.4% of sensor span
S T/C	0 to 3200	-18 to 1760	± 0.4% of sensor span
B T/C	50 to 3300	10 to 1816	± 0.4% of sensor span for PV > 538°C
100Ω Pt RTD ($\alpha = .00385$)	-200 to 1000	-128 to 538	± 0.2% of sensor span
r-t-d-t (0.1° res.)	-99.9 to 899.9	-73.3 to 432.1	± 0.2% of sensor span
4-20mA	-500 to 5000 (programmable)		± 0.2% of sensor span
0-5 Vdc	-500 to 5000 (programmable)		± 0.2% of sensor span
1-5 Vdc	-500 to 5000 (programmable)		± 0.2% of sensor span
Transmitter Power			
+24 Vdc Output	+24 Vdc ±20% at 50mA maximum		
Ramp/Soak Programming			
Intervals	16 intervals		
Loops	1 loop, 0-255 times or continuous		
Event Outputs	Up to 3		
Guaranteed Soak			
Differential	Off, 1°F to sensor span		
Time Units	Seconds, Minutes, Hours (1 second to 99.99 hours/segment)		
Readout Stability			
J, K, E Thermocouple	±1°F/10°F change in ambient temperature		
T Thermocouple	±2°F/10°F change in ambient temperature for sensor temperature > -80°C ±5°F/10°F change in ambient temperature for sensor temperature < -80°C		
R, S, B Thermocouple	±2°F/10°F change in ambient temperature		
RTD	±0.5°F/10°F change in ambient temperature		
4-20mA, 1-5Vdc	±0.05% of span / 10°F change in ambient temperature		
Open Sensor and Out-of-Range Conditions	Programmable control action with display indicating condition "OPEN SENS"		
Remote Setpoint Input			
Input Signal	4-20mA, 250Ω Input Impedance 1-5 Vdc, 110kΩ Input Impedance Voltage or Current Field Selectable via switch		
Range	Programmable over selected Sensor Span		
Accuracy	±0.3% of Sensor Span (initial accuracy) at 75°F ambient temperature and rated line voltage. field calibrate to ±0.2% of Sensor Span		

Digital Input	Accepts dry-contact closure
Analog Output Option	
Assignable Functions	Process Variable Active Setpoint Output #1 Command Output #2 Command
Output Signal	4-20mA into 0-800Ω load 1-5 Vdc into 100KΩ or greater load Selectable via DIP switch
Range	Programmable over selected sensor span for retransmission of Process Variable and Active Setpoint, fixed to 0 to 100% for transmission of output commands
Accuracy	±0.2% of programmed span, ±1 LSD
Digital Communications (Optional)	
RS-232	Single-drop, isolated
RS-422/485	Multi-drop, isolated, field selectable by switch
Baud rates	1200, 2400, 4800, 9600, 19.2K
Protocols	ASCII Line, Computer Interface
Instrument Power	100 to 240 Vac, +10%, -15%; 12 to 24 Vac/Vdc, ±10%; 50 to 60 Hz
Operating Environment	32 to 150°F (0 to 65°C) ambient temperature, relative humidity less than 95%, non-condensing
Dimensions	
Overall	3.8 x 3.8 x 4.75 inches (96 x 96 x 121mm)
Depth Behind Projection	4.0 inches (102 mm)
Front Panel Projection	0.75 inches (19 mm)
Panel Cutout	3.6 x 3.6 inches (92 mm x 92 mm)
Case Material	High Impact, Black ABS Plastic
Front Panel	NEMA 4X Construction
Influence of Line Voltage Variation	±0.1% of Sensor Span/10% change in nominal line voltage
Noise Rejection	
Common Mode Noise	140dB at 60 Hz
Series Mode Noise	±0.1% of Sensor Span with 300mV peak to peak, 50 or 60Hz series mode noise
RFI	Typically less than 0.5% of Sensor Span at a distance of 1 meter (3.1 feet) from transmitter (4W, 464Mhz)

Sensor Leadwire Effect

J Thermocouple	+1°F for 1000 Ft. of 18 AWG extension wire
K Thermocouple	+5°F for 1000 Ft. of 18 AWG extension wire
E Thermocouple	+4°F for 1000 Ft. of 18 AWG extension wire
R Thermocouple	+3°F for 1000 Ft. of 18 AWG extension wire
S Thermocouple	+3°F for 1000 Ft. of 18 AWG extension wire
B Thermocouple	+6°F for 1000 Ft. of 18 AWG extension wire
T Thermocouple	+1°F (temperatures > -80°C) +2°F (temperatures < -80°C)
RTD, 4-20mA, 1-5 Vdc	±0.1% of Sensor Span/20Ω balanced leadwire resistance

Section 12 Troubleshooting

The following Troubleshooting Guide gives simple solutions to common problems, and explains the 2104's Error Messages. Should you have a problem with your controller, it is a good idea to check this Guide for possible corrections before contacting the factory. The corrections are listed in the order in which they should be performed.

Note: A specific List of Loop Alarms and probable causes are given on pages 55-57.

Troubleshooting Guide		
Symptom	Probable Cause	Correction
Power applied, display does not light and controller does not function	1. No power applied	1. Check power wiring and fusing 2. Power down and repower up
Display reads OPEN SENS	1. Open sensor 2. Out of calibration	1. Check sensor wiring (page 7) 2. Check sensor type selected at INPUT PASTE, SENS 3. Recover Factory Calibration (page 81) 4. Attach sensor simulator and verify calibration (page 76) 5. Check "Control Loop Protection" Alarm
Process does not heat up	1. No power being applied to the load	1. Verify output wiring (page 11) 2. Verify that load is not open and output jumpers are properly installed 3. Check "control type" entered at CTRL PASTE, CONT (Heat, Cool or Heat Cool) 4. Check "output limit" entered on OUTPUT/OUTPUT PASTE, OL1/OL2
Erratic operation	1. Intermittent sensor connections 2. Controller failure (internal electronics)	1. Check sensor wiring or substitute sensor simulator 2. Power down and repower up 3. Contact factory

continued on next page

Troubleshooting Guide

Symptom	Probable Cause	Correction
Process not in control	<ol style="list-style-type: none"> 1. Incorrect "control action" selected 2. Not tuned correctly 	<ol style="list-style-type: none"> 1. Check "control type" entered <code>Ctrl PRSE, Cont</code> 2. See Self-Tuning and PID settings, <code>Ctrl PRSE</code>
Instrument continually goes through power-up reset	<ol style="list-style-type: none"> 1. Internal electronic failure 2. Drastic power line anomalies 	<ol style="list-style-type: none"> 1. Contact factory
Err3 displayed with PRSE in lower display	<ol style="list-style-type: none"> 1. EEPROM failed redundancy check 	<ol style="list-style-type: none"> 1. Power down and back up to retest EEPROM 2. Set controller to Level D (736) Security Code. 3. Go to PRSE shown. Use RESET pushbutton to scroll through all menus. Readjust any settings that appear incorrect. After scrolling through all menus, error will clear.
Err4 displayed	<ol style="list-style-type: none"> 1. A to D electronics failure 	<ol style="list-style-type: none"> 1. Power down and up to reset 2. Consult factory
Err flashing on upper or lower display	<ol style="list-style-type: none"> 1. Self-tune was enabled, but unable to successfully tune because: <ol style="list-style-type: none"> a. process could not get 50°F below setpoint (for heating) or 50° above setpoint (for cooling) in 30 minutes b. over a 10 hour period, the process has not changed enough to initiate turning c. process went in and out of sensor range during tune. d. 2104 is unable to calculate PID parameters 	<ol style="list-style-type: none"> 1. Press RESET to clear error. Previous PID parameters are retained 2. Consult factory
Loop error	See pages 55-57	<ol style="list-style-type: none"> 1. Press RESET to clear error 2. Verify wiring and external devices

Warranty

Chromalox warrants only that the Products and parts manufactured by Chromalox, when shipped, and the work performed by Chromalox when performed, will meet all applicable specification and other specific product and work requirements (including those of performance), if any, and will be free from defects in material and workmanship under normal conditions of use. All claims for defective or nonconforming (both hereinafter called defective) Products, parts or work under this warranty must be made in writing immediately upon discovery, and in any event, within three (3) years from delivery, provided, however all claims for defective Products and parts must be made in writing no later than thirty-six (36) months after shipment by Chromalox. Defective and nonconforming items must be held by Chromalox's inspections and returned to the original f.o.b. point upon request. THE FOREGOING IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES WHATSOEVER, EXPRESSED, IMPLIED AND STATUTORY, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Limitations

Notwithstanding the provisions of this WARRANTY AND LIMITATIONS Clause, it is specifically understood that Products and parts not manufactured and work not performed by Chromalox are warranted only to the extent and in the manner that the same are warranted to Chromalox by Chromalox's vendors, and then only to the extent that Chromalox is reasonably able to enforce such a warranty, it being understood Chromalox shall have no obligation to initiate litigation unless buyer undertakes to pay all cost and expenses therefore including but not limited to attorney's fees, and indemnifies Chromalox against any liability to Chromalox's vendors arising out of such litigation.

Upon buyer's submission of a claim as provided above and in its substantiation, Chromalox shall at its option either (i) repair or replace its Products, parts or work at the original f.o.b. point of delivery or (ii) refund an equitable portion of the purchase price.

The foregoing is Chromalox's only obligation and buyer's exclusive remedy for breach of warranty, and is buyer's exclusive remedy against Chromalox for all claims arising hereunder or relating hereto whether such claims are based on breach of contract, tort (including negligence and strict liability) or other theories, buyer's failure to submit a claim as provided above shall specifically waive all claims for damages or other relief, including but not limited to claims based on latent defects. In no event shall buyer be entitled to incidental or consequential damages and buyer should hold Chromalox harmless therefrom. Any action by buyer arising hereunder or relating hereto, whether based on breach of contract, tort (including negligence and strict liability) or other theories, must be commenced within one (1) year after the date of shipment or it shall be barred.

Returns

Items returned to Chromalox Instruments and Controls must be accompanied by a Return Authorization Number. This number may be obtained from Chromalox Instruments and Controls, Customer Service Department, Telephone Number (615) 793-3900. It should appear on the exterior of the shipping carton and on the shipping documents. Defective items will be repaired or replaced at our option, at no charge.

Return the defective part or product, freight prepaid, to:

Chromalox Instruments and Controls
1382 Heil-Quaker Blvd.
LaVergne, TN 37086-3536

Appendix 1

PAGE/MENU Tables

Setup Page	PAGE Name	PAGE Contents
dSP	Display	Allows you to monitor any of 11 real time variables in the lower digital display; process variable; setpoint; outputs; timers and alarm status. This is useful during troubleshooting or brief trending periods. Values on this page are for display only and cannot be changed on this PAGE.
Ctrl	Control	Security Lock Setpoints Self Tune PID1 and PID2 Control Parameters Manual Reset Fuzzy Logic Output Commands Control Loop Protection (CLP) Auto/Manual Disintegration Timer Ramp Rate Controller Type Cooling Medium Event/Digital Function Auxiliary Pushbutton Function Analog Output assignment Ramp/Soak User Selected Security Code
inPt	Input	Sensor Type Display Units Display/Calibration Offset Setpoint Low Limit Setpoint Upper Limit
ScAL	Custom Scaling	Analog Input Decimal Points Analog Input Low Analog Input High Analog Output High Remote Setpoint Input Low Remote Setpoint Input High
Out1	Output #1	Output #1 Cycle Time Output #1 Limit Heat Offset
Out2	Output #2	Output #2 Cycle Time Output #2 Limit Heat Offset

Security Levels

See pages 26-27 for details.

Security Levels and PAGE/MENU Contents

Level	Code	Description
A	---	Display Page and Security Lock
B	123	Setpoint and Auxiliary Setpoint
C	458	Settings for: Control Input Ramp/Soak Digital Communications
D	736	Calibration Security Codes

Security Codes

Security Codes

Security <u>Level</u>	Security <u>Code</u>	View <u>Level</u>	Adjust <u>Level</u>
A	---	A	A
B	123	A, B	A, B
C	458	A, B, C	A, B, C
D	736	A, B, C, D	A, B, C, D

See pages 35-37 for details.

Control Page				
Menu	Description	Available Settings	Factory Settings	Security
LoCh	Security Lock	0 to 9999	458	A
SP	Setpoint	Instrument sensor span	Span Low	B
AuSP	Auxiliary SP	Instrument Sensor Span	Span Low	
tunE	Self Tune	OFF = Self tuning disabled PrUP = Powerup tuning BEgn = Begin tuning	OFF	C
Pb1	Proportional Band 1	0°F to sensor range	25°F	
Rr1	Automatic Reset 1	0.00 to 99.99 repeats/minute	0.10	
rRt1	Rate 1	0 to 500 seconds	10	
db1	Dead Band 1	1 to 100°F 0.01 to 6.25% span for analog inputs	5°F	
Pb2	Proportional Band 2	0°F to sensor range	25°F	
Rr2	Automatic Reset 2	0.00 to 99.99 repeats/minute	0.10	
rRt2	Rate 2	0 to 500 seconds	10	
db2	Dead Band 2	1 to 100°F 0.01 to 6.25% span for analog inputs	5°F	
OFSt	Manual Reset	-99.9 to 99.9	0.0	
FL	Fuzzy Logic	OFF = Disabled On = Enabled	On	
Grn9	Open Sensor Output Command	For Heat/Cool Control, adjustable: -100.0 to 100.0%: -100.0 to -0.1 for cooling 0.1 to 100.0 for heating	0.0%	
Loop	Control Loop Protection	OFF, 0.1 to 999.9 minutes	OFF	
Auto	Auto/Manual Disintegration Timer	0 to 100 seconds	10	
rRt	Ramp Rate	OFF	OFF	

Control Page

See pages 35-37 for details.

Control Page (continued)				
Menu	Description	Available Settings	Factory Settings	Security
Cont	Controller Type	HERt = Reverse Acting Output Controller	HERt	C
		COOL = Direct Acting Single Output Controller		
		HECt = Heat/Cool Controller		
COOL	Cooling Medium	Pid2 = Uses PID2 settings for cooling	Pid2	
		Air = Air Cooling		
		Oil = Oil Cooling H2O = Water Cooling		
rSP	Remote Setpoint Enable	OFF On	OFF	
Entt	Event/Digital Function	nonE = Disabled	nonE	
		Pid2 = PID2 enable		
		AuSP = Auxiliary SP enable		
		rSP = Remote SP enable		
		Outd = Output disable		
		rS = Ramp/Soak		
		Auto = Auto/Manual		
Alr = Alarm Reset				
Au	Auxiliary Pushbutton Function	nonE = Disabled	nonE	
		Pid2 = PID2 enable		
		AuSP = Auxiliary SP enable		
		rSP = Remote SP enable		
		Outd = Output disable		
		Auto = Auto/Manual		
Proc	Analog Output Assignment	nonE = Disabled	RSP	
		Proc = Process Variable		
		RSP = Active Setpoint		
		Out1 = Control Output !		
		Out2 = Control Output 2		
rSEn	Ramp/Soak	OFF On	OFF	
Code	User Selected Security Code	0-122 = Level A	0	D
		123-457 = Level B		
		458-735 = Level C		
		736-999 = Level D		

See pages 41-45 for details.

Ramp/Soak Page				
MENU	Description	Available Settings	Factory Settings	Security
unit	Time Units	SEc = seconds (1 to 9999) min = minutes (0.1 to 999.9) hr = hours (0.01 to 99.99)	SEc	C
Stb4	Standby Setpoint	Instrument Sensor Span	Span Low	
int1	Interval 1 Time	see Time Units Menu (above)	0	
SP1	Setpoint 1 • Intervals 2-15 • Time and Setpoint	Instrument Sensor Span	Span Low	
int16	Interval 16 Time	see Time Units Menu (above)	0	
SP16	Setpoint 16	Instrument Sensor Span	Span Low	
Cont	Continuous Program	OFF On	OFF	
Fro	Loop from the end of interval	1 to 16	1	
to	To the beginning of interval	1 to 16	1	
no	Number of times	0 to 9999	0	
StbEt	Standby Events	OFF = All off E3 = Event Output 3 On E4 = Event Output 4 On E43 = Event Outputs 4 & 3 On E5 = Event Output 5 On E53 = Event Outputs 5 & 3 On E54 = Event Outputs 5 & 4 On E543 = Event Outputs 5, 4, 3 On	OFF	
int1E	Interval 1 Events	OFF = All off E3 = Event Output 3 On E4 = Event Output 4 On E43 = Event Outputs 4 & 3 On E5 = Event Output 5 On E53 = Event Outputs 5 & 3 On E54 = Event Outputs 5 & 4 On E543 = Event Outputs 5, 4, 3 On	OFF	
int16E	Interval 16 Events	same as above	OFF	
GSdb	Guaranteed Soak differential	OFF, 1°F to sensor range	0°F	

Input Page

See page 38 for details.

Input Page		Available Settings	Factory Settings	Security
SEnS	Sensor Type	Sensor Type selected here must agree with dip switch settings. J = J Thermocouple K = K Thermocouple T = T Thermocouple E = E Thermocouple R = R Thermocouple S = S Thermocouple B = B Thermocouple RTD = 100Ω Pt RTD (a = .00385) 4-20 = 4 to 20mA 0-5 = 0 to 5 Vdc 1-5 = 1 to 5 Vdc rtdt = 100Ω Pt RTD (0.1° resolution)	J	C
unit	Display Units	noE = no units °F = Degrees Fahrenheit °C = Degrees Celsius	°F	
CoFF	Display/ Cal. Offset	-100°F to 100°F	0	
SPLL	Setpoint Low Limit	Instrument Sensor Span	Span Low	
SPUL	Setpoint Upper Limit	Instrument Sensor Span	Span High	
CALS	Sensor Calibration	inLo inHi donE	inLo	D
CALr	Remote Setpoint Calibration	inLo inHi donE	inLo	
RoO	Analog Output Zero Calibration	0 to 4095		
RoS	Analog Output Span Calibration	0 to 4095		
rECc	Factory Calibration Recovery	rdY = Ready --- = Wait donE = Finished		
FLt	Digital Filter	0 to 60 seconds		
hPrC	High (max.) Process Input	Instrument Sensor Span		
LPrc	Low (min.) Process Input	Instrument Sensor Span		
hiA	High (max.) Ambient Temp.	Instrument Sensor Span		
LoA	Low (min.) Ambient Temp.	Instrument Sensor Span		

Custom Scaling Page

See page 39 for details.

Custom Scaling Page

<u>MENU</u>	<u>Description</u>	<u>Available Settings</u>	<u>Factory Settings</u>	<u>Security</u>
DP	Analog Input Decimal Pts.	0 = none 1 = 123.4 2 = 12.34 3 = 1.234	1	C
PinL	Analog Input Low	-500 to 5000	0.0	
PinH	Analog Input High	-500 to 5000	100.0	
PotL	Analog Output Low	-500 to 5000	Span Low	
PotH	Analog Output High	-500 to 5000	Span High	
rSPL	Remote SP Input Low	-500 to 5000	Span Low	
rSPH	Remote SP Input High	-500 to 5000	Span High	

Output #1 Page

See page 39 for details.

Output #1 Page

<u>MENU</u>	<u>Description</u>	<u>Available Settings</u>	<u>Factory Settings</u>	<u>Security</u>
[4c]	Output #1 Cycle Time	0.0 to 60.0 seconds	1.0*	C
OL1	Output #1 Limit	0.0 to 100.0%	100.0%	
HoFF	Heat Offset	0°F to PB1 setting	0	

* For 2104-A (voltage or current output) cycle time must be set to 0.0.

Output # 2 Page

See page 39 for details.

Output #2 Page

<u>MENU</u>	<u>Description</u>	<u>Available Settings</u>	<u>Factory Settings</u>	<u>Security</u>
04c2	Output #2	0.0 to 60.0 seconds 0.0 = Voltage/Current algorithm	1.0	C
0L2	Output #2 Limit	0.0 to 100.0%	100.0%	
H0FF	Heat Offset	0°F to PB1 setting	0	

Output # 3 Page

See page 50 for details.

Output #3 Page

<u>MENU</u>	<u>Description</u>	<u>Available Settings</u>	<u>Factory Settings</u>	<u>Security</u>
04P3	Output #3 Type	0FF = Disabled Al r = Alarm Output EnE = Event Output (Setup Event Output parameters on Ramp/Soak Page)	0FF	C
Al r3	Alarm #3 Type	nonE = Disabled (off) Hi = High Alarm Lo = Low Alarm HiLo = High-Low Alarm PdE = Plus Deviation Alarm -dE = Minus Deviation Alarm dE = Plus/Minus Deviation Alarm Loop = Control Loop Protection Alarm	nonE	
rLY3	Alarm #3 Relay Action	ndE = Normally de-energized non-latching nE = Normally energized non-latching ndEL = Normally de-energized latching nEL = Normally energized latching	ndE	

See page 50 for details.

Output #3 Page (continued)

<u>MENU</u>	<u>Description</u>	<u>Available Settings</u>	<u>Factory Settings</u>	<u>Security</u>
Al 3	Alarm #3 Low Setpoint	Instrument Sensor Span	Span Low	C
Al 3	Alarm #3 High Setpoint	Instrument Sensor Span	Span High	
db 3	Output #3 Dead Band (Alarm Hysteresis)	0 to 100°F	1°F	
inh 3	Alarm #3 Inhibit	OFF On	OFF	

See page 51 for details.

Output #4 Page

<u>MENU</u>	<u>Description</u>	<u>Available Settings</u>	<u>Factory Settings</u>	<u>Security</u>
EP 4	Output #4 Type	OFF = Disabled Al r = Alarm Output En t = Event Output (Setup Event Output parameters on Ramp/Soak Page)	OFF	C
Al r 4	Alarm #4 Type	nonE = Disabled (off) Hi = High Alarm Lo = Low Alarm HiLo = High-Low Alarm PdE = Plus Deviation Alarm -dE = Minus Deviation Alarm dE = Plus/Minus Deviation Alarm Loop = Control Loop Protection Alarm	nonE	

Output # 4 Page

See page 51 for details.

Output #4 Page (continued)				
MENU	Description	Available Settings	Factory Settings	Security
rL44	Alarm #4 Relay Action	ndE = Normally de-energized non-latching nE = Normally energized non-latching ndEL = Normally de-energized latching nEL = Normally energized latching	ndE	C
Rd44	Alarm #4 Low Setpoint	Instrument Sensor Span	Span Low	
Rh44	Alarm #4 High Setpoint	Instrument Sensor Span	Span High	
db44	Output #4 Dead Band (Alarm Hysteresis)	0 to 100°F	1°F	
ri44	Alarm #4 Inhibit	OFF On	OFF	

Output # 5 Page

See page 52 for details.

Output #5 Page				
MENU	Description	Available Settings	Factory Settings	Security
t4P5	Output #5 Type	OFF = Disabled Ri r = Alarm Output EoE = Event Output (Setup Event Output parameters on Ramp/Soak Page)	OFF	C
Ri r5	Alarm #5 Type	nonE = Disabled (off) Hi = High Alarm Lo = Low Alarm HiLo = High-Low Alarm PdE = Plus Deviation Alarm -dE = Minus Deviation Alarm dE = Plus/Minus Deviation Alarm LoopP = Control Loop Protection Alarm	nonE	

See page 52 for details.

Output #5 Page (continued)

MENU	Description	Available Settings	Factory Settings	Security
rL45	Alarm #5 Relay Action	n̄dE = Normally de-energized non-latching nE = Normally energized non-latching n̄dEL = Normally de-energized latching nEL = Normally energized latching	n̄dE	C
Roi 5	Alarm #5 Low Setpoint	Instrument Sensor Span	Span Low	
Rhi 5	Alarm #5 High Setpoint	Instrument Sensor Span	Span High	
db5	Output #5 Dead Band (Alarm Hysteresis)	0 to 100°F 0.00 to 6.25% for analog input	1°F	
nh5	Alarm #5 Inhibit	OFF On	OFF	

See page 52 for details.

Digital Communications Page: d9 PAGE

MENU	Description	Available Settings	Factory Settings	Security
d9t	Mode Selection	OFF = Disabled CPiF = Computer Interface LinE = ASCII Line	CPiF	C
bAud	Baud Rate	1200 2400 4800 9600 19.2K	19.2K	
Raddr	Address	1 to 255	1	

Display Page

The Display Page is for status only.
None of the settings can be changed.

See page 34 for details.

Display Page			
MENU	Description	Displays	Security
Proc	Process Variable	Sensor Span	A
RSP	Active Setpoint	Sensor Span	
Out1	Output #1 Command	0.0 to 100.0%	
Out2	Output #2 Command	0.0 to 100.0%	
rSP	Remote Setpoint Input	Sensor Span	
rS	Ramp/Soak Status	OFF = Program not running run = Program running Hold = Program in hold Stby = Program in standby 9S = Guaranteed soak	
int	Ramp/Soak Interval Number	0 - 16	
LEft	Ramp/Soak Time Left in Interval	0.0 to 999.9 hr/min/sec	
Loop	Ramp/Soak Loops Remaining	0 - 9999	
Al r	Alarm Output Status	None = No alarms A3 = Alarm Output #3 A4 = Alarm Output #4 A43 = Alarm Outputs #4 and #3 A5 = Alarm Output #5 A53 = Alarm Outputs #5 and #3 A54 = Alarm Outputs #5 and #4 A543 = Alarms 5, 4 and 3	
Ent	Event Output Status	None = All off E3 = Event Output #3 E4 = Event Output #4 E43 = Event Outputs #4 and #3 E5 = Event Output #5 E53 = Event Outputs #5 and #3 E54 = Event Outputs #5 and #4 E543 = Events 5, 4 and 3	

Index

- Accuracy 7, 8, 81, 85
- Alarm Inhibit 48, 50, 51, 52, 83
- Alarm Operation 49
- Alarm Outputs 34, 47, 51, 83
- Alarms
 - Control Loop Protection (see Control Loop Protection Alarm)
 - Latch/Non-Latching 49-52, 63, 83
 - Low Alarm 1, 41, 50-52
 - Reset 22, 49
 - Wiring 19-20
- Analog Output Option 2, 67-70, 80, 85
- Applications 1, 29, 61, 82
- Auto/Manual 10, 22, 36, 37, 59, 60, 63, 65
- Auto Tuning, see Self-Tuning

- Calibration 75-82
- Calibration
 - Analog Output 80
 - Factory Recovery 81
 - Offset 38, 82
 - Remote Setpoint Input 78
 - Security Codes 26
 - Sensor Input 76
- ChromaSoft 1, 45, 71
- Control Loop Protection Alarm (CLP) 50-57
- Control Parameters 23, 26, 28
- Control Programming 21-22, 24-25
- Cycle Time 39, 83

- Digital Communications 1, 2, 71-74
 - Hardware Setup 71-72
 - Programming 74
 - Wiring 72-73
- Digital Input 1, 7, 30, 31, 35, 36, 45, 49, 59-63, 67, 85
- Dimensions 5, 85
- Dip Switches 3
 - Analog Output 69
 - Digital Communications 72
 - Remote Setpoint 67
 - Sensor Input 4
- Displays 21-25, 34, 35, 56, 57, 87-88
- Display Mode, Normal 21, 22, 44-46

- Error Messages 87-88

Fuzzy Logic 30, 36

Indications 21

Input Type 4, 36

Inputs, Sensor 1, 8-10, 76

Installation 3

Jumpers, Output 11-14, 17

Manual Operation 31, 63, 65

Menu Selection 24

Model Identification 2

Mounting 4-5

Operation 21-31

Alarm 49

Auto/Manual 63, 65

Control 28-31

Erratic 87

Manual 31

Ramp/Soak 10, 41-45, 62

Output #1 1, 11-14, 16-18, 22, 28, 33-35, 39, 69, 70, 85

Output #2 1, 11, 14, 16-18, 22, 28, 33-35, 39, 69, 70, 85

Output #3 7, 19, 23, 34, 41, 43, 47-50, 54-57

Output #4 1, 7, 19, 23, 34, 41, 43, 48, 49, 55-57

Output #5 7, 20, 23, 34, 41, 43, 47-49, 52, 55-57, 61, 63, 83

Output, Analog 69-70

Output, Alarm Relays 49-52

Output Wiring 6, 11, 13, 15-18, 70, 87

PAGE

Control 26, 28, 35-37

Custom Scaling 39, 68

Digital Communications 74 (see Digital Communications in this index)

Display 26, 34 (see Display and Displays in this index)

Input 38

Output #1 39 (see Output #1 in this index)

Output #2 39 (see Output #2 in this index)

Output #3 50 (see Output #3 in this index)

Output #4 51 (see Output #4 in this index)

Output #5 52 (see Output #5 in this index)

Ramp/Soak 43 (see Ramp/Soak in this index)

PID1 22, 28, 29, 35, 59-61

PID2 22, 28, 29, 35-37, 59-61

Pushbuttons 21-31

- Ramp/Soak 10, 26, 28, 31, 33, 34, 36, 37, 50-52, 59-64
 - Operation 22, 41-45
 - Programming 41-42, 44-45, 84
- Ramp to Setpoint 28, 30
- Remote Setpoint 3, 22, 30, 36, 59-61, 64, 78-79, 84
- Repair 89-90
- Reset Pushbutton 22, 24, 49
- RTD Inputs 76
 - Calibration 76
 - Wiring 8-9

- Security Codes 26, 27, 35
- Security Levels 26, 27
- Self-Tuning 29, 88
- Sensor
 - Setup, Menu 38
 - Wiring 7-10, 56, 87
- Setpoint
 - Ramp 28, 30
 - Remote (see Remote Setpoint in this index)
- Setup Mode 22, 24, 27
- Specifications 83-86

- Thermocouple Inputs 8, 76
- Timer
 - Loop 36, 53, 55-57
- Troubleshooting 87-88
- Tuning
 - Self (see Self-Tuning in this index)

Warranty 89-90

Wiring

Alarm 19-20

Current Input Wiring (Loop Powered by Controller) 10

Current Input Wiring (Self powered) 9

Digital Communications 72-73

Digital Input 10

Dual Analog Output Wiring 16

Dual Output Analog/Relay Wiring 18

Dual Output Analog/Triac Wiring 18

Dual Output SSR/Relay Wiring 17

Dual Output SSR Triac Wiring 17

Dual Relay Output Wiring 16

Dual SSR Drive Output Wiring 16

Dual Triac Output Wiring 16

Dual 1-5 Vdc Output Wiring 17

Good Wiring Practices 6

Heat/Cool Output 16-18

Instrument Power 19

Output 16-17, 48

Remote Setpoint 68

RS232 Wiring Connections 72

RS422A Wiring Connections (4-wire) 73

RS485 Wiring Connections (2-wire) 73

Sensor (see Sensor Wiring in this index)

Terminal Identification 7

Voltage Input Wiring (Self-powered) 10

Chromalox[®]

INSTRUMENTS AND CONTROLS
1382 HEIL QUAKER BOULEVARD
LAVERGNE, TN 37086-3536

PHONE (615) 793-3900
FAX (615) 793-3563

WIEGAND INDUSTRIAL DIVISION
EMERSON ELECTRIC CO.

