



Illinois
Instruments, Inc.

**SERIES 910 AND 930
OXYGEN MONITOR
*OPERATOR'S INSTRUCTION
MANUAL***

CONTENTS

	Page
1. PREFACE	1
2. INTRODUCTION	2
3. WARRANTY	4
4. PRINCIPLE OF OPERATION	6
5. SPECIFICATION	7
6. INSTALLATION	8
7. USING THE INSTRUMENT	11
8. INSTRUMENT OPERATION	12
9. PROGRAMME CODES	17
10. CALIBRATION	19
11. RS 232/485 COMMS PORT	22
12. OPTIONAL FACILITIES	24
13. FAULT MESSAGES/ALARMS	25
14. REPLACING THE MEASURING CELL	26
15. SPARE PARTS	28
 DRAWINGS: B 900 062 B 900 022	

1. PREFACE

The 900 series of oxygen monitors can exist in a number of standard variations and these are covered in this manual.

The instrument has been designed in such a way that sub-variations to customers specific requirements may be provided. Where these have been included, this manual has been appended.

We are always trying to improve our product, of which this manual is part and so we would greatly appreciate any information you can give us of any difficulties you may encounter with the monitor or the manual.

IMPORTANT

Please read this manual before attempting to install or operate the equipment.

The equipment should be electrically connected and grounded in accordance with the instructions attached to the power cord and in accordance with good standard practice.

In some variations, the instrument is provided with a dual voltage IEC inlet connector. Please refer to the Introduction and Installation sections of this manual.

**No responsibility is accepted by Illinois Instruments, Inc.
for accidents resulting from improper use of this equipment.**

All service and technical enquiries are covered from our factory in Thame, Oxfordshire, where we will endeavour to give a quick and helpful response to all queries.

The factory address details are:

Illinois Instruments, Inc.
2401 Hiller Ridge Road
Johnsburg, IL 60050
USA

Tel: +815-344-6212

Tel: +815-344-6332

2. INTRODUCTION

The 900 Series of instruments may be supplied in three types of cabinet/housing and may use any one of four measuring cells, suitable for different applications.

The instrument may also be fitted with other customer specified options.

Please refer to Table 1 for the specification code.

When particular attention should be given in this manual to a particular configuration the paragraph will be preceded with a configuration specification

i.e.

91X

 = Panel/Bench mounting

9X1

 = Trace analysis

TABLE 1

Series 900 Oxygen Analyzers

	9	
Cabinet - Mounting		
Panel or bench mounting	1	
Wall mounting IP66/Nema 4x	2	
Rack mounting (*Note 1)	3	
Configuration		
% analysis		0
Trace analysis		1
Ultra low trace analysis		2
RACE		3

* Note 1 Rack is 19" 4U high. The rack provides a housing for 1 or 2 analyzers. Please contact Illinois Instruments, Inc. for pricing for a 2 analyzer rack.

3. WARRANTY

Instrument

The instrument is guaranteed for a period of one year from its delivery to the purchaser, covering faulty workmanship and replacement of defective parts. This assumes fair wear and tear and usage specified on the data sheet. It does not cover routine calibration and housekeeping. Illinois Instruments, Inc. are happy to quote for routine servicing of the equipment at the customer's premises.

We maintain comprehensive after sales facilities and the instrument should be returned to our factory for repairing or servicing if this is necessary.

The type and serial number should always be quoted, together with full details of any fault.

Warranty repair or replacement will be made without charge, noting the above comments. Equipment must be shipped prepaid after return authorisation has been obtained.

Measuring Cells

Important - See Note Below

a) Percent Cells

Percent cells have a warranty of 3 years from the date of supply. Cells measuring oxygen concentrations of less than 10% should have a lifetime of 5 years +.

b) Trace Cells

Standard trace cells have a warranty of six months from the date of supply. Cells measuring oxygen concentrations of less than 100ppm should have a lifetime of 4 years +.

c) Ultra Low Trace Cells

Ultra low cells have a warranty of six months from the date of supply. Cells measuring oxygen concentrations of less 10ppm should have a lifetime of 5 years +.

d) Race™ Cells

Race cells have a 3 year limited warranty, that is if a cell should be returned after 2 years the customer will be credited with 33% of the cost of a new cell at the time of replacement. Race cells used on trace analysis should last 4 years +.

NOTE

Most cells that do not last their expected lifetime fail because:-

 
1. The isolation valves on the analyzer are left open, causing ingress of high ambient oxygen levels.
2. The cell has been ruptured caused by high pressure, either because the inlet valve has been opened before the outlet valve in presenting the sample gas to the analyzer or because the outlet valve has been closed first before the inlet valve. Ruptured cells can be confirmed by electrolyte solution seeping from the inlet/outlet pipes or by blackening of the same pipes.

MISUSE OF THE CELL IS NOT COVERED BY WARRANTY


4. PRINCIPLE OF OPERATION

The detector contains an anode, electrolyte and an air cathode to which the diffusion of Oxygen is limited by a diffusion barrier. At the air cathode Oxygen is reduced to Hydroxyl ions which in turn oxidise the metal anode.

The following reaction takes place at the cathode:



and at anode

 

and the complete chemical reaction is represented by



5. SPECIFICATION

RANGES:	<input type="checkbox"/> 9X0	0.01% - 100% Autoranging		
	<input type="checkbox"/> 9X1	0.1ppm - 30% Autoranging		
	<input type="checkbox"/> 9X2	0.01ppm - 30% Autoranging		
	<input type="checkbox"/> 9X3	0.1ppm - 30% Autoranging		
DISPLAY:	4 Digit high visibility LED			
RESPONSE TIME:	<input type="checkbox"/> 9X0	90% indication in less than 30 seconds		
	<input type="checkbox"/> 9X1	90% indication in less than 30 seconds		
	<input type="checkbox"/> 9X2	90% indication in less than 30 seconds		
	<input type="checkbox"/> 9X3	Air to less than 20ppm in 2 minutes		
ACCURACY:	<input type="checkbox"/> 9X0	0-20%, $\pm 0.05\%$, 0-100%, $\pm 0.1\%$		
	<input type="checkbox"/> 9X1	<input type="checkbox"/> 9X2	<input type="checkbox"/> 9X3	$\pm 2\%$ of reading
SUITABLE GASES:	<input type="checkbox"/> 9X0	All gases except corrosive gases		
	<input type="checkbox"/> 9X1	<input type="checkbox"/> 9X2	<input type="checkbox"/> 9X3	All gases except corrosive and/or acidic gases
AMBIENT TEMPERATURE:	-5°C to 50°C			
SAMPLE PRESSURE:	0.25 BAR - 2 BAR			
DIMENSIONS:	Refer to the drawings at the rear of the manual.			

6. INSTALLATION

Instrument Installation

The instrument is offered in bench/panel mount or rack mount and dimensional drawings should be referred to at the rear of the manual.

Panel mount brackets may be ordered with the bench/panel mount analyzer.

Gas Installation

The instrument can be used to measure oxygen concentrations other than ambient which is 20.9%. If the application is the measurement of percent oxygen, then the instrument may be connected with plastic/nylon/ptfe tubing otherwise all fittings and sample lines to the instrument should be high integrity so ensuring no ambient air is allowed to leak into the system.

It is recommended that stainless steel or copper lines be used for the sample inlet.

If a vent line (sample outlet) is fitted then this may be of nylon piping or similar, but should be installed such that no back pressure may build up due to a restricted outlet.

The inlet and outlet pipe size is 1/8 inch compression (standard).

The two valves on the gas chassis serve to seal off the instrument from the sample and the sample inlet valve will also serve as a flow regulator valve.

When the supply of sample gas has been connected to the instrument, the cell outlet valve should be opened fully, then the sample inlet valve should be opened sufficient to obtain a desirable flow: approximately 100-150cc/min will be adequate. Too high a flow rate will pressurise the measuring cell and cause an error in the reading for some time.

Conversely, the instrument can be disconnected from the sample by first shutting the sample inlet valve and then shutting the sample outlet valve. In other words at no time should the instrument be pressurised with the sample inlet pressure.

Important

9X1

9X2

Sample lines and upstream pressure regulators should be thoroughly purged before connecting to the analyzer. If a bypass flowmeter and adjustment valve has been fitted to the instrument, then the purging can be achieved easily before the isolation valves opened.

Pressure Regulation

There is no need to regulate the pressure upstream from the analyzer unless it is either above 2 Bars or can fluctuate wildly, thereby changing the flow through the instrument.

However, if one is measuring low ppm oxygen and a pressure regulator is necessary, then only a high quality regulator will suffice (see spare parts.)


If however, the pressure of the sample gas is below 0.25 Bar and is not enough to pass a sample through the analyzer, then a pump will be required and the same comments are applicable as above. Consult Illinois Instruments, Inc. for advice.

Electrical Installation

91X

93X

The IEC inlet power receptacle is provided with an adapter block to change power from 110/115V to 220/230V. Please ensure the block is fitted to suit the input power. See drawing below. If necessary, reverse the adapter using a screwdriver to withdraw the adapter.

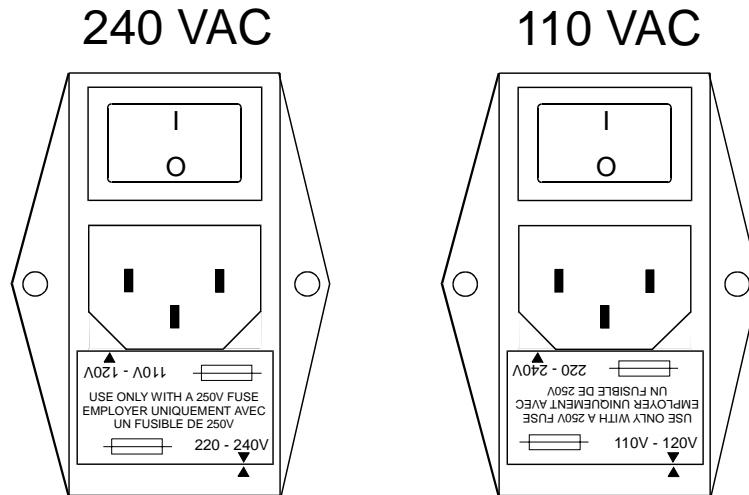


DO NOT SWITCH ON UNTIL YOU READ THE NEXT SECTION - USING THE INSTRUMENT

7. USING THE INSTRUMENT

Start-Up

1. Ensure the sample gas lines have been closed and purged with the advice given in section 6, Installation.
2. Ensure that the sample pressure is within the specification limits.
3. Ensure the power supplied is correct to the configuration.
4. Apply power. All segments of the LED's on the display will light and then read the software version i.e. C2.18. If there are any faults the display will alternate between a display of oxygen and the fault message. Refer to the Section 13 for explanation of fault messages.

8. INSTRUMENT OPERATION

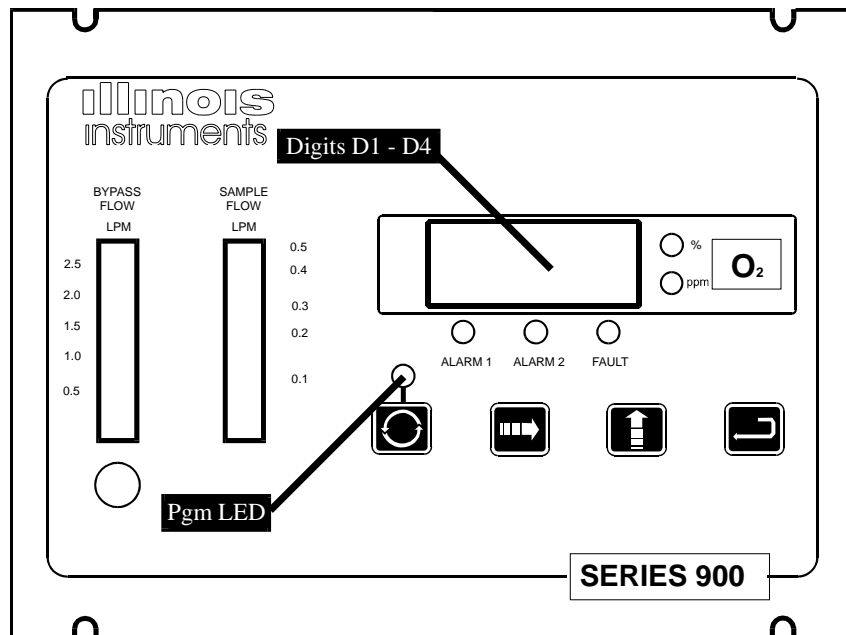

The instrument is controlled through the LED display and the four digit keypad or via the RS232 communication port.


 


The instrument normally reads the oxygen concentration of the sample gas either in ppm or % (whichever LED is on) when the instrument is powered up.

The other mode is the programming mode and this is accessed by pressing this button



When pressed the LED above it turns on. When the instrument is in the programming mode, if no button is pressed for 5 minutes, the instrument will revert to the normal measurement mode.

FRONT PANEL GUIDE

COMPONENT	FUNCTION	OPERATION
 Programmable Scroll	Used to scroll through and if required change the instrument set up.	Press to select the required Data Table. First press displays the function code. After 1 second the data relating to code is displayed. If the key is pressed before 1 second then the next function code is shown. Continue to press the button until all programme values have been accessed and until -O2- is shown when the display will revert to the measurement of oxygen.
 Digit Select	Selects display digit required to be changed.	Selection is indicated by flashing digit, first press selects D1 and successive presses selects all digits, decimal points and %, ppm LEDs.
 Digit Increment	Increments selected display digit.	Each press steps selected digit through complete numerical range.
 Enter	Enters new data into memory for that function.	Press once to reset the display, after 1 second the display shows stor to indicate it has accepted the entry (otherwise it will show err) or some other fault message.
D1 to D4	Displays 0 to 9 and/or decimal point.	Display set by selecting appropriate digit, then digit increment.
PGM LED	When on, indicates instrument in set up mode.	
ALARM 1	Indicates Alarm 1 status.	Turned on indicates Relay 1 deenergised and in alarm condition.
ALARM 2	Indicates Alarm 2 status.	Turned on indicates Relay 2 deenergised and in alarm condition.
FAULT	Indicates fault status.	Turned on indicates fault relay energised and in alarm condition.
%	Display measured valued is oxygen by volume.	
Ppm	Display measured value is parts per million by volume.	

DATA TABLE PROGRAMMABLE FUNCTIONS

Further information on Programme Codes can be found in the section PROGRAMME CODES.

9X0

DISPLAY	FUNCTION
AL1*	Sets the numerical value for the first alarm point and % or ppm.
AL2*	Sets the numerical value for the second alarm point and % or ppm.
OL*	Sets the configuration of alarm 1 and alarm 2, i.e. high/low, low/high, low/low or high/high. Also sets whether the alarms are latched or unlatched.
OPH*	Sets the analogue output high value.
OPL*	Sets the analogue output low value.
SPn1#	Shows read only value of span for cell 1 (ppm) normally in the range 0.010 to 0.300
SPn2#	Shows read only value of span for cell 2 (%) normally in the range 0.050 to 0.200
CAL	Sets the calibration of the analyzer to the correct value to agree with a known sample gas, plant gas, air or certified cylinder.
ACAL*	Sets the value of oxygen for the autocalibrate function.
Acd*	Sets the automatic unattended delay time for the autocalibrate function. A display of 0 shows the feature has not been fitted or is switched off. Units are hours.
LIFE	Displays a value which equates to the remaining lifetime of the cell.
-O2-	Final message before the instrument reverts back to oxygen measurement.

* Items are displayed but will not function unless this option has been purchased.

Should you require assistance from a Illinois Instruments, Inc. engineer, please note these values for diagnostic purposes.

9X1

9X2

DISPLAY	FUNCTION
AL1*	Sets the numerical value for the first alarm point and % or ppm.
AL2*	Sets the numerical value for the second alarm point and % or ppm.
OL*	Sets the configuration of alarm 1 and alarm 2, i.e. high/low, low/high, low/low or high/high. Also sets whether the alarms are latched or unlatched.
OPH*	Sets the analogue output high value.
OPL*	Sets the analogue output low value.
SPn1#	Shows read only value of span for cell 1 (ppm) normally in the range 0.010 to 0.300
SPn2#	Shows read only value of span for cell 2 (%) normally in the range 0.050 to 0.200
CAL	Sets the calibration of the analyzer to the correct value to agree with a known sample gas, plant gas, air or certified cylinder.
ACAL*	Sets the value of oxygen for the autocalibrate function.
Acd*	Sets the automatic unattended delay time for the autocalibrate function. A display of 0 shows the feature has not been fitted or is switched off. Units are hours.
LIFE	Displays a value which equates to the remaining lifetime of the cell.
GAS	Sets the molecular weight of the carrier (background) gas.
-O2-	Final message before the instrument reverts back to oxygen measurement.

* Items are displayed but will not function unless this option has been purchased.

Should you require assistance from a Illinois Instruments, Inc. engineer, please note these values for diagnostic purposes.

9X3

DISPLAY	FUNCTION
AL1*	Sets the numerical value for the first alarm point and % or ppm.
AL2*	Sets the numerical value for the second alarm point and % or ppm.
OL*	Sets the configuration of alarm 1 and alarm 2, i.e. high/low, low/high, low/low or high/high. Also sets whether the alarms are latched or unlatched.
OPH*	Sets the analogue output high value.
OPL*	Sets the analogue output low value.
SPn1#	Shows read only value of span for cell 1 (ppm) normally in the range 0.010 to 0.090
SPn2#	Shows read only value of span for cell 2 (%) normally in the range 0.010 to 0.090
SPH1	Adjusts the calibration high point to the correct value to agree with the plant gas, air or certification cylinder. The gas should be in the range 1%-25%.
SPLO	Adjusts the calibration low point to the correct value to agree with the plant gas, air or certification cylinder. The gas should be in the range of 10-1000ppm.
ACAL*	Sets the value of oxygen for the autocalibrate function.
Acd*	Sets the automatic unattended delay time for the autocalibrate function. A display of 0 shows the feature has not been fitted or is switched off. Units are hours.
LIFE	Displays a value which equates to the remaining lifetime of the cell.
GAS	Sets the molecular weight of the carrier (background) gas.
-O2-	Final message before the instrument reverts back to oxygen measurement.

* Items are displayed but will not function unless this option has been purchased.

Should you require assistance from a Illinois Instruments, Inc. engineer, please note these values for diagnostic purposes.

9. PROGRAMME CODES

OL This function returns a two digit code to read and set up the alarm configuration.

The left hand digit sets up the alarm configuration.

DIGIT	FUNCTION	
	ALARM 1	ALARM 2
0	Low	Low
1	High	Low
2	Low	High
3	High	High

The right hand digit sets up whether the alarms are latched or unlatched.

An unlatched alarm is one where if the measured value goes into an alarm state, then some time shortly afterwards goes out of an alarm state, the relay and LED will only change over for that duration. For remote operation it may be required for the operator to know that while left unattended the analyzer had seen an alarm condition, even though the measured value was now normal. Latching the relay remains on until it is manually or remotely reset. When an alarm is set to Latched the LED will be on when in alarm condition. However, should the measured value go into a non-alarm condition, then the LED will flash on and off to show that it had been in an alarm condition. (Note: the contacts on the relay will remain switched). Simply pressing the ENTER button will reset the alarm. It can be remotely reset using a RS232 command.

DIGIT	FUNCTION	
	ALARM 1	ALARM 2
0	Unlatched	Unlatched
1	Latched	Unlatched
2	Unlatched	Latched
3	Latched	Latched

OPH The level of oxygen corresponding to the maximum level of the analogue output may be set in this mode. However, certain restrictions apply to different configurations.

9X0	not less than 1%	
9X1	9X3	not less than 10ppm
9X2	not less than 1ppm.	

ACD If the autocalibrate option is fitted, every x hours the calibration gas will automatically be fed to the measuring cell and after a few minutes the analyzer will self calibrate. Acd is set in hours to reflect x. Autocalibrating on a weekly basis would mean an Acd of 168 hours. A setting of 0 means the feature is turned off.

GAS With some configurations the balance/background gas will have an effect on the calibration of the analyzer. An instrument set up correctly to measure oxygen in nitrogen will not read correctly on oxygen and argon. This calibration factor is due to the molecular weight of the background gas. Setting and changing the gas factor to the correct molecular weight for the background gas will always make the analyzer read correctly. The table below gives some common molecular weights; other gas molecular weights can be found from reference books.

GAS	MOLECULAR WEIGHT
Nitrogen	28.02
Argon	39.91
Helium	4.0
Hydrogen	2.02
Sulphur Hexaflouride	146.0
Ethane	30.07
Ethylene	28.05
Propane	44.0
Methane	16.04

Gas mixture molecular weights can be ascertained by a direct relationship, i.e. a gas background of 60% helium and 40% argon will be
 $(0.6 \times 4.0) + (0.4 \times 39.91) = 2.4 + 15.96 = 18.36$

LIFE The value shown is an approximation of the operational lifetime left in the cell in percentage. A figure of 50 would mean that half of the life of the cell had been used. If the instrument was in service for 2 years, then the cell would last for approximately another 2 years.



10. CALIBRATION

CALIBRATION FOR ANALYZER TYPES 9X0, 9X1 & 9X2




Calibration should be carried out using a gas which is in the same range as the gas being analysed.

For applications in the percentage range, the calibration may be carried out using atmospheric air.

Calibration with Atmospheric Air

1. Set up the instrument such that atmospheric air is circulating through the instrument, either by a pump or compressed air. Make sure the pressure is the same as the sample gas.
2. Enter the set-up mode pressing  button on the front panel of the instrument.
3. Once in the CAL mode the default value is 20.9%.
4. Press the right arrow button so that one of the numbers is flashing.
5. By pressing the ENTER button the instrument will automatically reset itself to 20.9% and continue to measure the oxygen content of the air.
6. Continue pressing  button to return to oxygen measurement. See Front Panel Guide.



Calibration with Certified Gas

1. Connect the certified gas at the same pressure as the sample gas, in order to obtain the same flow as the sample gas, wait to obtain a steady value.
2. Enter the SET-UP mode by pressing the programme button  on the front panel of the instrument until CAL is shown in the display.
3. Change the CAL value from the default to the value printed on the certification label on the cylinder, making sure you have changed the %/ppm LED, if appropriate.
4. Pressing the ENTER  button will force the display to the value set for the certified bottle.
5. Continue pressing  button to return to oxygen measurement . See Front Panel Guide.




CALIBRATION FOR ANALYZER TYPE 9X3

Calibration of RACE (Model 9X3) analyzers is a two stage process, with accurate calibration required at high oxygen levels and trace oxygen levels.

Calibration with Atmospheric Air

1. Set up the instrument such that atmospheric air is circulating through the instrument, either by a pump or compressed air. Make sure the pressure is the same as the sample gas.
2. Enter the set-up mode pressing  button on the front panel of the instrument.
3. Once in the SPHI mode the default value is 20.9%. Should the value be different reset it to 20.9% (Atmospheric Air)
4. Press the right arrow button so that one of the numbers is flashing.
5. By pressing the ENTER button the instrument will automatically reset itself to 20.9% and continue to measure the oxygen content of the air.
6. Continue pressing  button to return to oxygen measurement. See Front Panel Guide.

Calibration with Certified Gas – in the range 10 –1000 ppm.

1. Connect the certified gas at the same pressure as the sample gas, in order to obtain the same flow as the sample gas, wait to obtain a steady value.
2. Enter the SET-UP mode by pressing the programme button  on the front panel of the instrument until SPLO is shown in the display.
3. Change the SPLO value from the default to the value printed on the certification label on the cylinder, making sure you have changed the %/ppm LED, if appropriate.
4. Pressing the ENTER  button will force the display to the value set for the certified bottle.
5. Continue pressing  button to return to oxygen measurement . See Front Panel Guide.

NOTE

Great care should be taken not to allow air to enter the analyzer. If the certified gas contains low ppm levels and air has entered the system, it could take several hours for the oxygen value to equilibrate.

The instrument will only tolerate a certain level of adjustment. If the analyzer reads 4.9ppm and the certified bottle is 12.6ppm, the analyzer will reject the input of a value of 12.6ppm because it considers the error to be too large. Something else is almost certain to be incorrect. Is the sample from the bottle at equilibrium? It will take many minutes even hours to sweep all the air out of the pressure regulator and sample lines connected to a cylinder of a few ppm oxygen. Are you using polythene tubing which may leak?

11. RS 232/485 COMMS PORT

A cable and software disk is supplied with the analyzer.

The software will run on an IBM PC or compatible computer. The only requirement is a serial cable to link the PC to the analyzer. Any serial cable which is wired pin to pin will work (i.e. pin 1 to pin 1 etc.)

Installing Software

The software is provided on one 3½" disk. To install the software onto your hard disk, create a directory called '900_COMS' and copy the contents of the supplied disk into that directory. To run the software, type 'COM' <enter>.

Communicating with the Instrument

The opening screen displays a menu with 2 options:

- 1 Terminal
- 2 Exit to DOS

Press 1 to communicate with the instrument and 2 to exit to DOS.

Commands For Use with the Series 900

Command	Function
?	Returns oxygen reading
AL1?	Reads ALARM 1 set point
AL1=	Sets ALARM 1 set point
AL2?	Reads ALARM2 set point
AL2=	Set ALARM 2 set point
VER?	Reads VERSION number
TEMP?	Reads ambient temperature °C
UNLATCH	Resets the latch if alarms set to latched.

RS485

Should the user want to communicate with the instrument using RS485 instead of RS232 the internal link must be set correctly. Slide out the chassis assembly (turn power off first) and locate the link at the top right hand side of the CPU board next to the RS232 comms connector. The link is normally set to RS232. Remove it and relocate to the RS485 side.

Data cables should be connected to the terminal strip on the rear panel as so:

Terminal		
A	-	Data +
B	-	Data -

To communicate with the instrument you should type #9'command' and the instrument will return the data, i.e. #9? carriage return will return the oxygen level.

Should you have more than one instrument, the user ID should be set to something other than 9 for the other instruments. Please contact the Illinois Instruments, Inc. Service Department.

12. OPTIONAL FACILITIES

Series 910 & 930 Connection

See Drawing B 900 022.

Analogue Outputs (Option)

If fitted 0-10V, 0-100mV and 4-20mA (all isolated) are available on the connections terminal on the electrical chassis. Maximum resistance is 600ohm for the current drive.

Alarm Trip (Option)

Volt free changeover contacts are available on the connections terminal. Contacts are rated 5A/240V. Alarm 2 may be used as a fault alarm instead of an oxygen level alarm. See programmable functions.

13. FAULT MESSAGES/ALARMS

Certain messages may appear on the LED display of the analyzer, either in operation of the analyzer or during programming.

- ! 'F-th' Thermistor open circuit, most likely cause may be the cell at the rear of the instrument has become disconnected.

- ! 'FLO' If a flow alarm has been fitted, then a FLO error indicates either a flow failure or equipment failure.

- 'Err' When programming new values this display may appear. It indicates the user is attempting to programme a number or value outside a permitted range.


- 'Cant' Similar to the above.

- ! Indicates operation of volt free contacts on rear of analyzer - Fault Alarm.

- 'Cell'

- ! Indicates cell output is low. New cell required

15. REPLACING THE MEASURING CELL

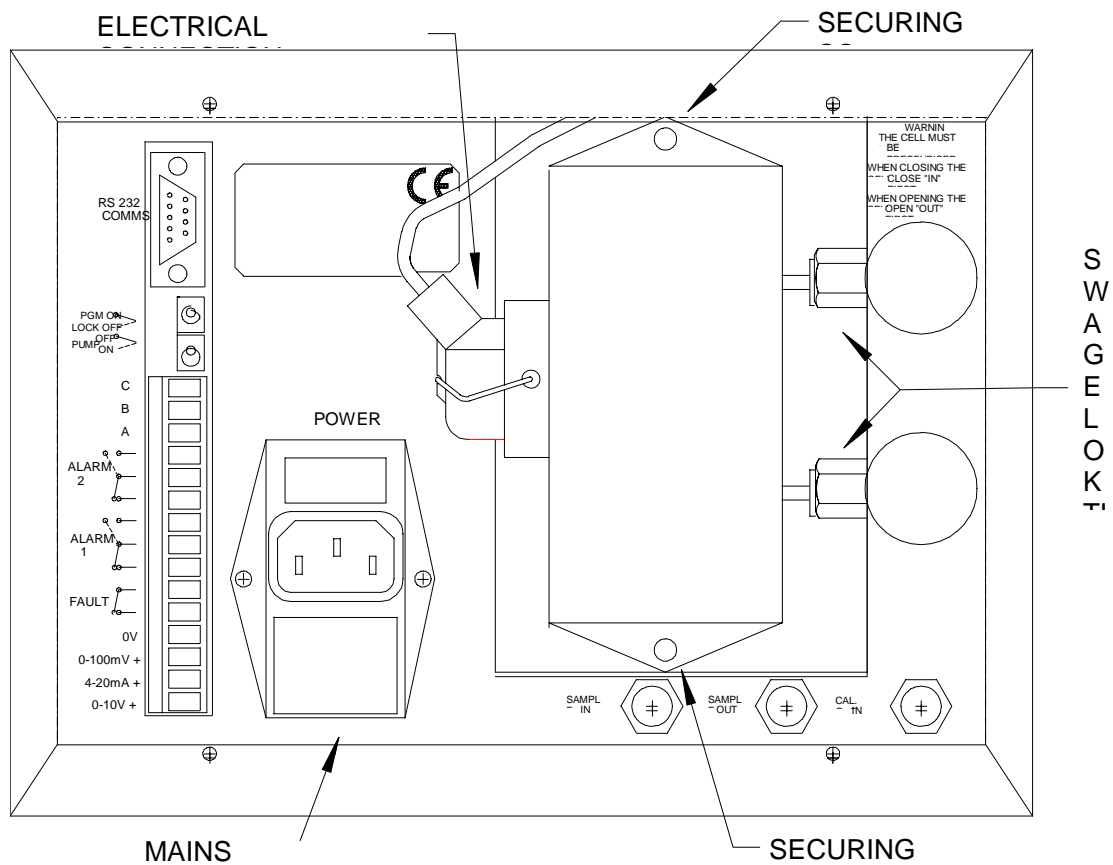

1. Switch off the analyzer at the rear panel switch and remove the mains connector.
2. Fully close the sample IN valve on the rear panel, then fully close the sample OUT valve. (N.B. This sequence is required in order to avoid pressurising the cell. When reconnecting fully open the OUT valve before opening the IN valve).
3. Remove the 'd' type electrical connection from the cell body.
4. Using a 7/16" spanner slacken the Swagelock fittings connecting the cell's sample lines to the flow control valves.

5. Remove the two posidrive screws from the top and bottom of the cell.
6. Slide the cell assembly to the left (seen from the rear of the instrument) to disconnect the sample lines, and withdraw the cell from the instrument.
7. Remove the blanking plugs, from both the sample lines, on the replacement cell.
8. Position the cell in the instrument and loosely locate the two mounting screws. Do not tighten the mounting screws.
9. Slide the cell to the right ensuring the sample lines locate with the Swagelok fittings. Tighten the Swagelok fittings to finger tight and then an additional $\frac{3}{4}$ of a turn using a $\frac{7}{16}$ " spanner.
10. Fully tighten the two mounting screws.
11. Reconnect the 'd' type electrical connection to the cell body.
12. Fully open the OUT valve, then open the IN valve to set the required flow rate.
13. Reconnect the power supply.

N.B. Following a cell change it is recommended that the instrument be allowed to warm up and the sample lines purged before a calibration is performed as detailed in section 10 of the operators manual.

14. SPARE PARTS

897 002	Pcb front panel
900 002	Pcb CPU (quote serial number)
PFM-551811	Sample flowmeter
101 385	Bypass flowmeter
PFT-207771	1/8" bulkhead (stainless steel)
PFT-107771	1/8" bulkhead (brass)
PVL-217721	Control valve (stainless steel)
PVL-117721	Control valve (brass)
101 061	Pressure regulator (stainless steel)
100 499	Pressure regulator (brass)
PPM-324140	Internal pump
900 047	Assy cell %
900 021	Assy cell standard trace
900 028	Assy cell ultra low trace
900 055	Assy cell RACE™
900 032	Assy cell ultra low trace for Hydrogen
900 057	Assy cell trace for Hydrogen gas background
900 059	Assy cell RACE™ for Hydrogen

Important Note

The serial number of the instrument for which the spare parts are required must be quoted on all orders.

