


COUNTDOWN TIMER (ONLY AVAILABLE FOR PM_T MODELS)

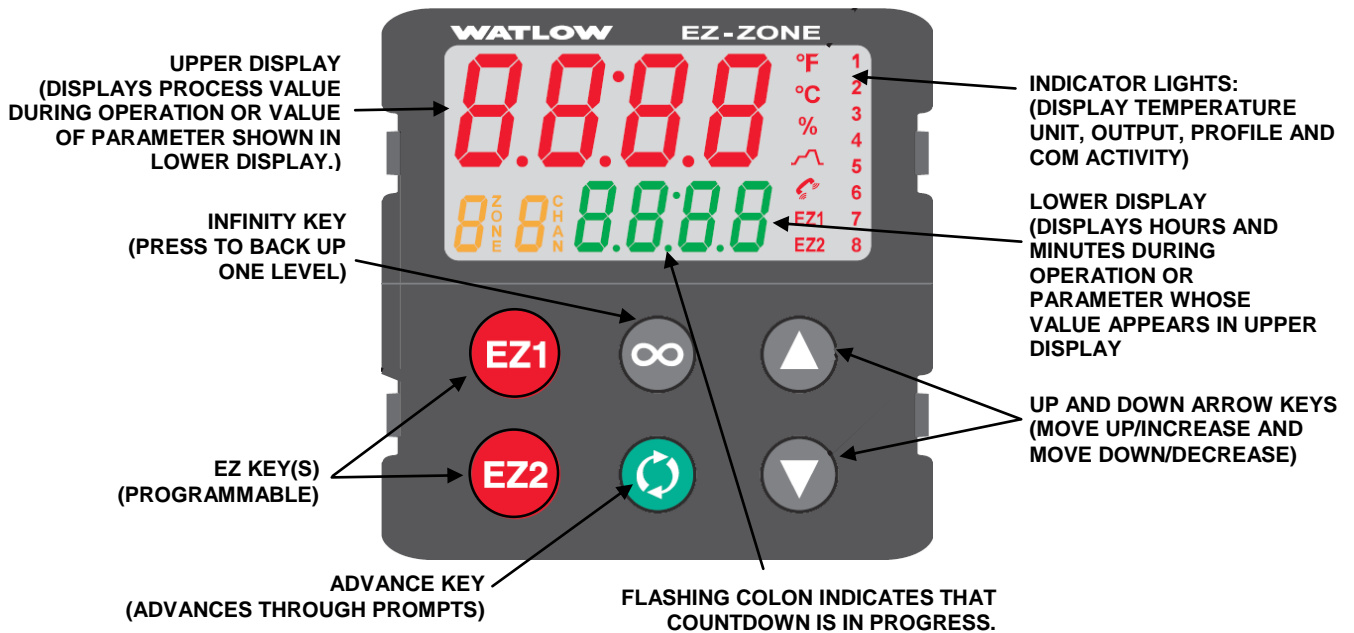



A. CONFIGURATION

1. From **HOME PAGE**, press **Ct.s1** (closed loop Timer Set point) is shown in the lower display. Use and to configure set point at what temperature the timer should be started.
2. Press until **hoU1** is shown on lower display. Use and to set hours for timer.
3. Press until **Mi1** is shown on lower display. Use and to set minutes for timer.
4. Press to return to the home page.

B. OPERATION (DTS – To shut off oven at end of timer)

1. Press to begin timer. Once oven temperature gets within ready band (typically set for $\pm 5^{\circ}\text{F}$) of **Ct.s1** value (Closed loop Timer Set point configured in section **A.1** above), ready band indicator lights up; Countdown timer starts and continues as long as temperature is within ready band. If temperature falls outside of ready band during countdown, timer will pause. However, indicator and flashing colon between

hours and minutes are remained on. Timer will resume counting once oven temperature returns within ready band.

2. In order to terminate countdown timer before it times out, simply press  again and indicator  will be turned off. Timer will be reset to default hours and minutes configured in section “A” above.
3. For Digital Timing System (DTS), oven control circuit is hardwired to shut off oven (turning off fans and heat) once timer times out. In the event that timer is manually stopped as described above section B.2, oven does not shut off automatically.