


BELT CONVEYOR OVEN, Serial No. 650125

- maximum operating temperature: 1200°F
- workspace: 30" wide x 105" deep x 18"high
- 54" long open belt loading zone
- 105" long insulated heat zone with recirculated airflow
- 36" long open unloading zone
- 800,000 BTU/HR installed in a modulating burner
- 24" wide, 1" x 1" 304 stainless steel flatwire conveyor belt with 3/4 HP motor drive, fixed speed 15 ft/min
- 6000 CFM, 5 HP recirculating blower providing vertical downward airflow
- 10" thick insulated walls comprised of 2" of 1900°F block and 8" of 10 lb/cf density rockwool
- aluminized steel exterior
- type 304, 2B finish stainless steel interior
- motor operated vertical lift door at each end
- safety equipment required by IRI, FM and NFPA 86 for gas-heated equipment
- fused disconnect switch
- 1/4" plate work surfaces at each end of oven

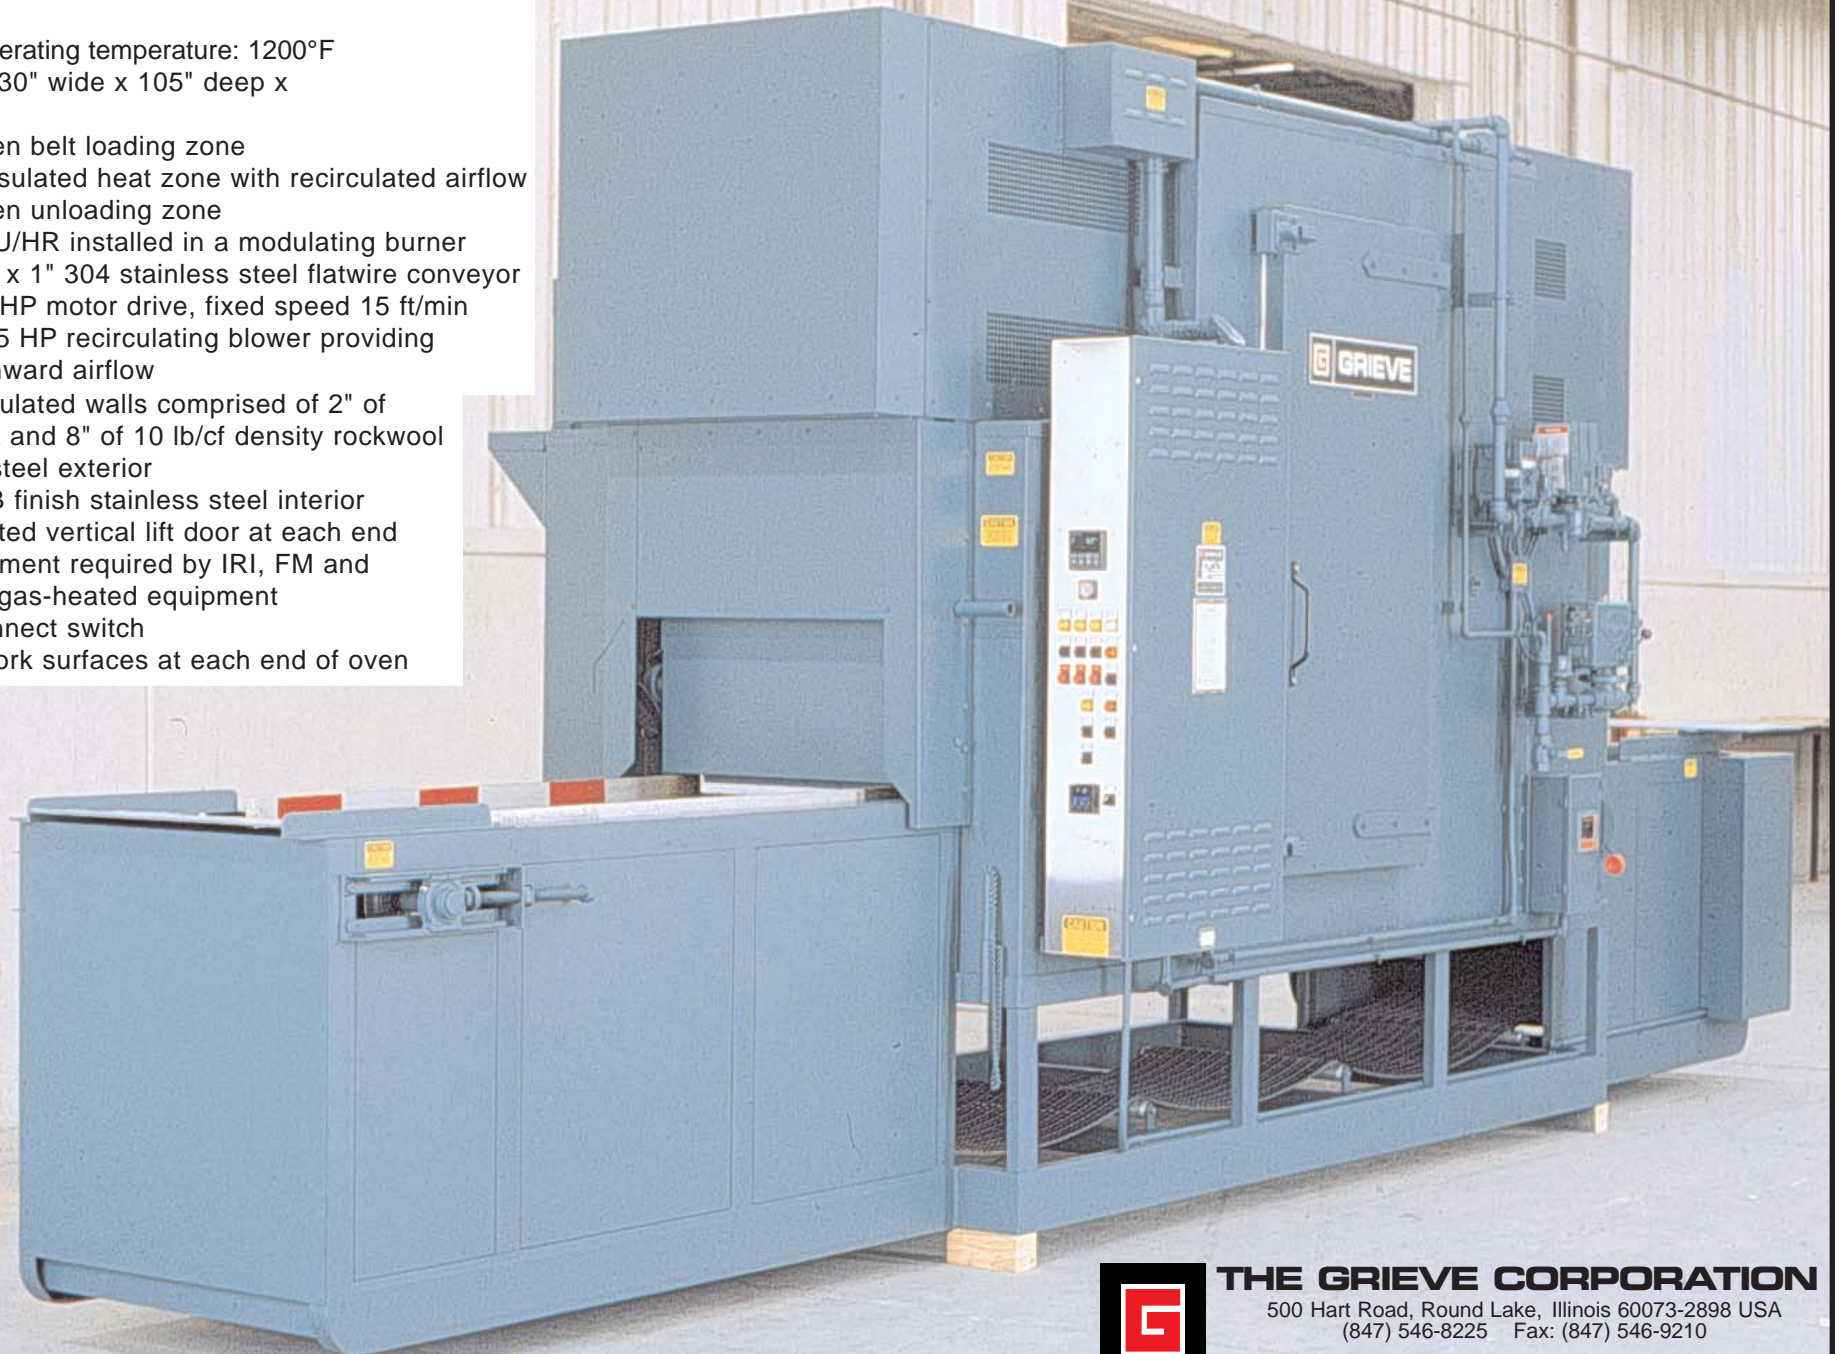

THE GRIEVE CORPORATION

500 Hart Road, Round Lake, Illinois 60073-2898 USA
(847) 546-8225 Fax: (847) 546-9210

No.830