


MODIFIED SHELF OVEN, Serial No. 630269  
for preheating bulk friction material in trays

- maximum operating temperature: 350°F
- workspace dimensions: 68" wide x 30" deep x 36" high
- two (2) shelf trucks with supports on 9" centers to correspond to wheel supports in oven
- two (2) tiers of wheel tray supports to aid in loading trays from oven to trucks

- 350,000 BTU/HR installed in a modulating natural gas burner
- 1000 CFM, 1-HP recirculating blower providing horizontal airflow
- 4" insulated walls
- aluminized steel exterior
- Type 430 stainless steel interior
- safety equipment required by IRI, FM and National Fire Protection Association Standard 86 for gas-heated equipment including 325 CFM 1/3-HP powered forced exhauster

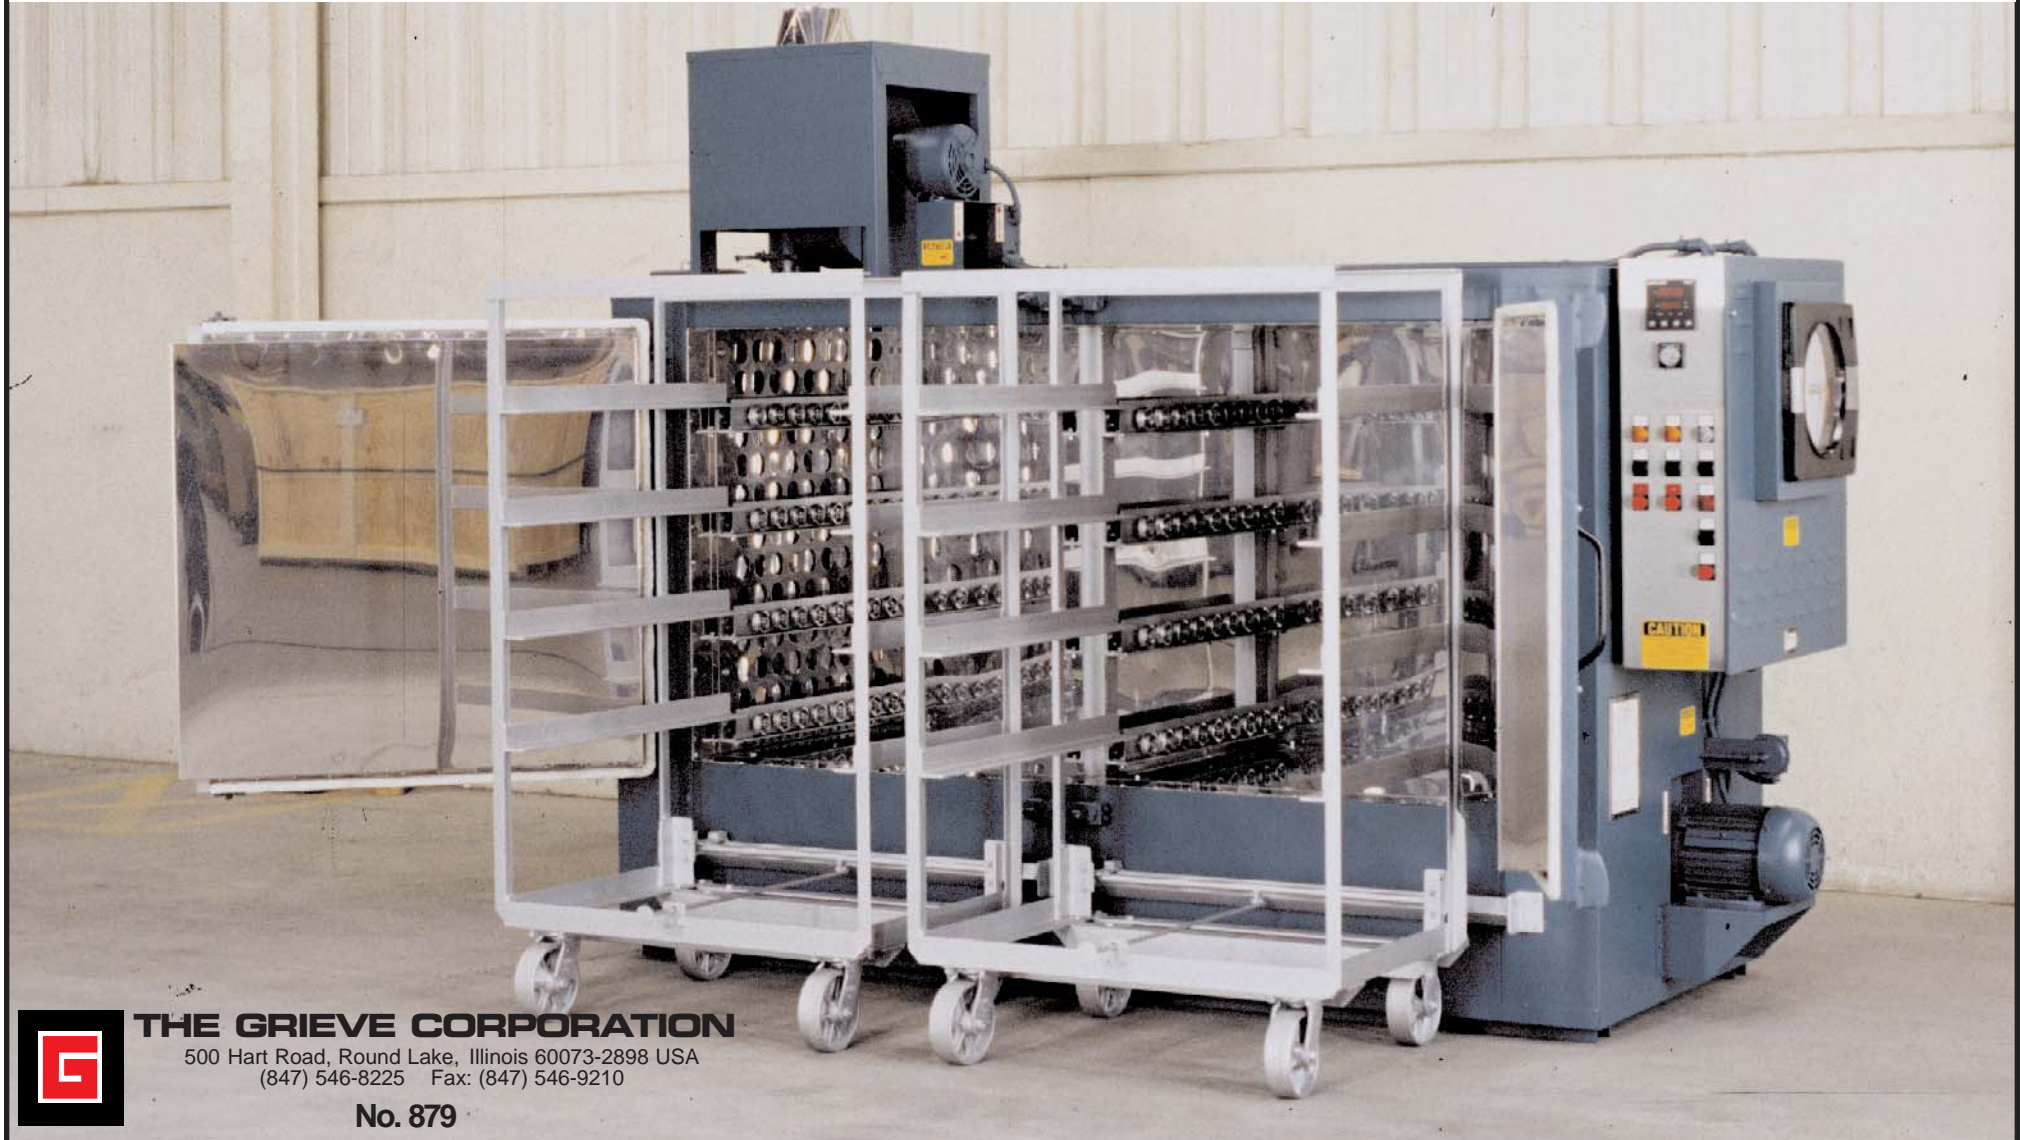

**THE GRIEVE CORPORATION**

500 Hart Road, Round Lake, Illinois 60073-2898 USA  
(847) 546-8225 Fax: (847) 546-9210

**No. 879**