


SPECIAL WALK-IN OVEN, Serial No. 660530

for heating molds

- maximum operating temperature: 500F
- work space dimensions: 13' wide x 28' deep x 7'6" high
- 360 KW installed in Incoloy sheathed tubular heating elements
- 49,000 CFM total from two (2) 20-HP recirculating blowers providing combination airflow
- 4" insulated walls
- removable top mounted heat chamber

- oven body split into four (4) sections for shipment
- aluminized steel interior and exterior
- door sill eliminated and doors equipped with drag seals
- safety equipment for handling 2 gallons of flammable solvents at up to 370F
- 13,500 CFM powered forced exhauster
- motorized dampers on intake and exhaust for accelerated cooling and rapid purging
- NEMA 12/NFPA 79 electrical standards
- digital programming temperature controller
- SCR power controller

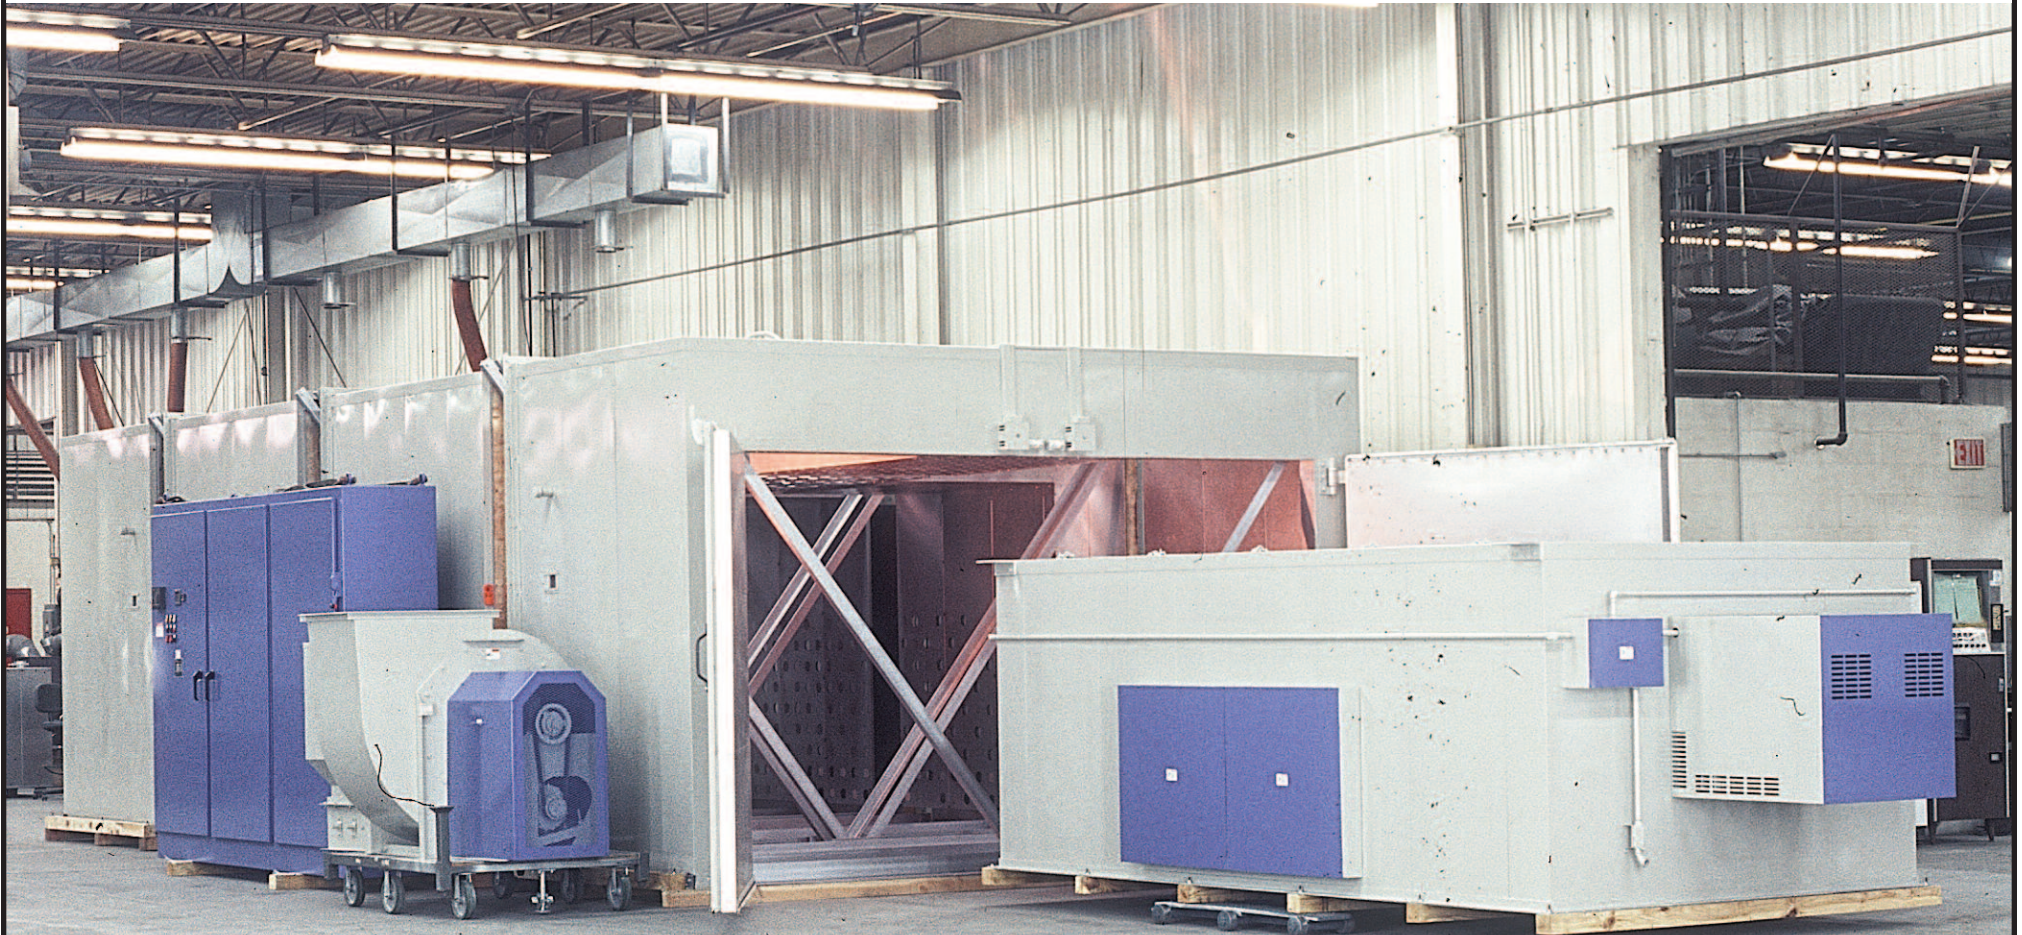

THE GRIEVE CORPORATION

500 Hart Road, Round Lake, Illinois 60073-2898 USA
(847) 546-8225 Fax: (847) 546-9210

No.976