


**MODEL ID-1250 HIGH TEMPERATURE INERT ATMOSPHERE  
OVEN Serial No. 770004** for stress relieving

- maximum operating temperature: 1250°F
- workspace dimensions: 36" wide x 48" deep x 36" high
- 24 KW installed in Incoloy sheathed tubular heating elements
- 1400 CFM, 1½-HP recirculating blower providing front to rear horizontal airflow
- 10" thick insulated walls
- aluminized steel exterior
- Type 304, 2B finish stainless steel interior
- 975 CFM blower to pull air through air jacket on inner oven for cooling
- Micristar 828 digital indicating temperature controller

- manual reset excess temperature controller with separate contactors
- recirculating blower air flow safety switch
- 10" diameter circular chart recorder
- SCR power controller
- three (3) roller rails at bottom of work space to support 2,500 lbs. load
- heavy duty integral leg stand

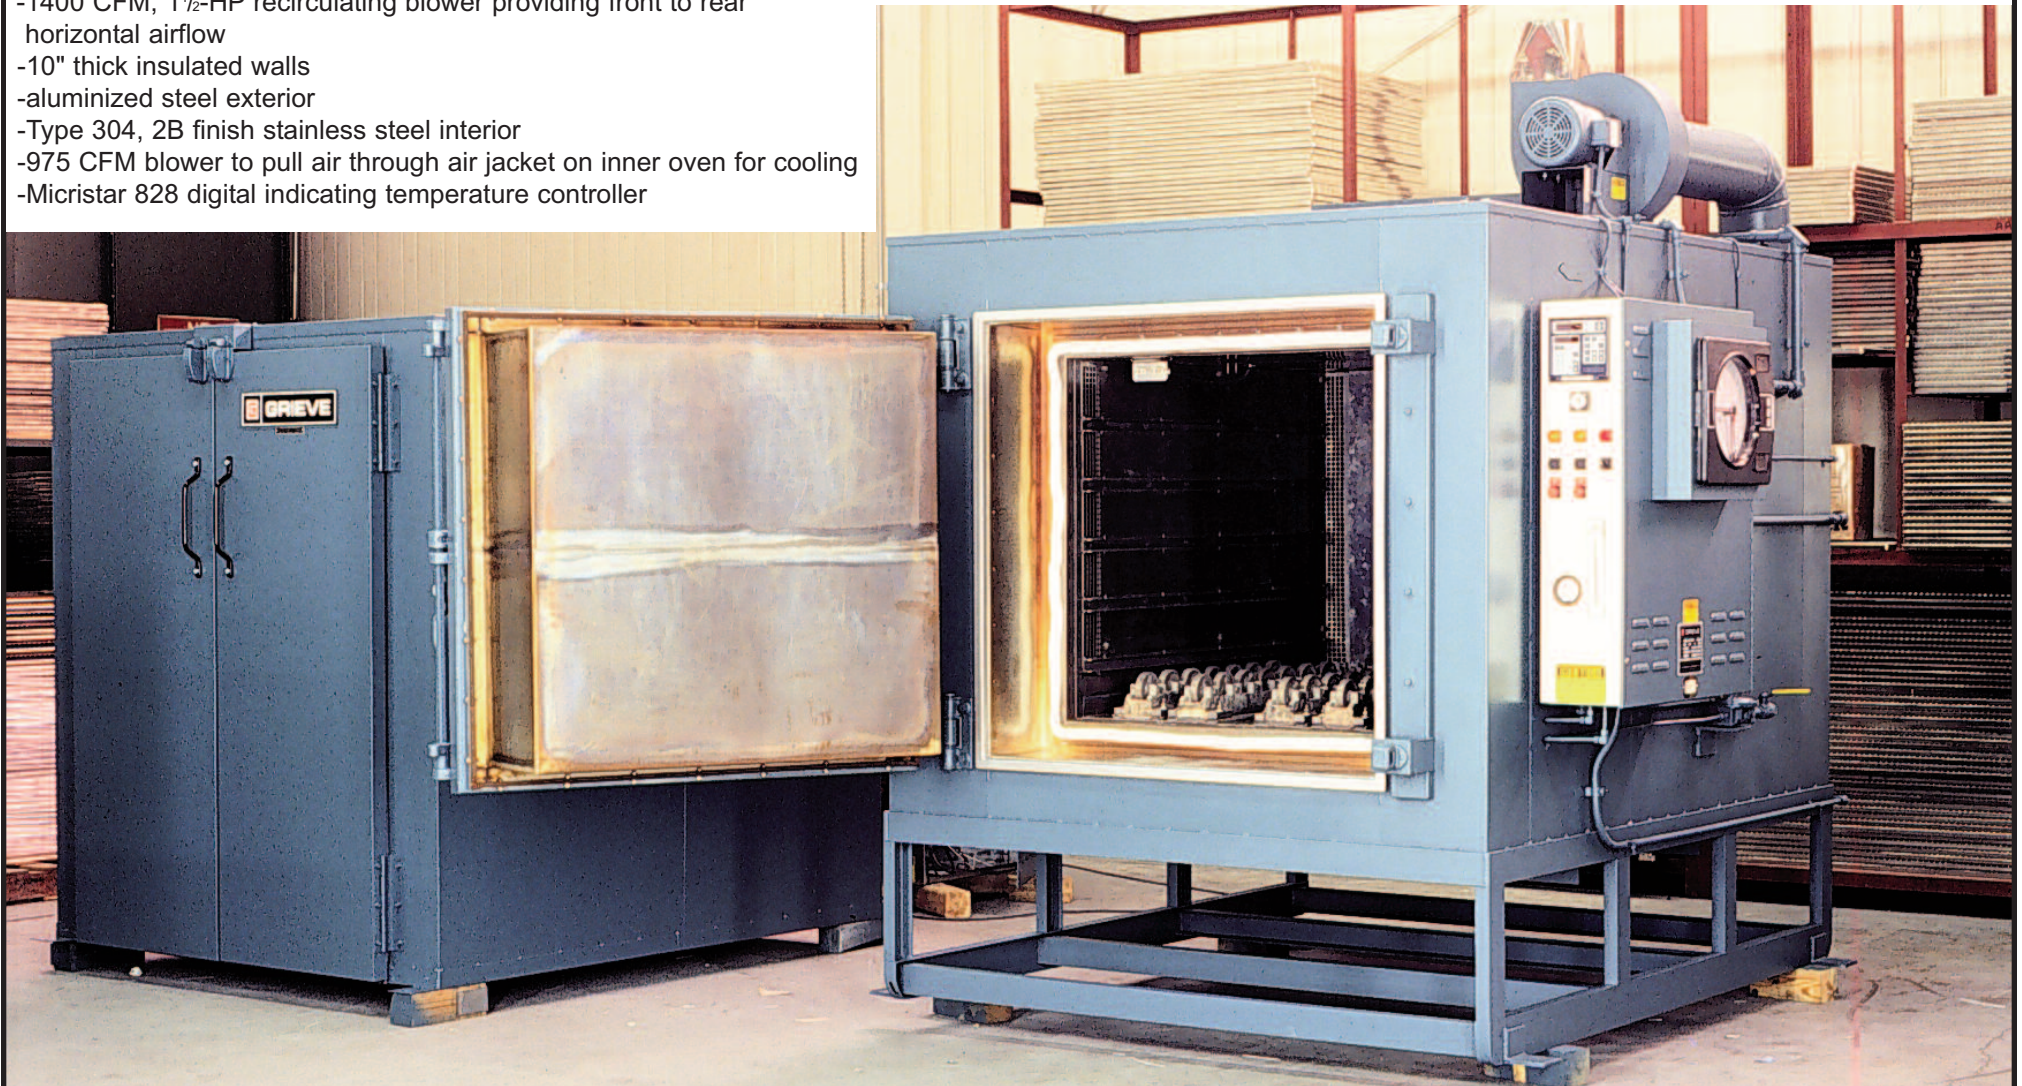

**THE GRIEVE CORPORATION**

500 Hart Road, Round Lake, Illinois 60073-2898 USA  
(847) 546-8225 Fax: (847) 546-9210

**No.842**