


**MODEL PF-304836 PALLET FURNACE, Serial No. 700048**

for heat treating

- maximum operating temperature: 2000 F
- work space dimensions: 30" wide x 48" deep x 36" high
- 700,000 BTU/HR installed in two (2) modulating natural gas burners with floor mounted combustion air blower
- 7" thick insulated walls comprised of 5" of 2300 F ceramic fiber and 2" of 1700 F ceramic fiber
- removable pallet, 7" thick insulation comprised of 4½" thick 2300 F firebrick, 2½" thick 2300 F firebrick
- safety equipment required by IRI, FM and National Fire Protection Association Standard 86 for gas-heated equipment
- 325 CFM intake pressurizing blower
- motorized dampers on intake and exhaust for accelerated cooling
- digital programming temperature controller
- recirculating blower air flow safety switch
- 10" diameter circular chart recorder
- JIC/NEMA 12 electrical standards

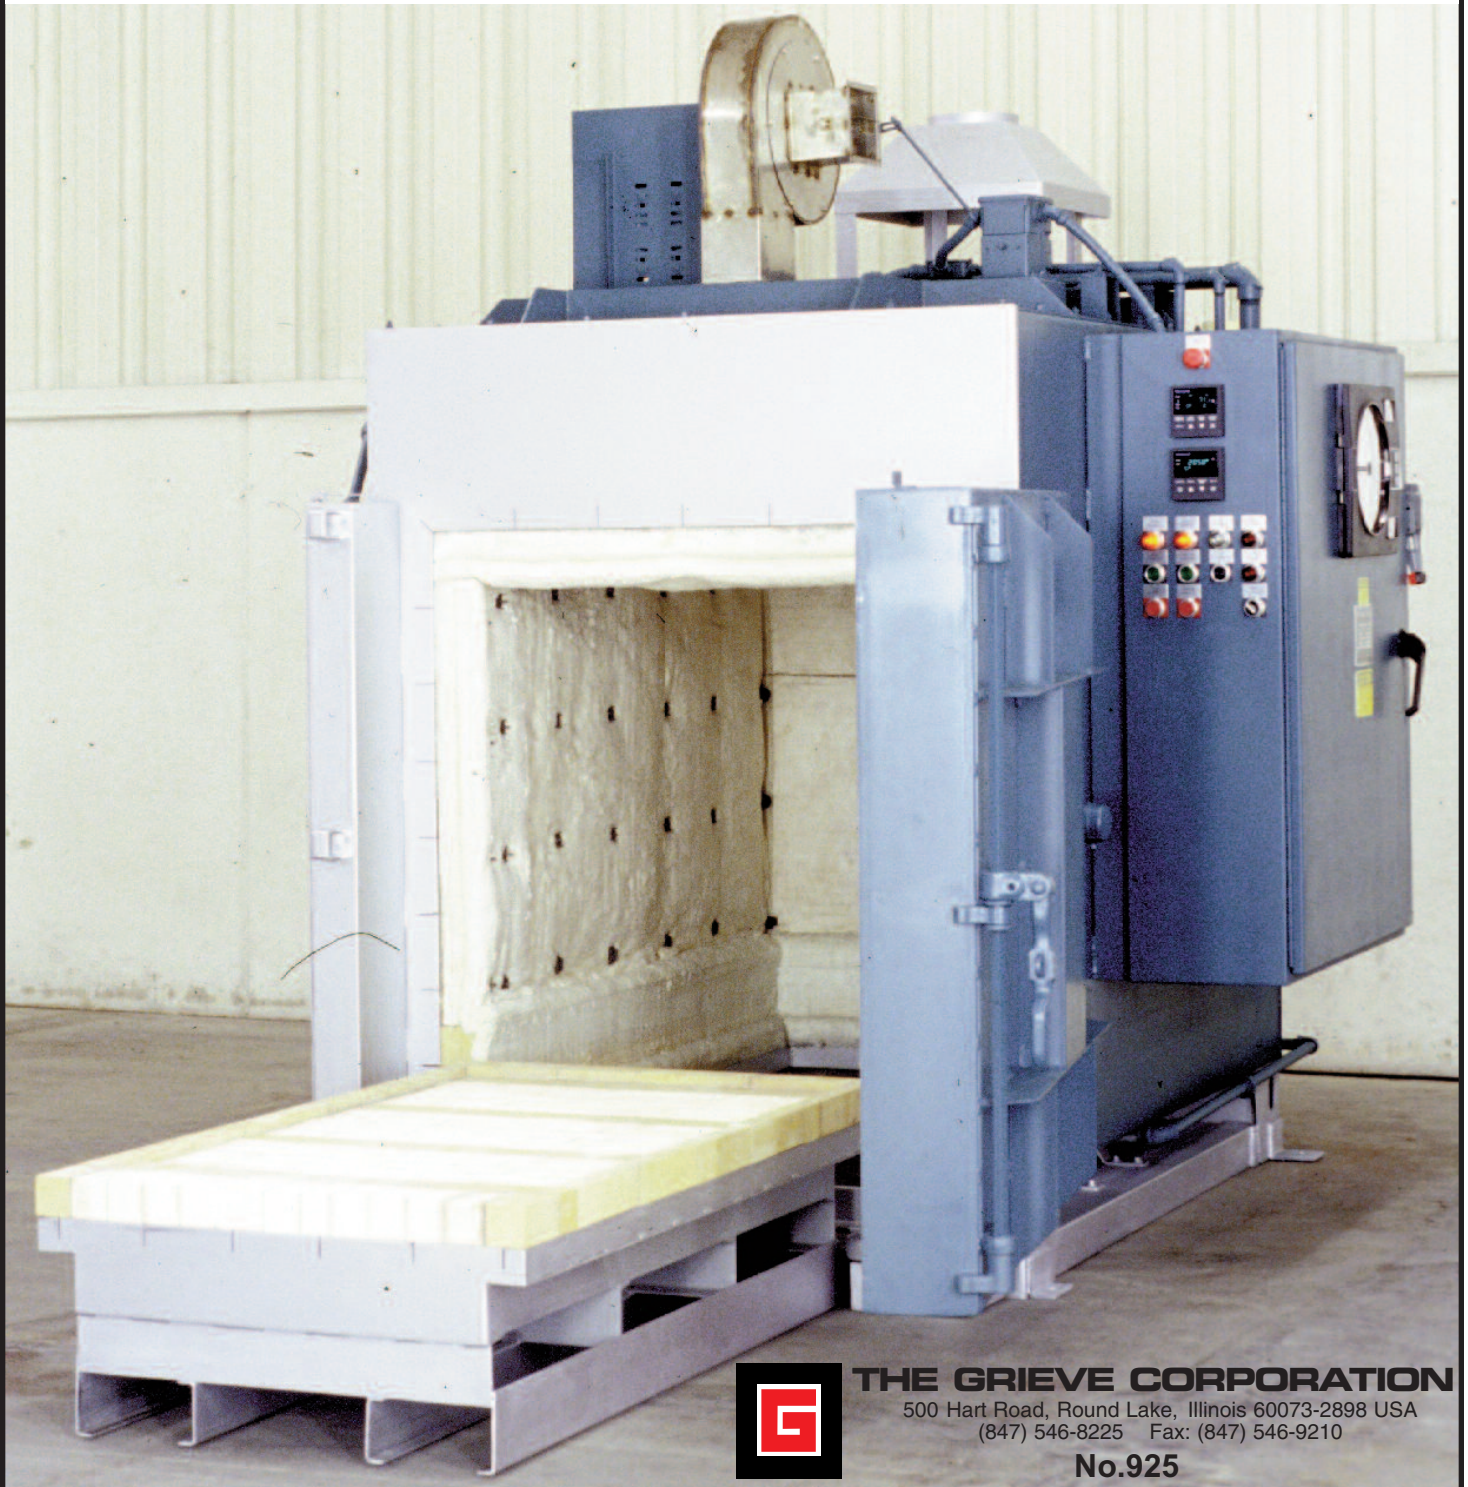

**THE GRIEVE CORPORATION**

500 Hart Road, Round Lake, Illinois 60073-2898 USA  
(847) 546-8225 Fax: (847) 546-9210

**No.925**