


ROTARY HEARTH OVEN, Serial No. 660371

for preheating gears

- maximum operating temperature: 500°F
- workspace dimensions: 76" wide x 76" deep x 24" high
- 72" diameter hearth constructed from angle rings with ninety (90) 1 $\frac{3}{8}$ " wide x 7 $\frac{3}{8}$ " long x 3 $\frac{5}{8}$ " high slots to hold gears on edge

- hearth driven by $\frac{1}{4}$ HP motor through gear reducer with torque limiting device; hearth indexes one position each time loading door is opened and closed
- Two (2) 2000 CFM, 2 HP recirculating blowers providing vertical downward airflow
- 4" insulated walls
- aluminized steel interior and exterior
- safety equipment for handling flammable solvents

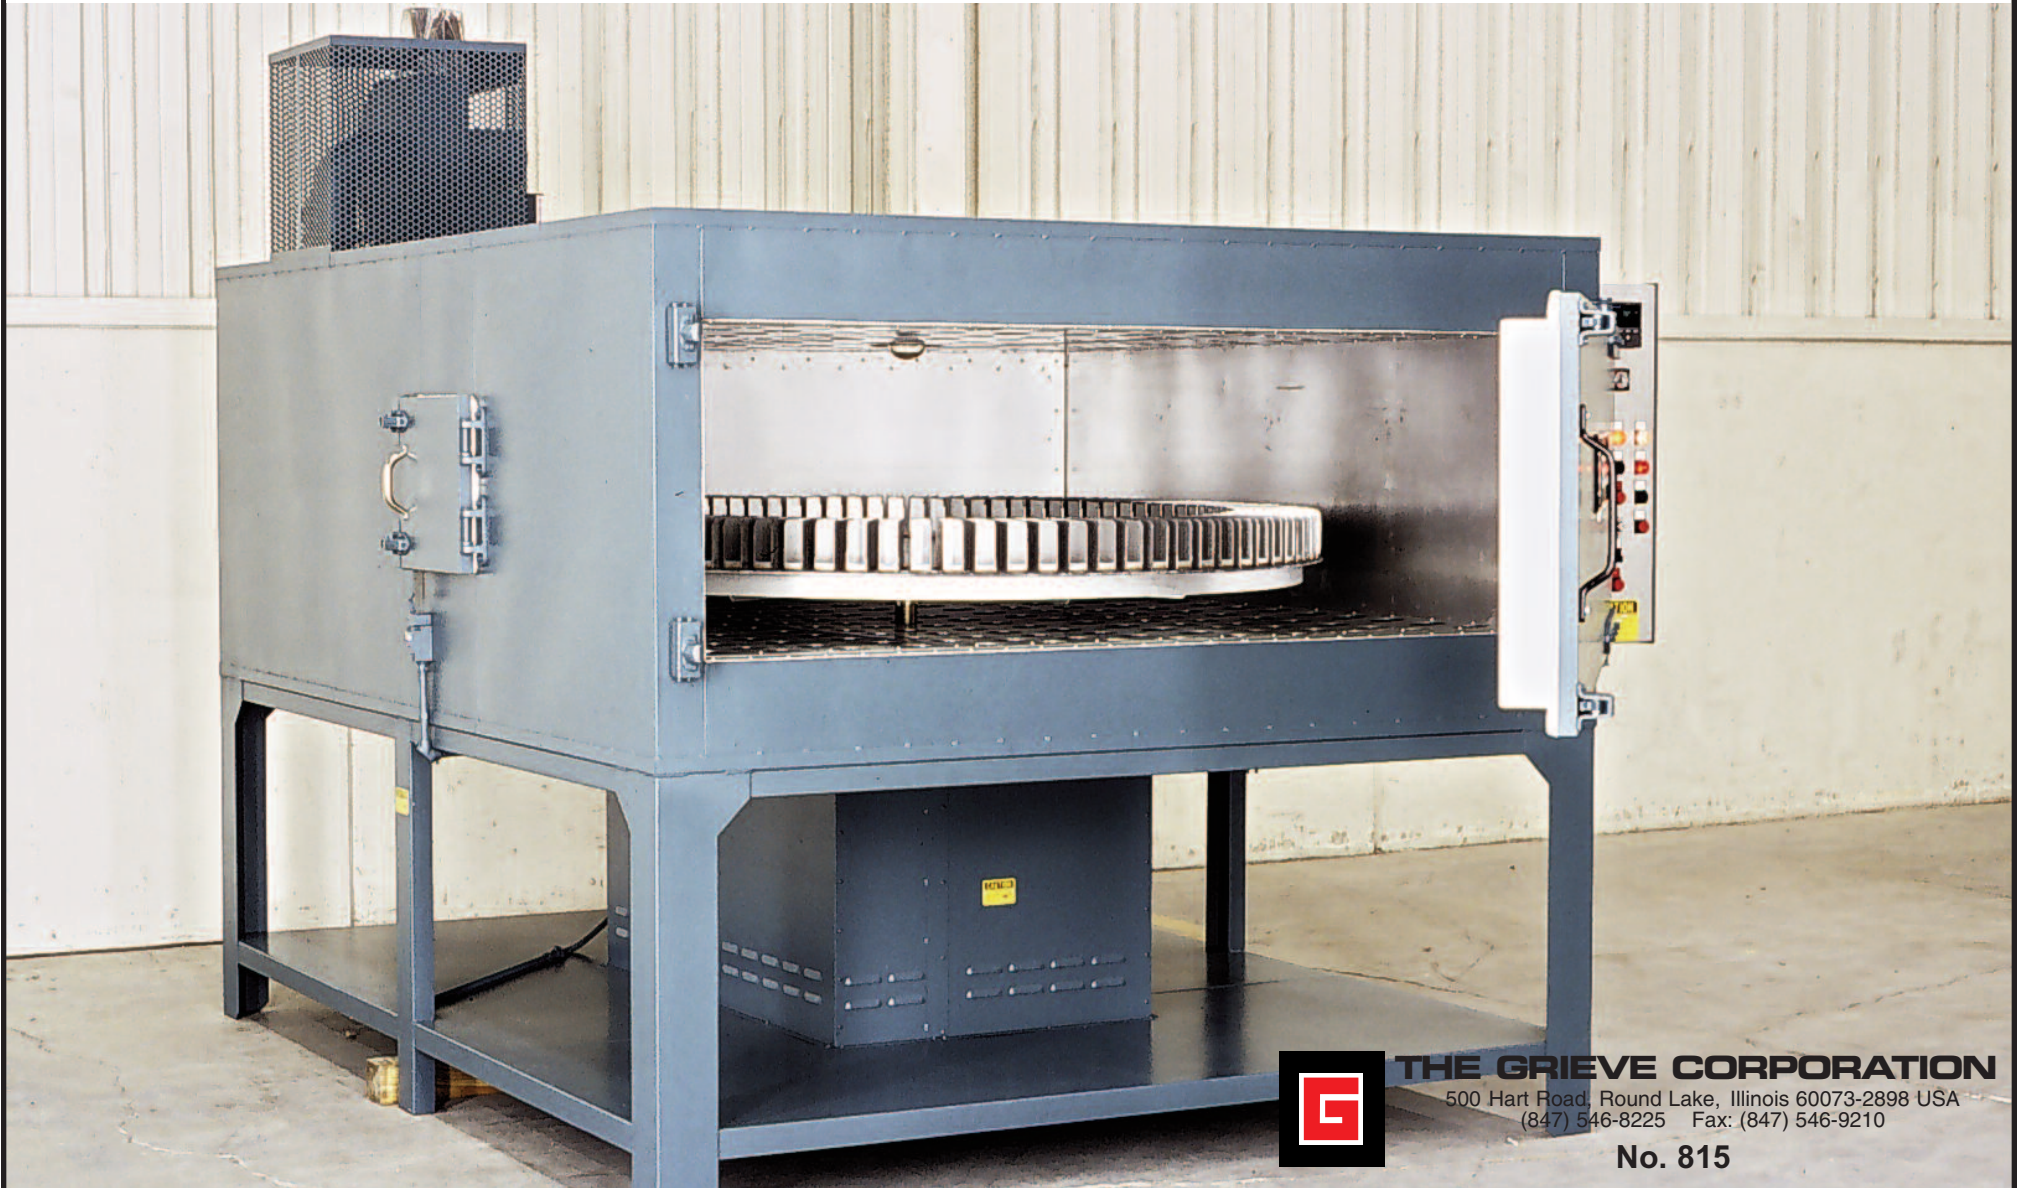

THE GRIEVE CORPORATION

500 Hart Road, Round Lake, Illinois 60073-2898 USA
(847) 546-8225 Fax: (847) 546-9210

No. 815