


MODEL B4-850 HIGH TEMPERATURE WALK-IN OVEN, Serial No. 420069
for heat treating and baking paint

- maximum operating temperature: 850°F
- workspace dimensions: 72" wide x 120" deep x 72" high
- 120 KW installed in Incoloy sheathed tubular heating elements
- 12,500 CFM, 10 HP recirculating blower providing combination airflow
- 7" insulated walls
- aluminized steel interior and exterior

- inner and outer door gaskets; inner gasket seals directly against door plug; outer gasket seals directly against front face of oven
- safety equipment for handling flammable solvents (including explosion venting door hardware)
- Partlow MRC7000 recording and programming temperature controller
- manual reset excess temperature controller with separate contactors
- recirculating blower air flow safety switch
- 4" insulated floor with truck wheel guide tracks

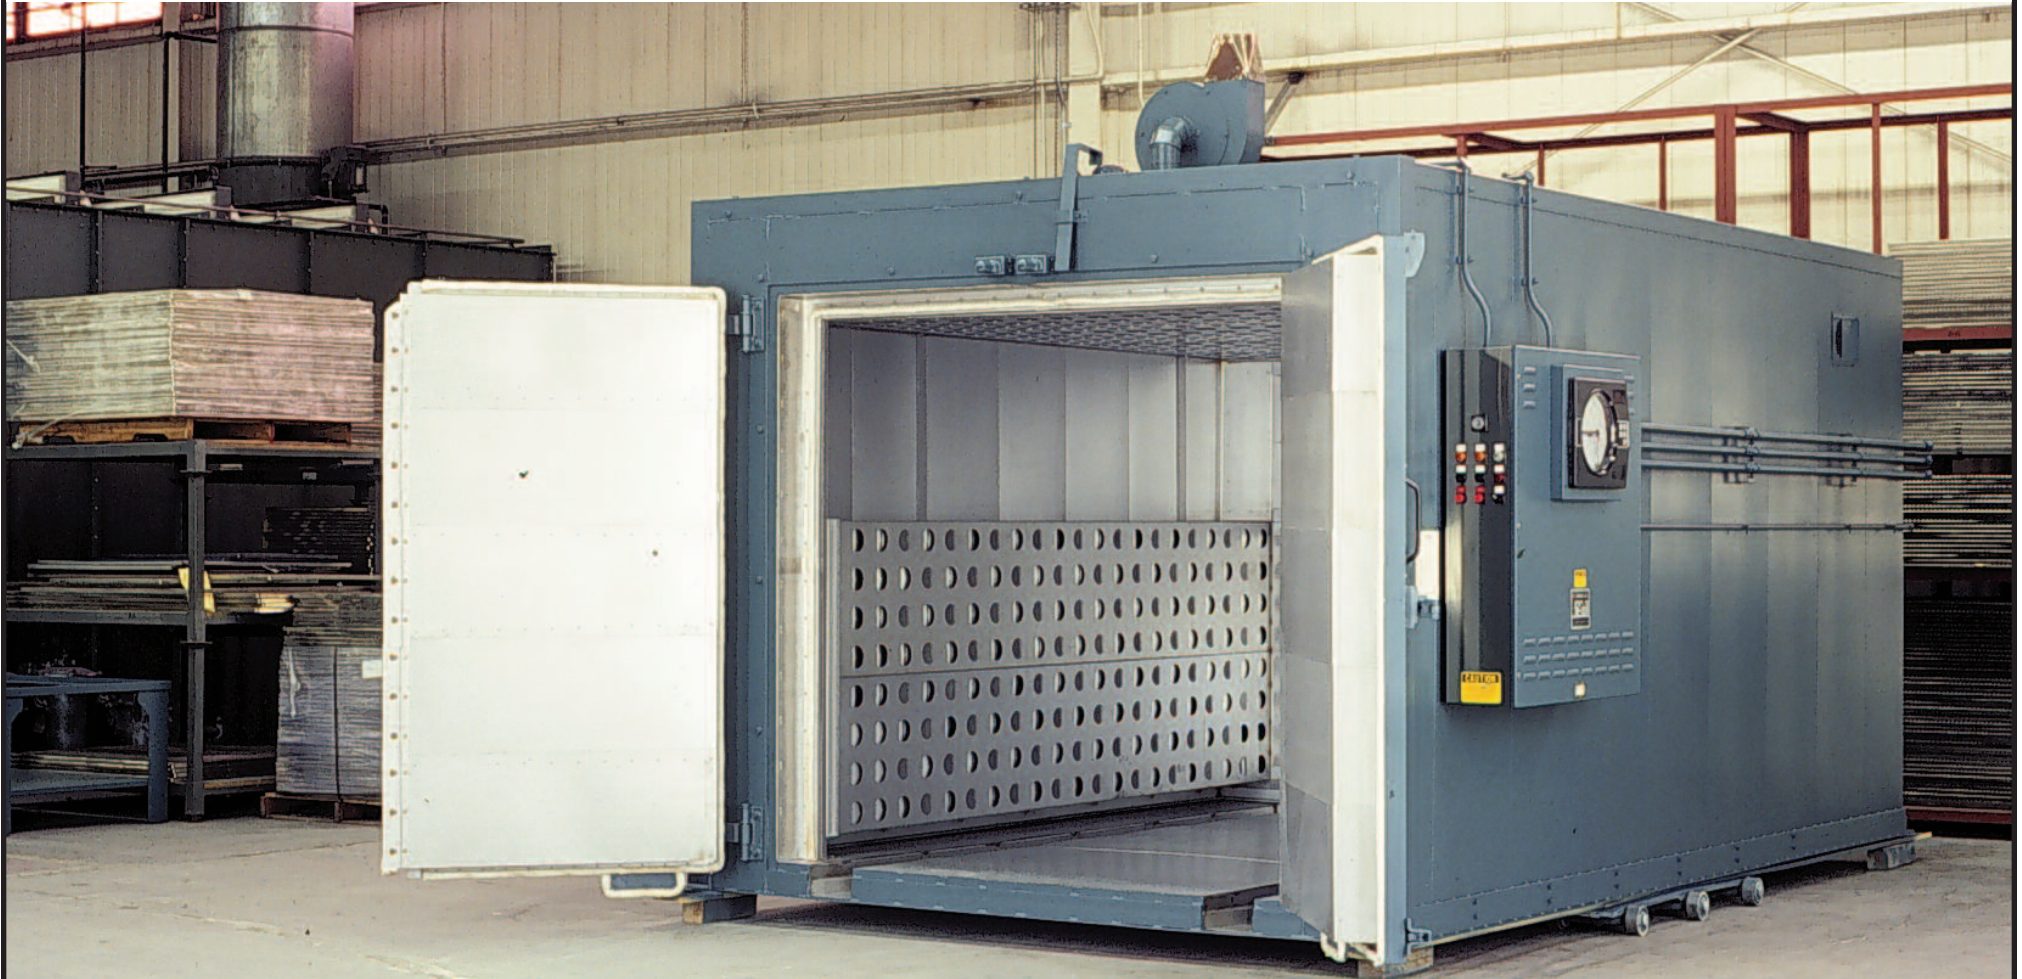

THE GRIEVE CORPORATION
500 Hart Road, Round Lake, Illinois 60073-2898 USA
(847) 546-8225 Fax: (847) 546-9210

No.839