


VERTICAL CONVEYOR OVEN, Serial No. 650173
for heating aluminum clad modules

- maximum operating temperature: 250°F
- workspace dimensions: 36" wide x 38" deep x 92" high
- 20 KW installed in Incoloy sheathed tubular heating elements
- eleven (11) trays 30" wide x 14" deep rising vertically in oven drive, trays indexed into load/unload position
- 4200 CFM, 3-HP recirculating blower providing vertical upward airflow
- 4" insulated walls
- top mounted heat chamber
- aluminized steel interior and exterior
- two (2) independent doors for access to workspace and heat chamber
- loading table and light curtain at load/unload position
- viewing window at load/unload position
- JIC/NEMA 12 electrical standards
- remote control panel

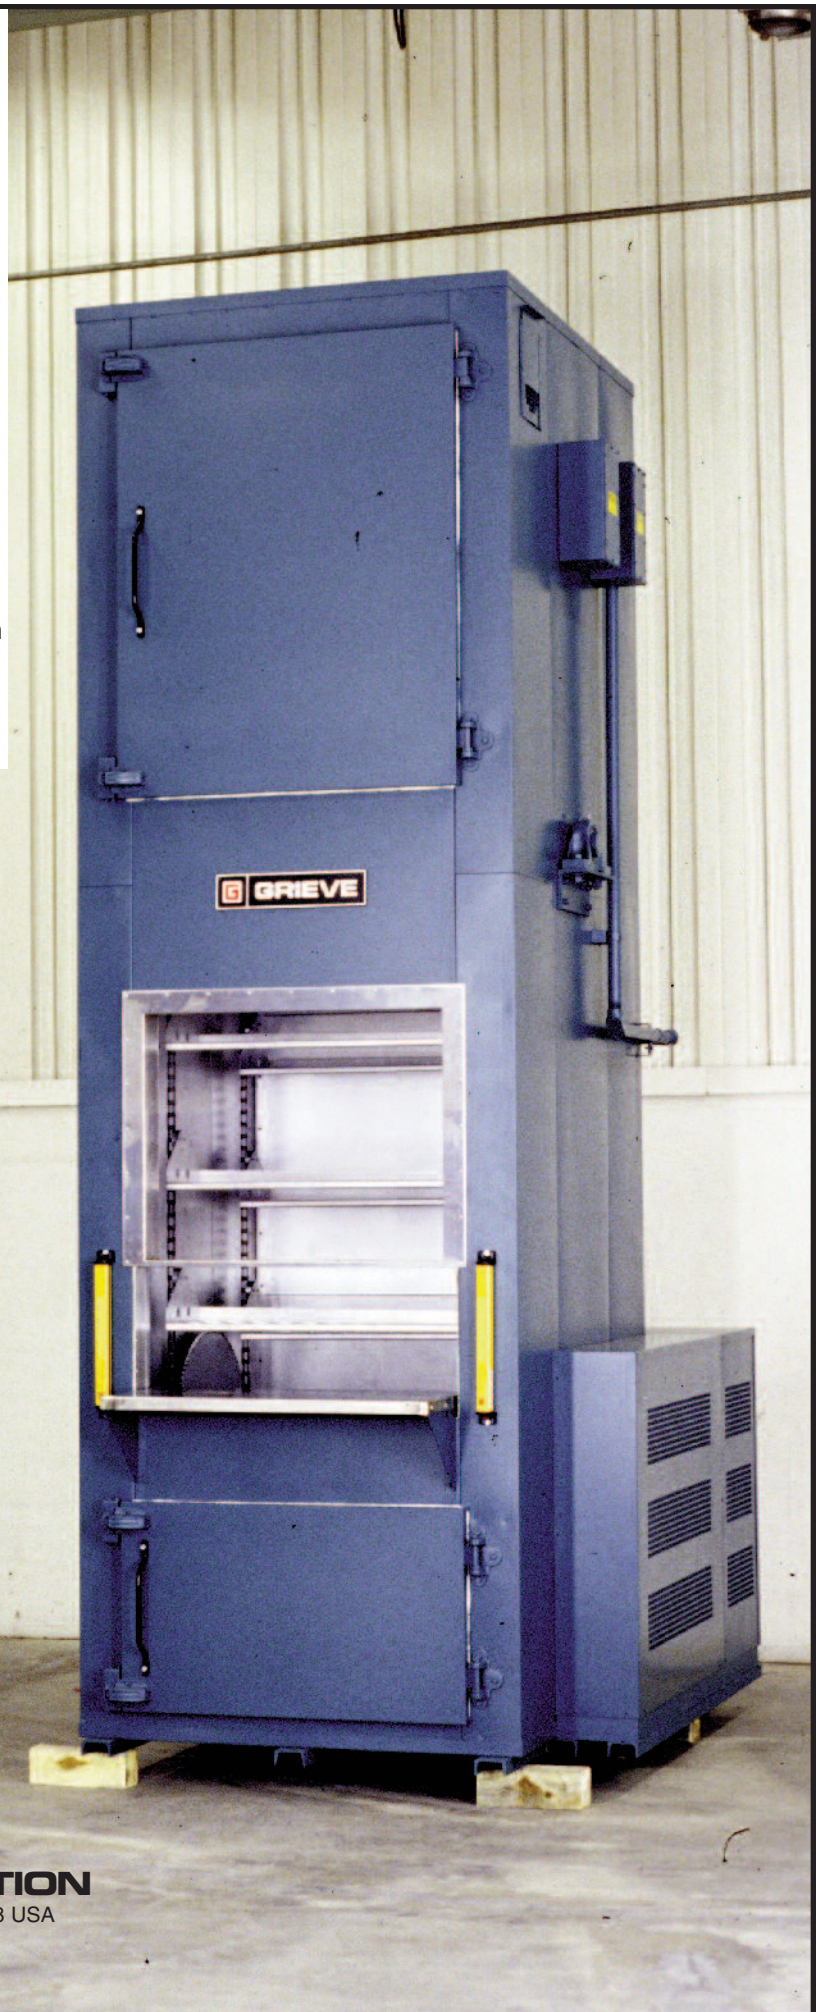

THE GRIEVE CORPORATION

500 Hart Road, Round Lake, Illinois 60073-2898 USA
(847) 546-8225 Fax: (847) 546-9210

No.906