


MODIFIED MODEL TB-500 TRUCK OVEN, Serial No. 641402

for use in curing rubber parts hanging from ceiling

- sectioned to fit in 5' wide x 8' deep x 6'8" high elevator
- maximum operating temperature: 500°F
- work space dimensions: 48" wide x 52" deep x 96" high
- 24 KW installed in Nichrome wire tubular heating elements
- 1000 CFM, 1-HP recirculating blower providing combination airflow
- 4" insulated walls
- aluminized steel interior and exterior
- ceiling of workspace reinforced for 200 lb. load at customer support rack
- digital indicating temperature controller
- manual reset excess temperature controller with separate contactors
- recirculating blower air flow safety switch
- 10" diameter circular chart recorder

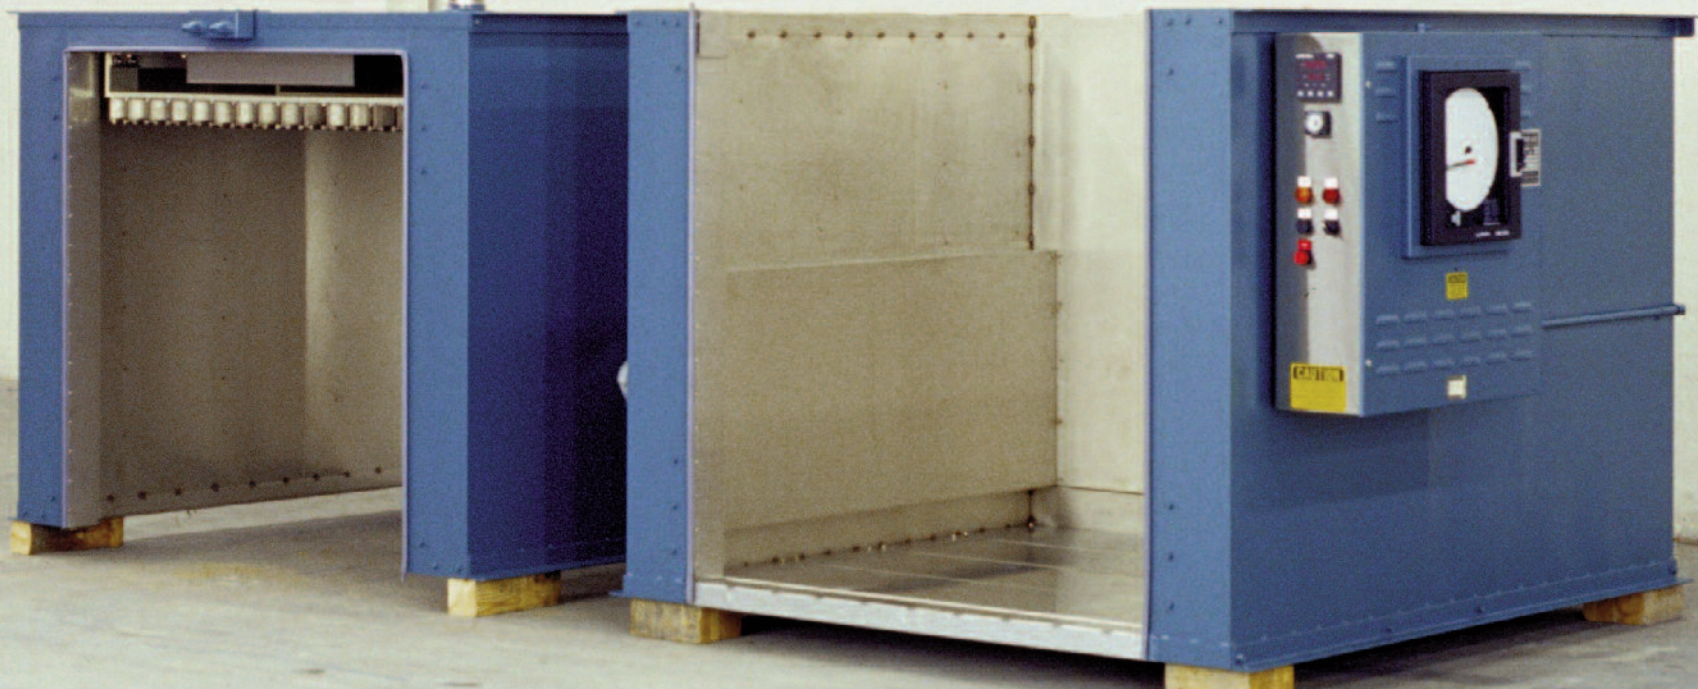

THE GRIEVE CORPORATION

500 Hart Road, Round Lake, Illinois 60073-2898 USA
(847) 546-8225 Fax: (847) 546-9210

No. 913