


VERTICAL CONVEYOR OVEN, Serial No. 650186

for post curing silicone rubber parts in cardboard boxes

- maximum operating temperature: 250 F
- work space dimensions: 10' wide x 13' deep x 12' high
- forty-two (42) 72" wide x 23" long trays rated at 100 lbs. loading on 34" centers
- trays lower vertically and pass back into heat zone, trays exit top of heat zone and pass downward through cooling
- 12,000 CFM total from two (2) 6000 CFM, 5-HP recirculating blowers providing vertical upward airflow

- four (4) 24" diameter tubeaxial fans each driven by a 5-HP motor to push/pull air through cooling zone
- 4" insulated walls
- removable top mounted heat chamber
- aluminized steel interior and exterior
- two (2) independent doors for access to workspace
- safety equipment required by IRI, FM and National Fire Protection Association Standard 86 for gas-heated equipment including 975 CFM 1-HP powered forced exhauster
- JIC/NEMA 12 electrical standards

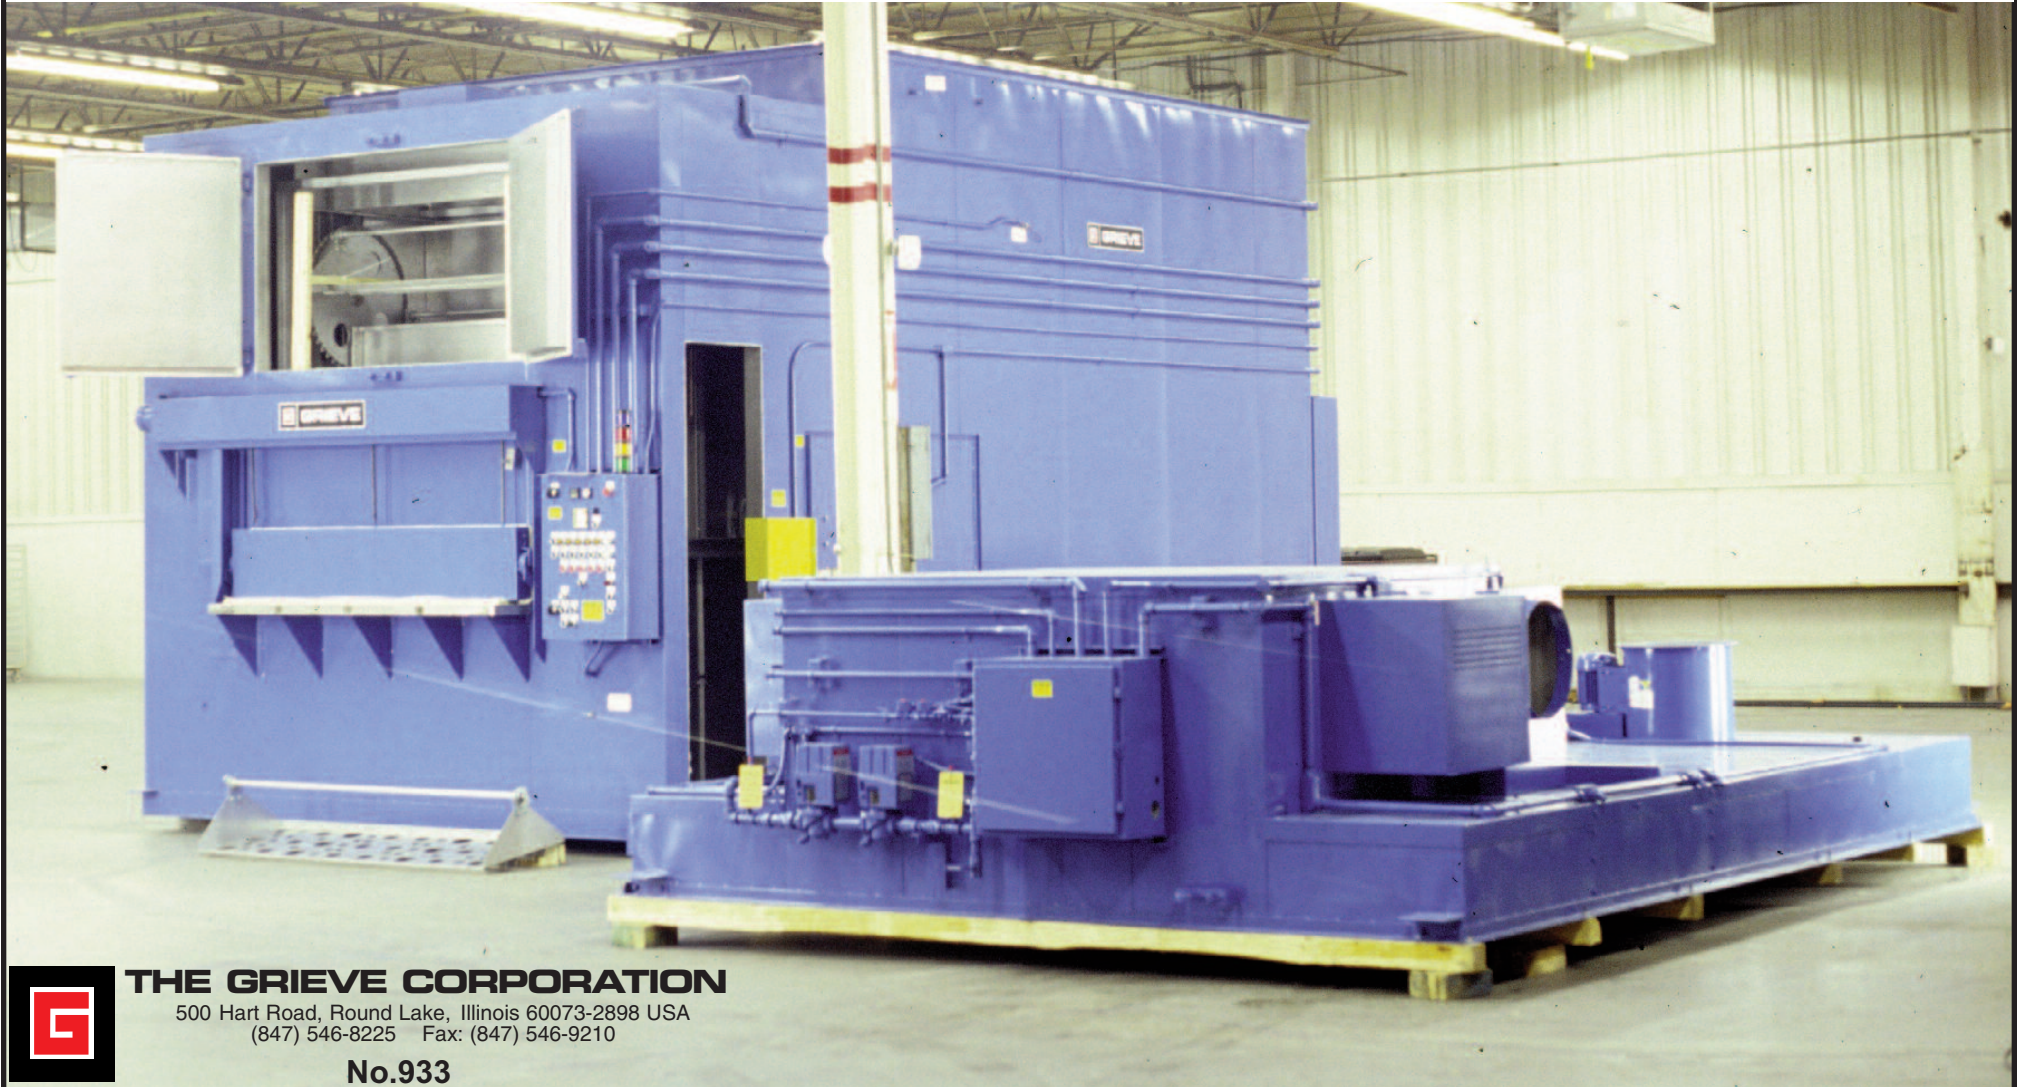

THE GRIEVE CORPORATION

500 Hart Road, Round Lake, Illinois 60073-2898 USA
(847) 546-8225 Fax: (847) 546-9210

No.933