


**ELECTRICALLY HEATED WALK-IN OVEN, Serial No. 411951**

for heat treating long fluorocarbon shapes supported by fixtures on wheels

- maximum operating temperature: 500F
- work space dimensions: 36" wide x 300" deep x 36" high
- 60 KW installed in Incoloy sheathed tubular heating elements
- 4200 CFM, 3-HP recirculating blower providing combination airflow
- 4" insulated walls

- integral top mounted heat chamber
- aluminized steel interior and exterior
- single door front and rear
- digital programming and recording temperature controller
- manual reset excess temperature controller with separate contactors
- recirculating blower air flow safety switch
- SCR power controller
- 2" insulated floor with channel guide tracks
- two (2) fixture supports with flanged wheels

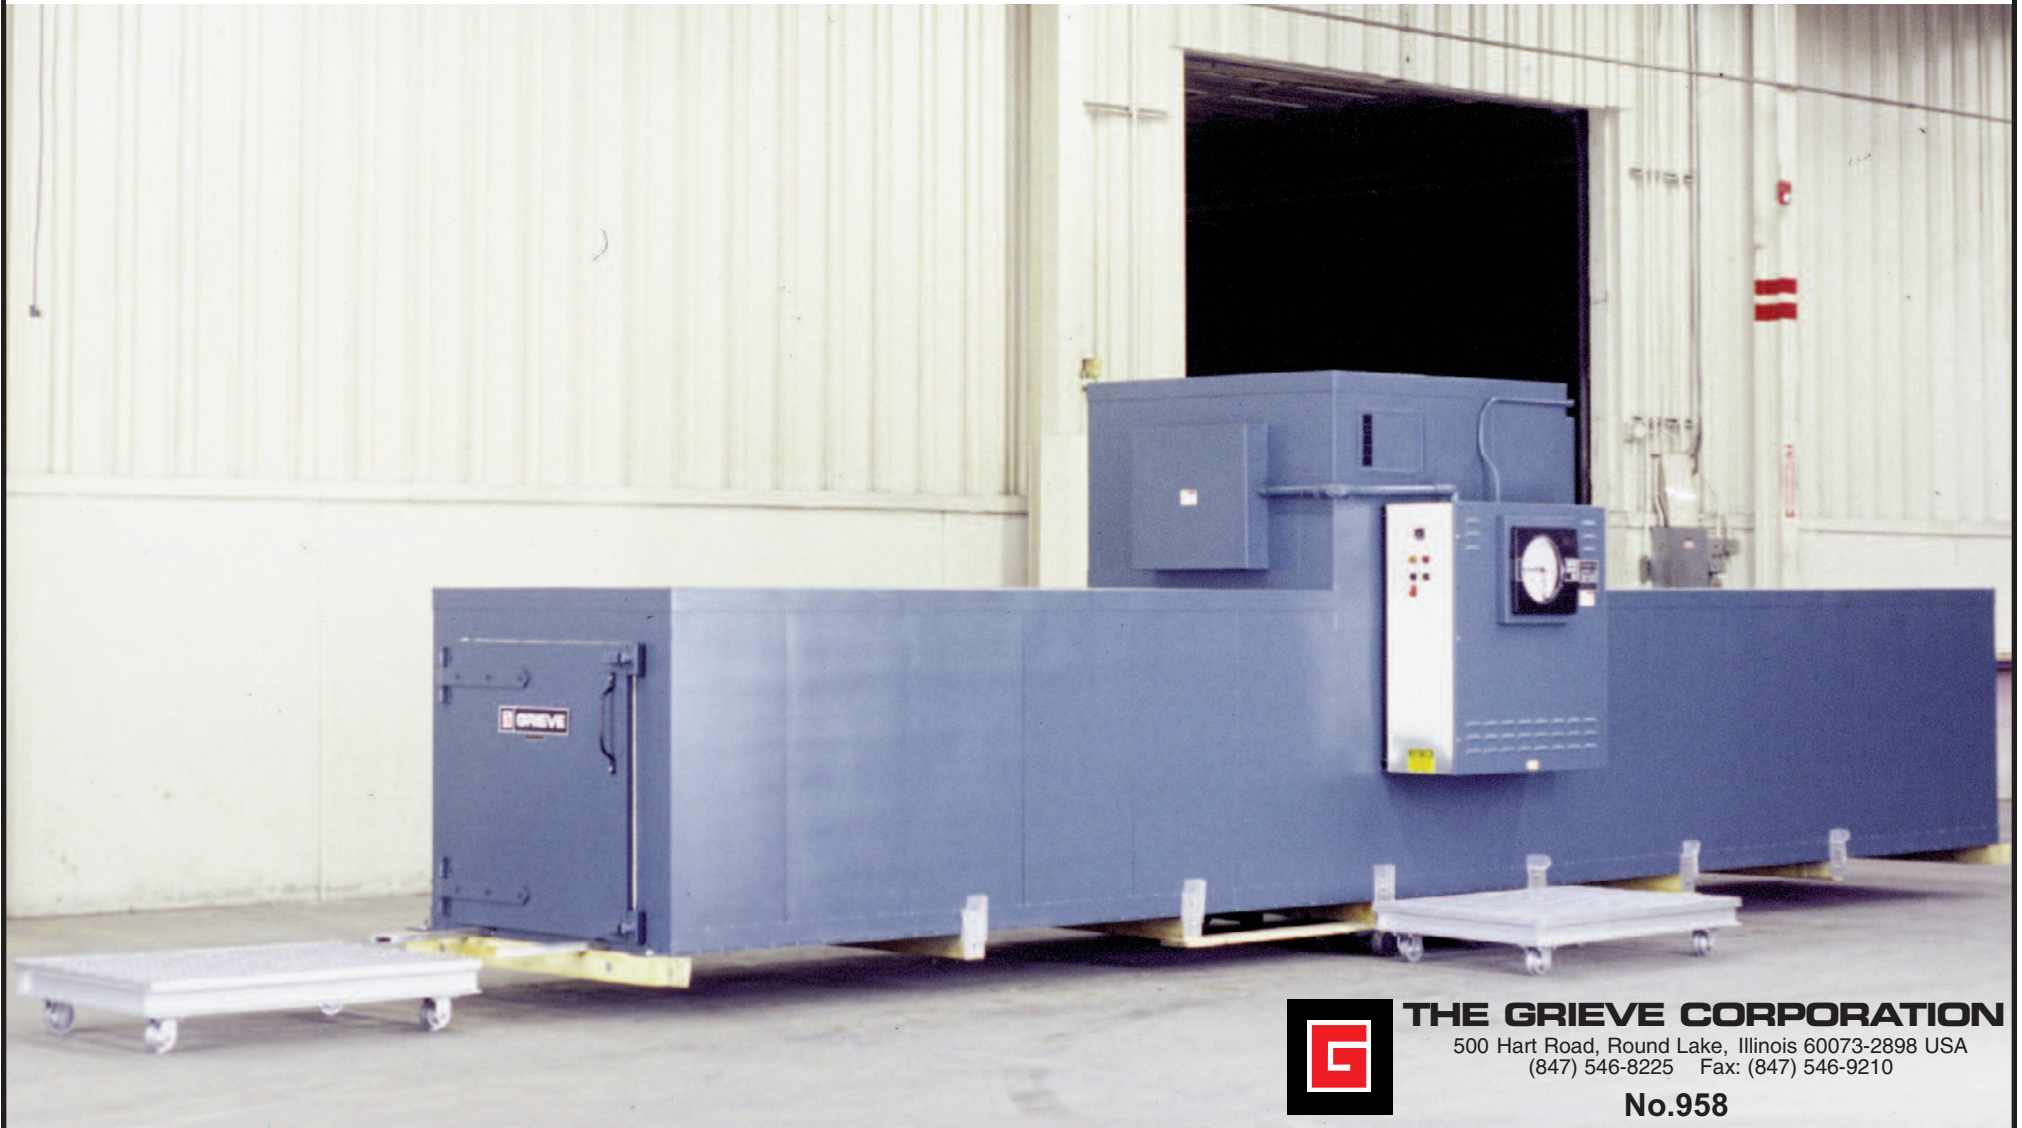

**THE GRIEVE CORPORATION**

500 Hart Road, Round Lake, Illinois 60073-2898 USA  
(847) 546-8225 Fax: (847) 546-9210

**No.958**