


MODIFIED MODEL AB-850 UNIVERSAL OVEN, Serial No. 78750A1203

for heating the end of an aluminum rod

- maximum operating temperature: 850F
- work space dimensions: 36" wide x 36" deep x 36" high
- 18 KW installed in Incoloy sheathed tubular heating elements
- 600 CFM, 1/2-HP recirculating blower providing front to rear universal airflow
- 6" insulated walls
- aluminized steel exterior
- type 304, 2B finish stainless steel interior
- single front door with (5) 3" diameter ports and (2) 6" diameter ports equipped with slide dampers
- digital programming temperature controller
- manual reset excess temperature controller with separate contactors
- recirculating airflow safety switch
- 8" x 10" double pane Pyrex/Vycor window
- interior oven light

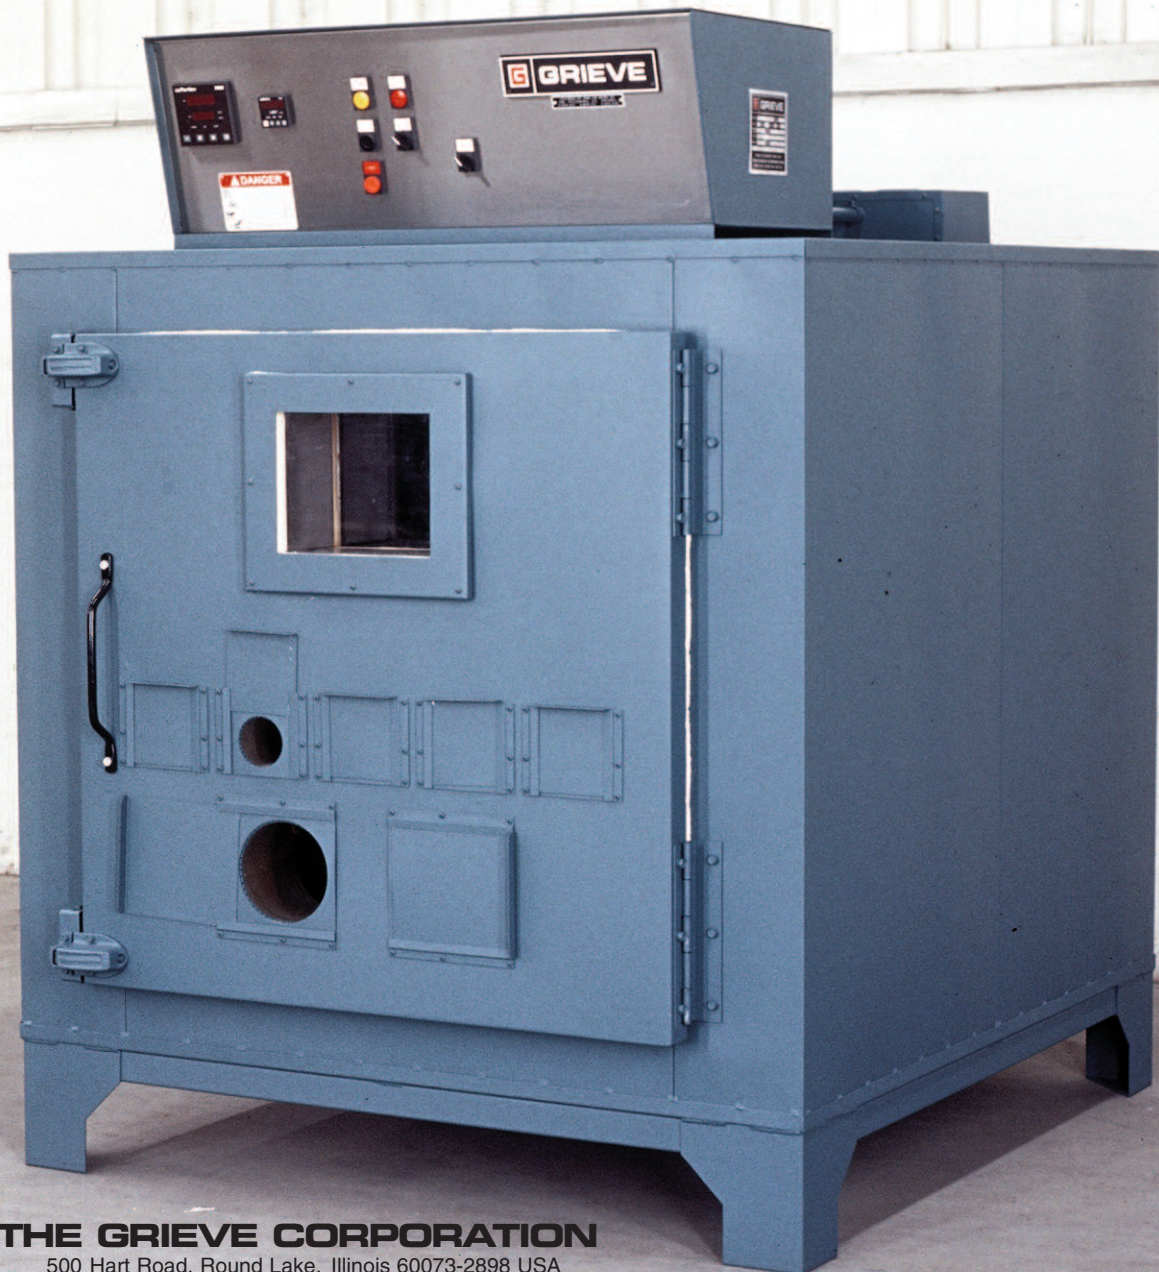

THE GRIEVE CORPORATION

500 Hart Road, Round Lake, Illinois 60073-2898 USA
(847) 546-8225 Fax: (847) 546-9210

No.985