


MODEL WRH6106-500 WALK-IN OVEN, Serial No. 411567

for curing composite parts

- maximum operating temperature: 500°F
- workspace dimensions: 6' wide x 10' deep x 6½' high
- 80 KW installed in Incoloy sheathed tubular heating elements
- 10,000 CFM, 7½-HP recirculating blower providing horizontal air flow
- 4" insulated walls

- aluminized steel interior and exterior
- safety equipment for handling flammable solvents including explosion venting door hardware
- digital programming temperature controller
- manual reset excess temperature controller with separate contactors
- recirculating blower air flow safety switch
- 10" diameter circular chart recorder
- 2" insulated floor with truck wheel guide tracks

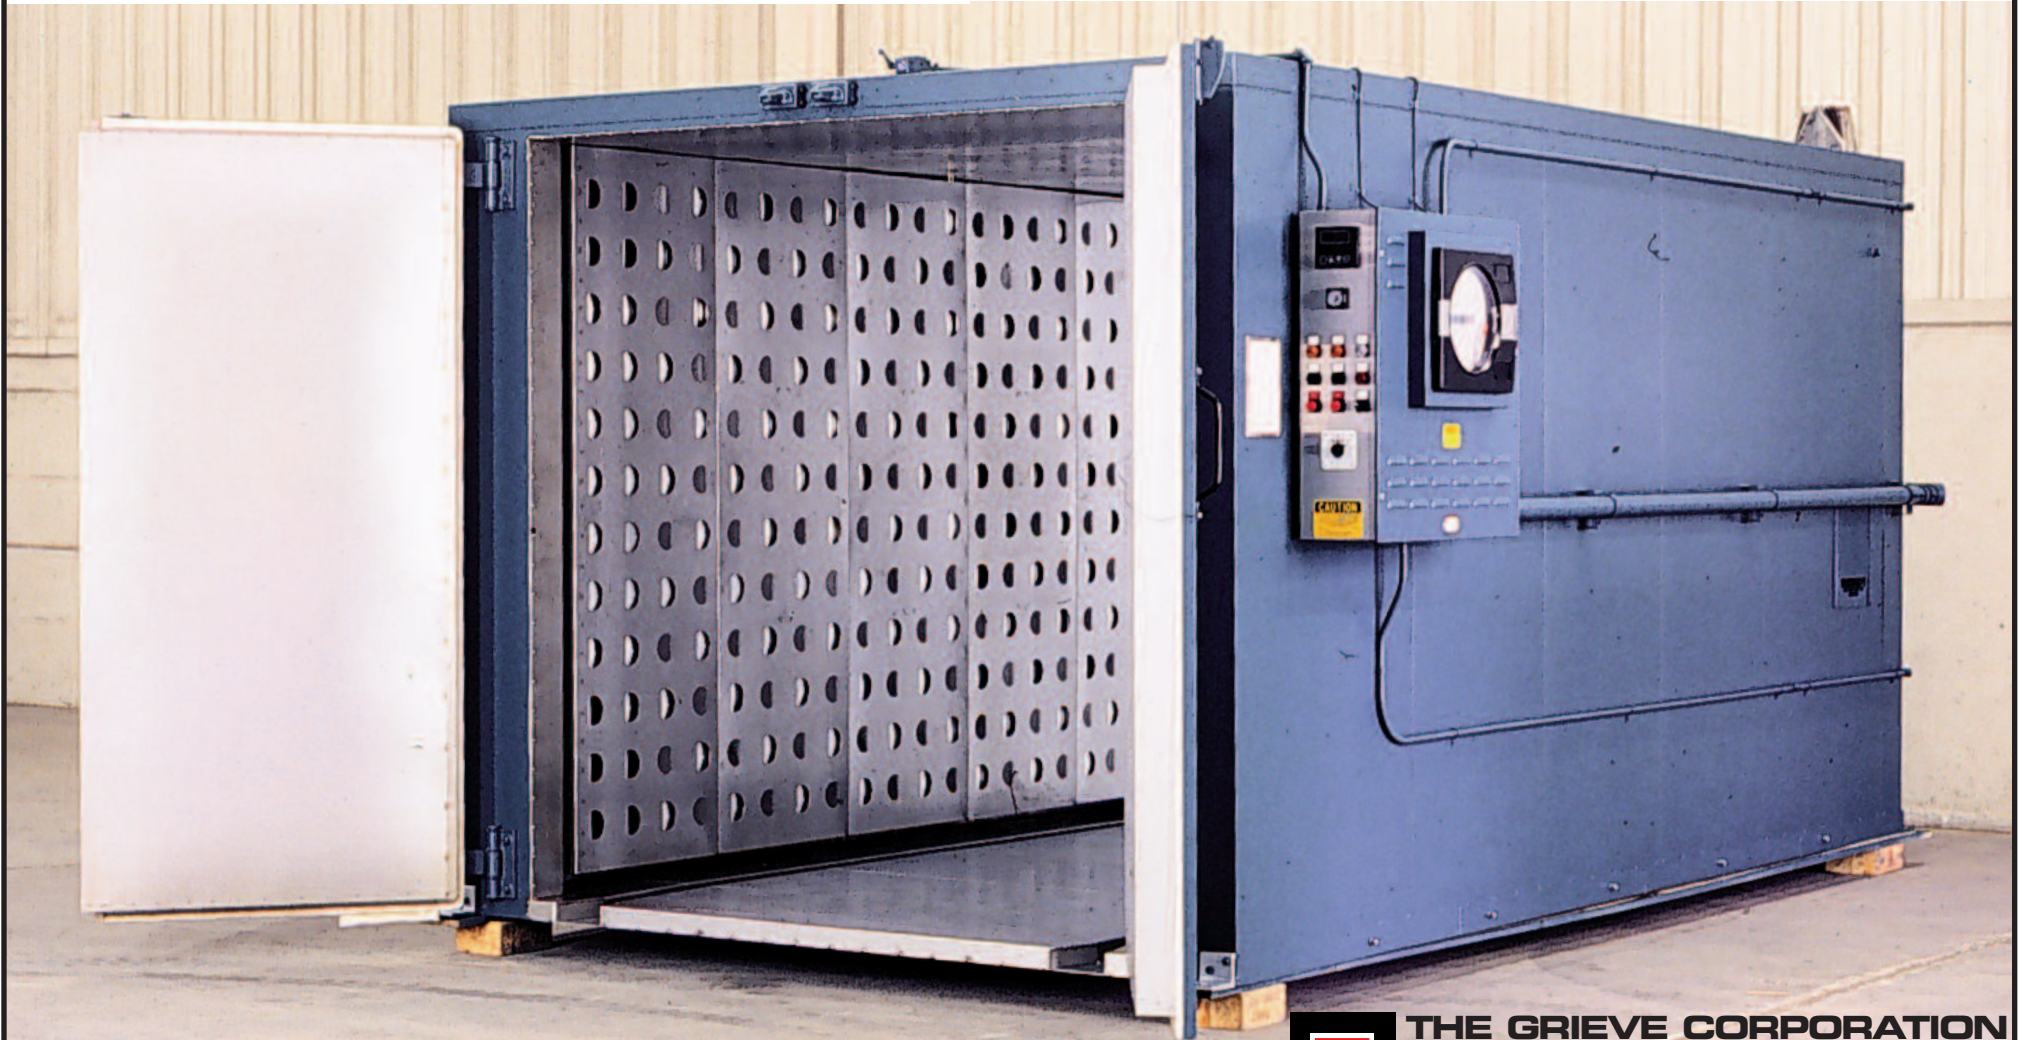

THE GRIEVE CORPORATION

500 Hart Road, Round Lake, Illinois 60073-2898 USA
(847) 546-8225 Fax: (847) 546-9210

No.850