


MODIFIED MODEL ID-500 INERT ATMOSPHERE OVEN

Serial No. 770012

for aging rubber parts

- maximum operating temperature: 500°F
- workspace dimensions: 36" wide x 60" deep x 36" high
- 12 KW installed in Incoloy sheathed tubular heating elements
- 600 CFM, 1/2-HP recirculating blower providing universal airflow
- 4" insulated walls
- aluminized steel exterior
- Type 430 stainless steel interior
- inert atmosphere construction including pressure regulator, flow meter, pressure gauge, inner oven walls sealing directly against 1/2" thick silicone rubber door seal, air jacket on inner oven for cooling, blower shaft seal, positive latching door hardware, adjustable offset door hinges, outlet with pressure relief, interior seams welded gas-tight, all wall penetrations fitted with compression fittings
- 650 CFM blower including 2-position motorized dampers to pull air through air jacket on inner oven for cooling
- Partlow MRC 7000 recording and programing temperature controller

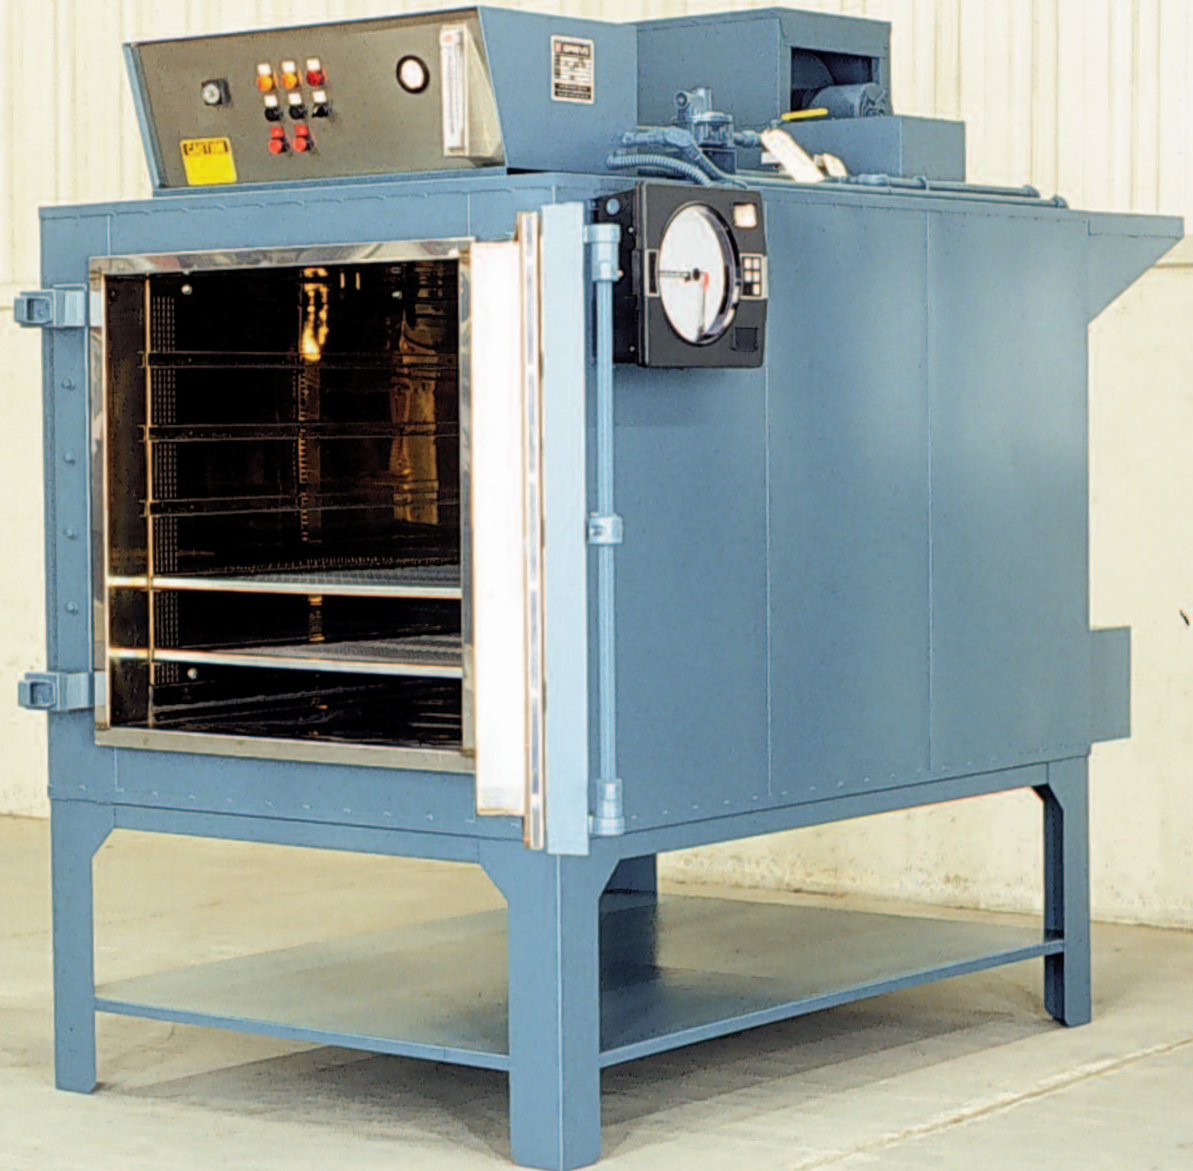

THE GRIEVE CORPORATION

500 Hart Road, Round Lake, Illinois 60073-2898 USA
(847) 546-8225 Fax: (847) 546-9210

No.870