


## MODEL HD-304830 GAS HEATED BOX FURNACE

Serial No. 700037

for heat treating and high temperature testing

- maximum operating temperature: 2000°F
- workspace dimensions: 30" wide x 48" deep x 30" high
- 650,000 BTU/HR installed in three (3) modulating natural gas burners with floor mounted combustion air blower
- 7" thick insulated walls comprised of 5" of 2300°F ceramic fiber and 2" of 1700°F block insulation; 6½" floor insulation comprised of 4½" of 2300°F firebrick and 2" of 1900°F block insulation
- firebrick plate hearth supported by firebrick piers
- electrically operated vertical lift door
- Partlow MRC 7000 recording and programming temperature controller

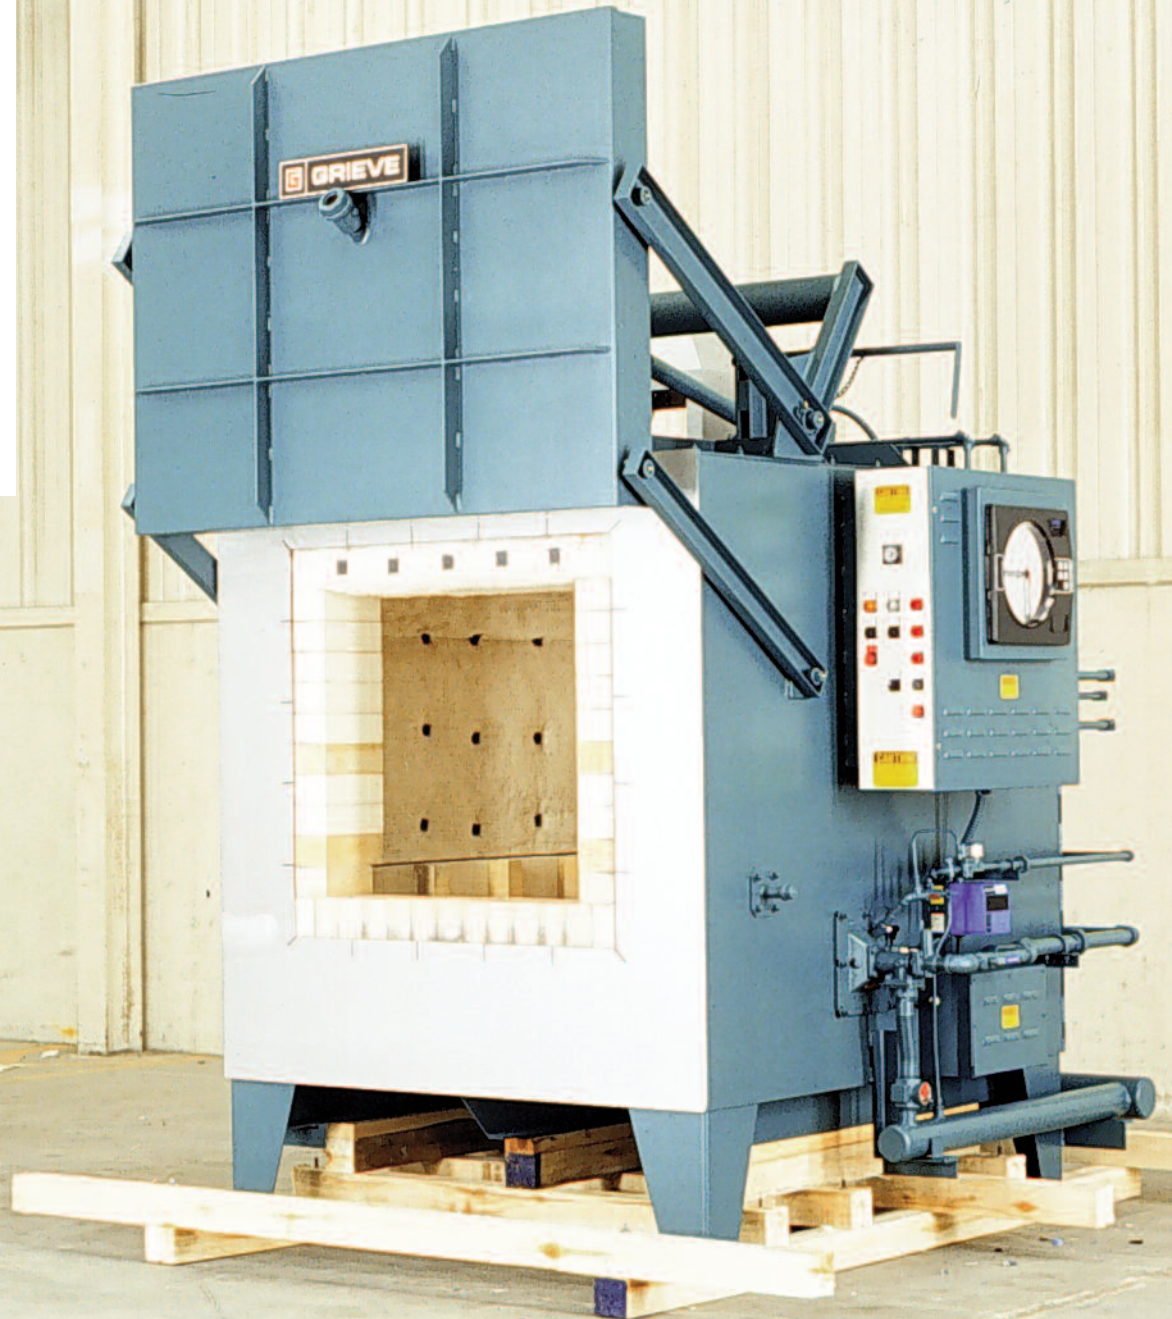

**THE GRIEVE CORPORATION**

500 Hart Road, Round Lake, Illinois 60073-2898 USA  
(847) 546-8225 Fax: (847) 546-9210

**No.871**