


SPECIAL TOP LOADING OVEN, Serial No. 660437

for testing oil field down hole equipment

- maximum operating temperature: 500°F
- workspace dimensions: 300" wide x 12" deep x 18" high
- 34.8 KW installed in Nichrome wire heating elements
- 6000 CFM, total from two (2) 3-HP recirculating blowers providing horizontal front to rear airflow
- 4" insulated walls

- aluminized steel interior and exterior
- reinforced 1/4" steel plate workspace floor to hold 5000 lbs. distributed load
- motor operated rear hinged door
- oven supported on eight (8) swivel casters with swivel locks and brakes
- digital indicating temperature controller
- manual reset excess temperature controller with separate contactors
- recirculating blower air flow safety switch

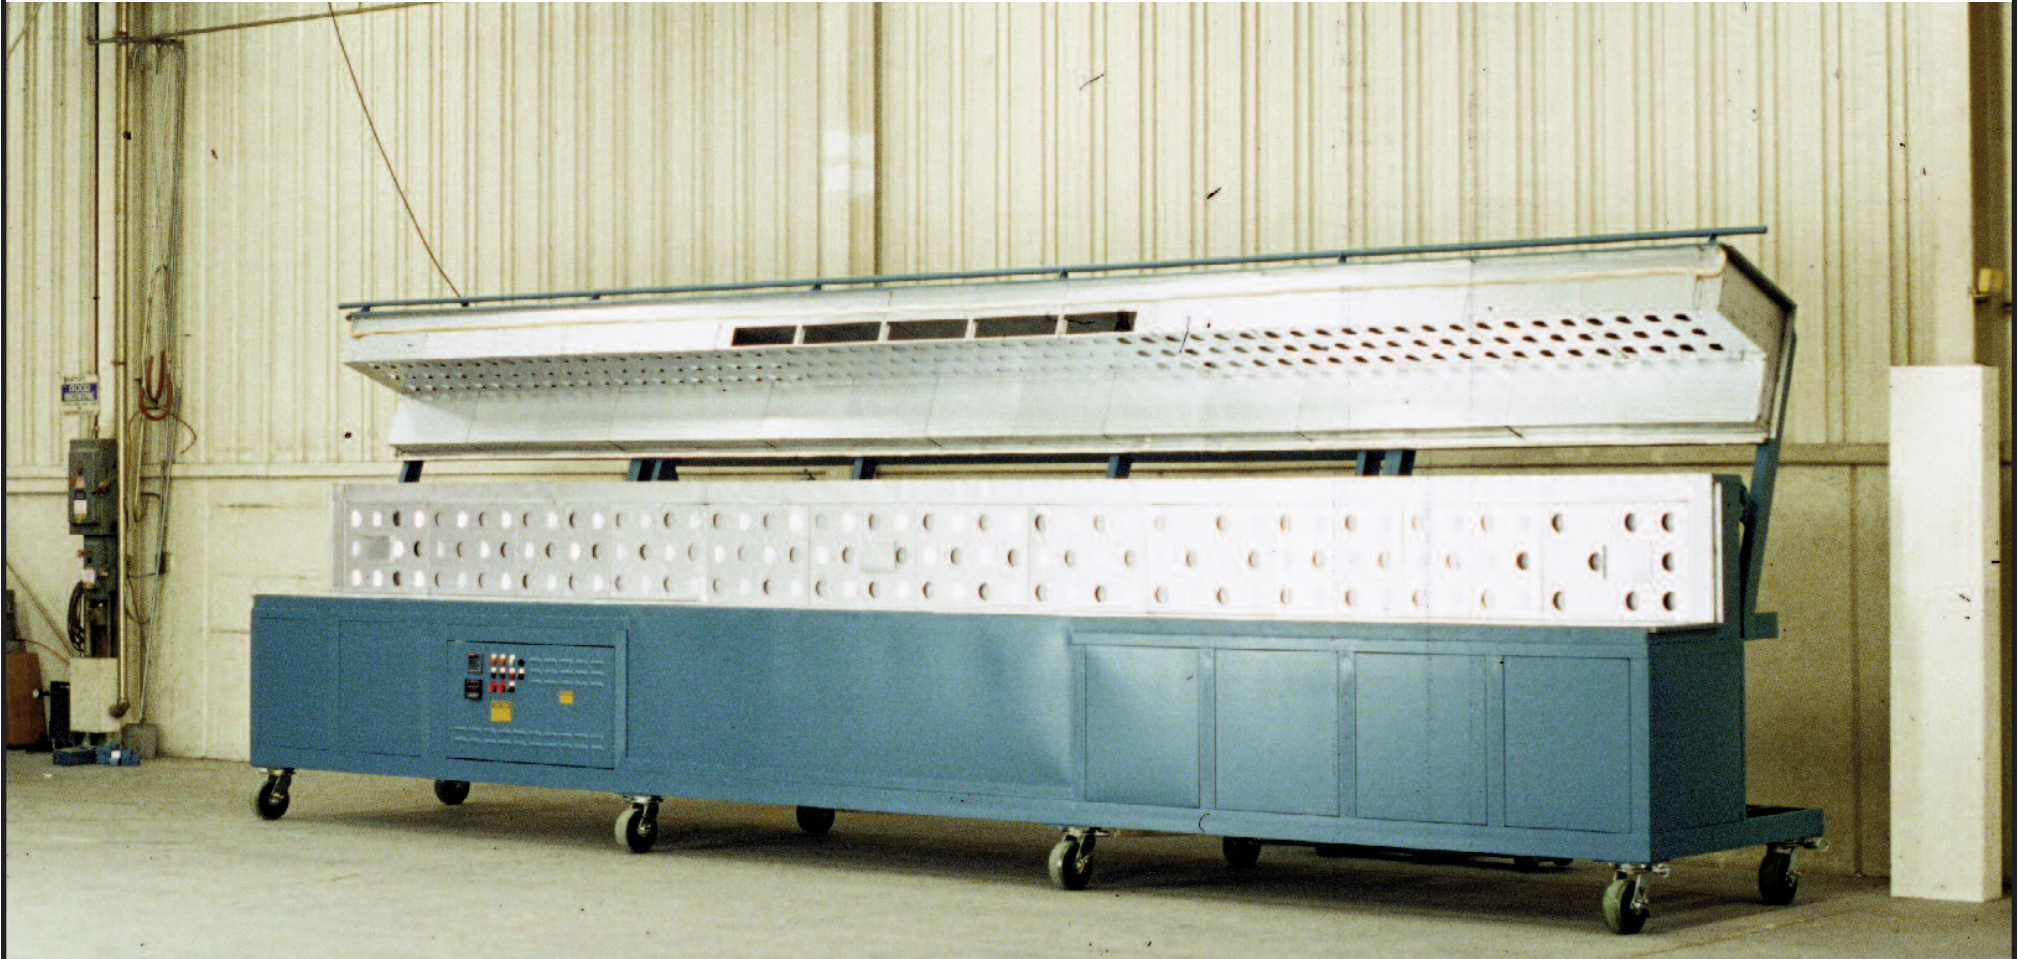

THE GRIEVE CORPORATION

500 Hart Road, Round Lake, Illinois 60073-2898 USA
(847) 546-8225 Fax: (847) 546-9210

No.882