


**MODEL HY-1000 GAS-HEATED HIGH TEMPERATURE
CABINET OVEN, Serial No. 760007**

for curing metal coatings

- maximum operating temperature: 1000°F
- workspace dimensions: 38" wide x 38" deep x 38" high
- 175,000 BTU/HR installed in a modulating natural gas burner
- 2000 CFM, 2-HP stainless steel recirculating blower providing horizontal airflow
- 8" thick insulated walls comprised of 2" of 1900°F block and 6" of 10 lb./cf density rockwool
- aluminized steel exterior
- Type 304, 2B finish stainless steel interior
- inner and outer door gaskets; inner gasket seals directly against door plug; outer gasket seals directly against front face of oven
- safety equipment required by IRI, FM and National Fire Protection Association Standard 86 for gas-heated equipment including 325 CFM 1/3-HP powered forced exhauster
- digital indicating temperature controller

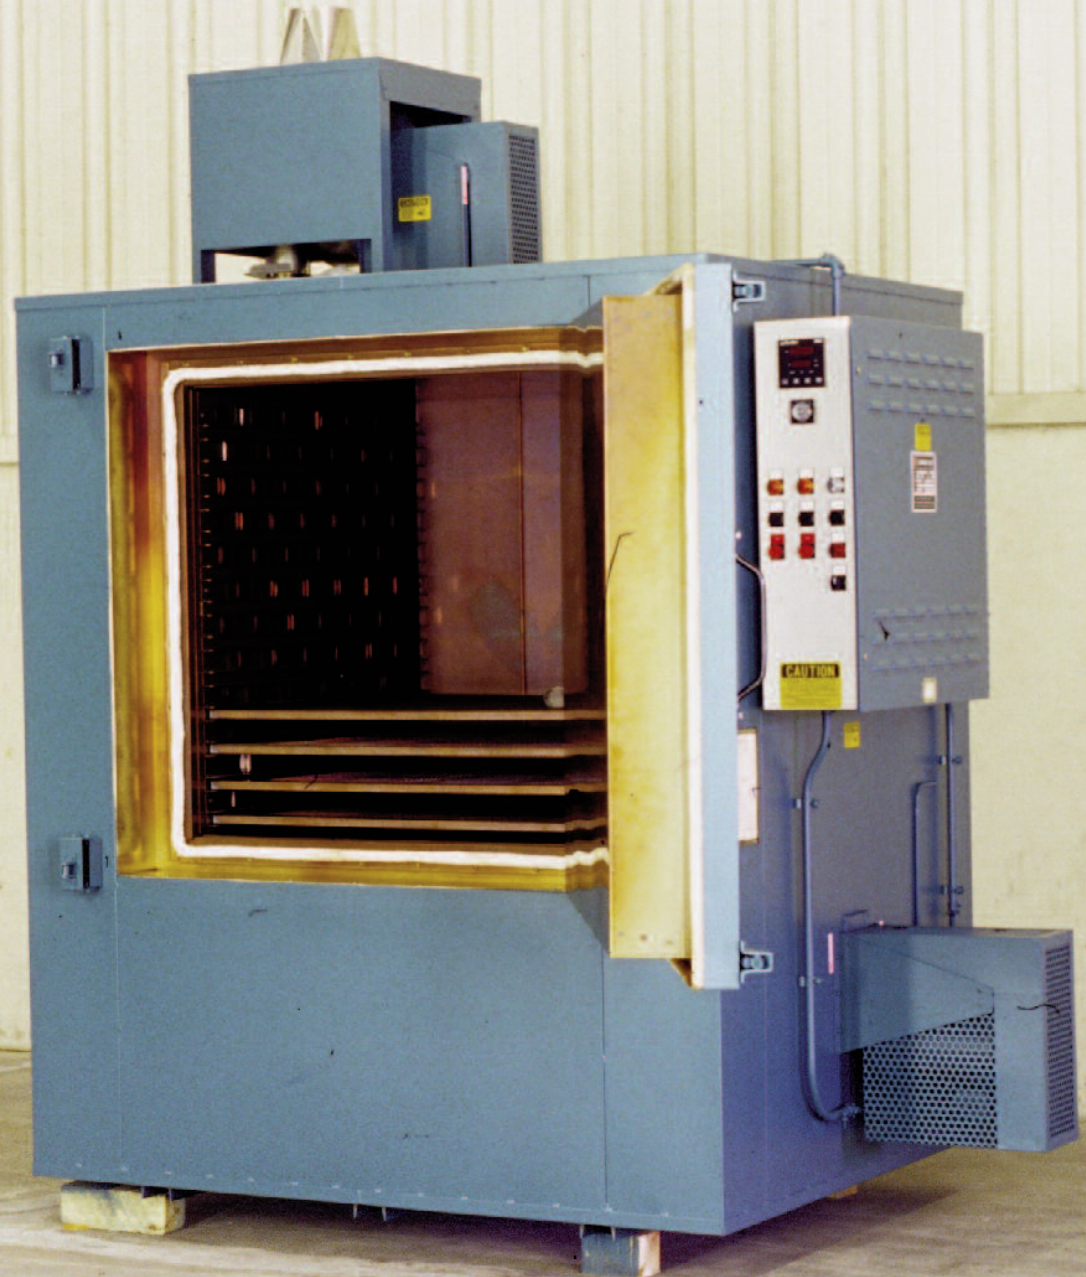

THE GRIEVE CORPORATION

500 Hart Road, Round Lake, Illinois 60073-2898 USA
(847) 546-8225 Fax: (847) 546-9210

No.887