


**MODIFIED MODEL WRH566-650 INDIRECT GAS HEATED WALK-IN OVEN,  
Serial No. 411806**

for use in drying plastic molds

- maximum operating temperature: 650°F
- work space dimensions: 60" wide x 72" deep x 72" high
- 800,000 BTU/HR installed in a modulating natural gas burner fired into an alloy radiant tube
- 6000 CFM, 5-HP recirculating blower providing horizontal airflow

- 5" insulated walls
- aluminized steel exterior
- type 304, 2B finish stainless steel interior
- safety equipment required by IRI, FM and National Fire Protection Association Standard 86 for indirect gas-heated equipment
- 1500 CFM powered forced exhauster
- motorized dampers on fresh air and exhaust for accelerated cooling
- digital programming temperature controller
- 10" diameter circular chart recorder

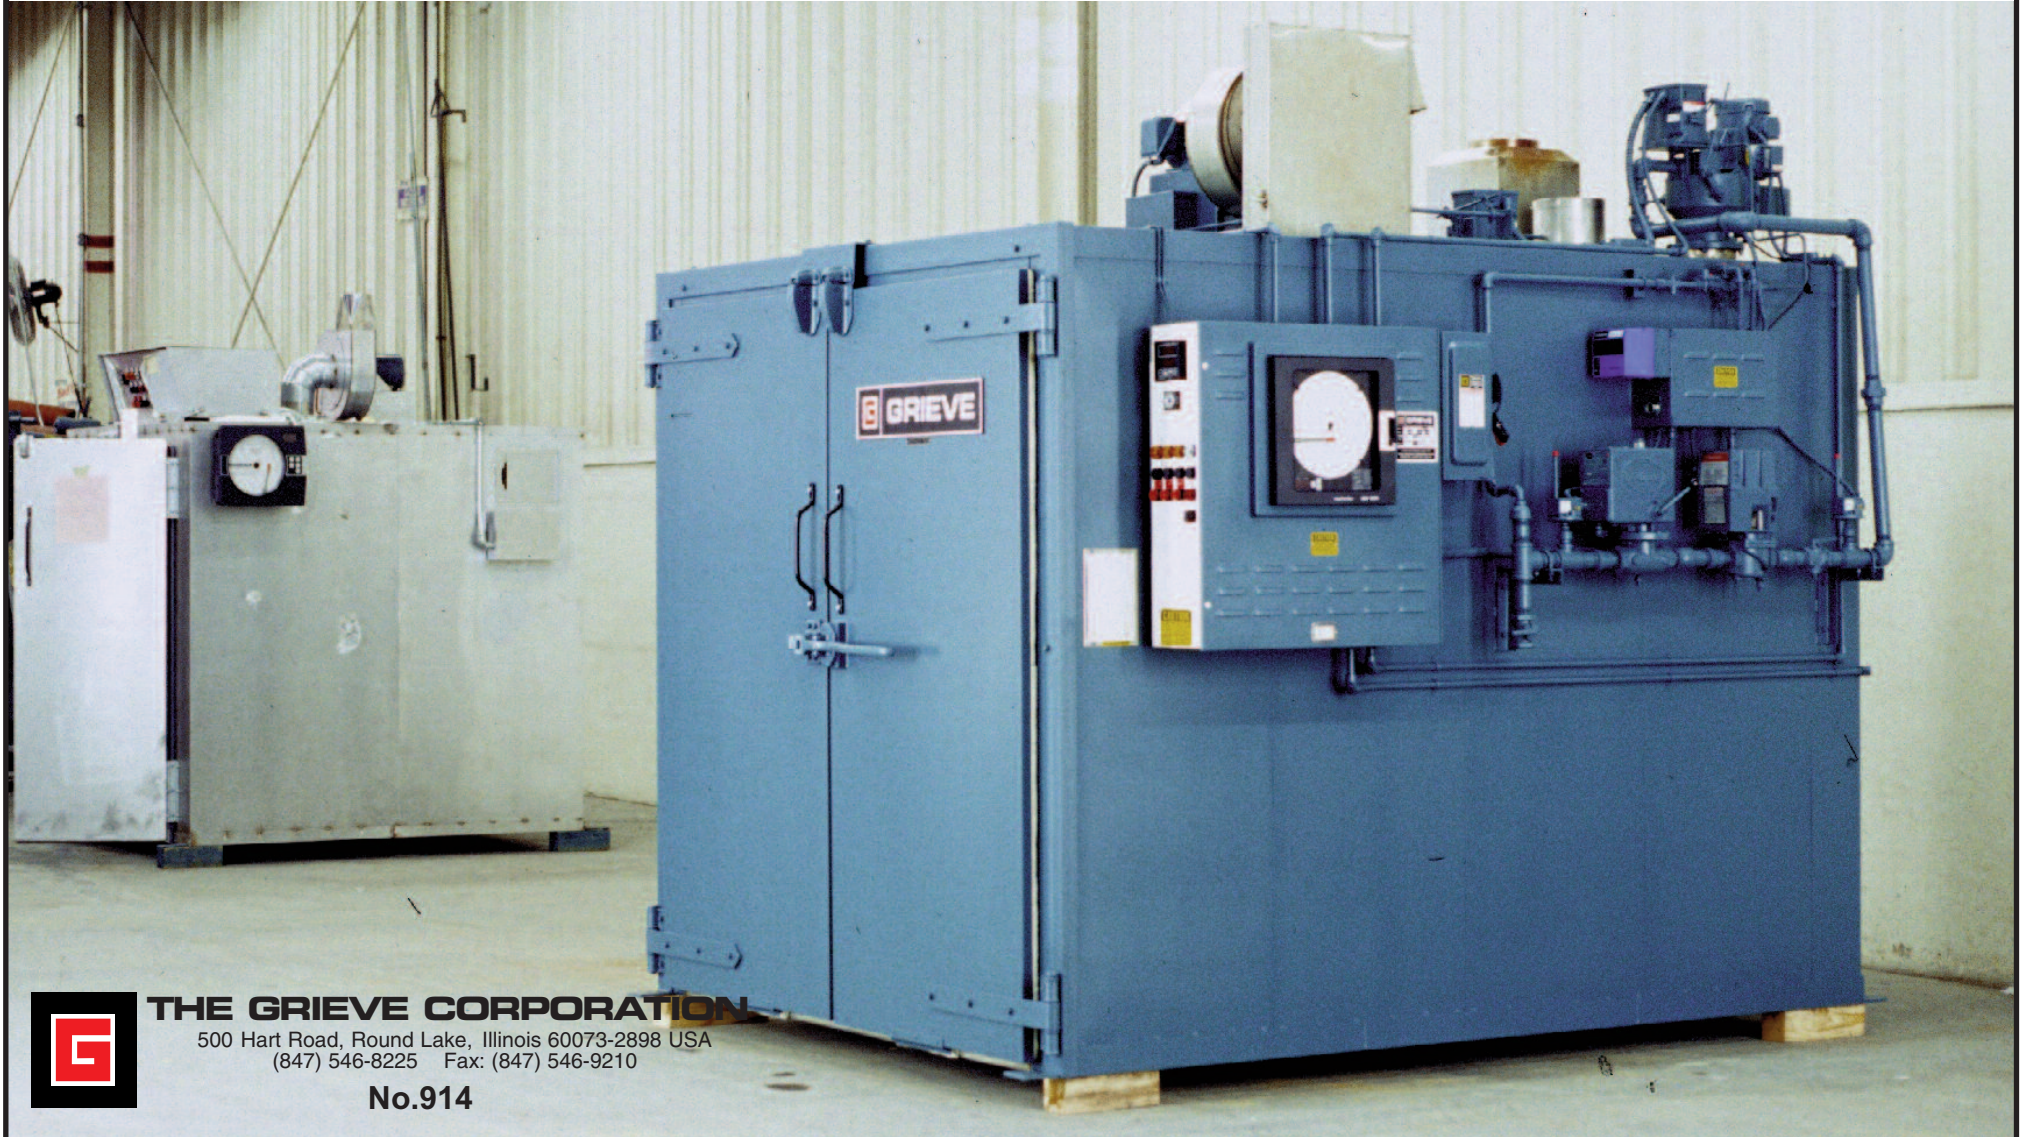

**THE GRIEVE CORPORATION**

500 Hart Road, Round Lake, Illinois 60073-2898 USA  
(847) 546-8225 Fax: (847) 546-9210

**No.914**