


**MODEL PT-242424 PIT FURNACE, Serial No. 690021**

for heat treating

- maximum operating temperature: 2000F
- workspace dimensions: 24" wide x 24" deep x 24" high
- 26 KW installed in nickel chrome wire coils supported by vacuum formed ceramic fiber
- 7" thick insulated walls comprised of 5" of 2300F ceramic fiber blanket and 2" of block insulation, 6-1/2" thick floor comprised of castable refractory
- air operated vertical lift door
- reinforced 1/2" steel plate top

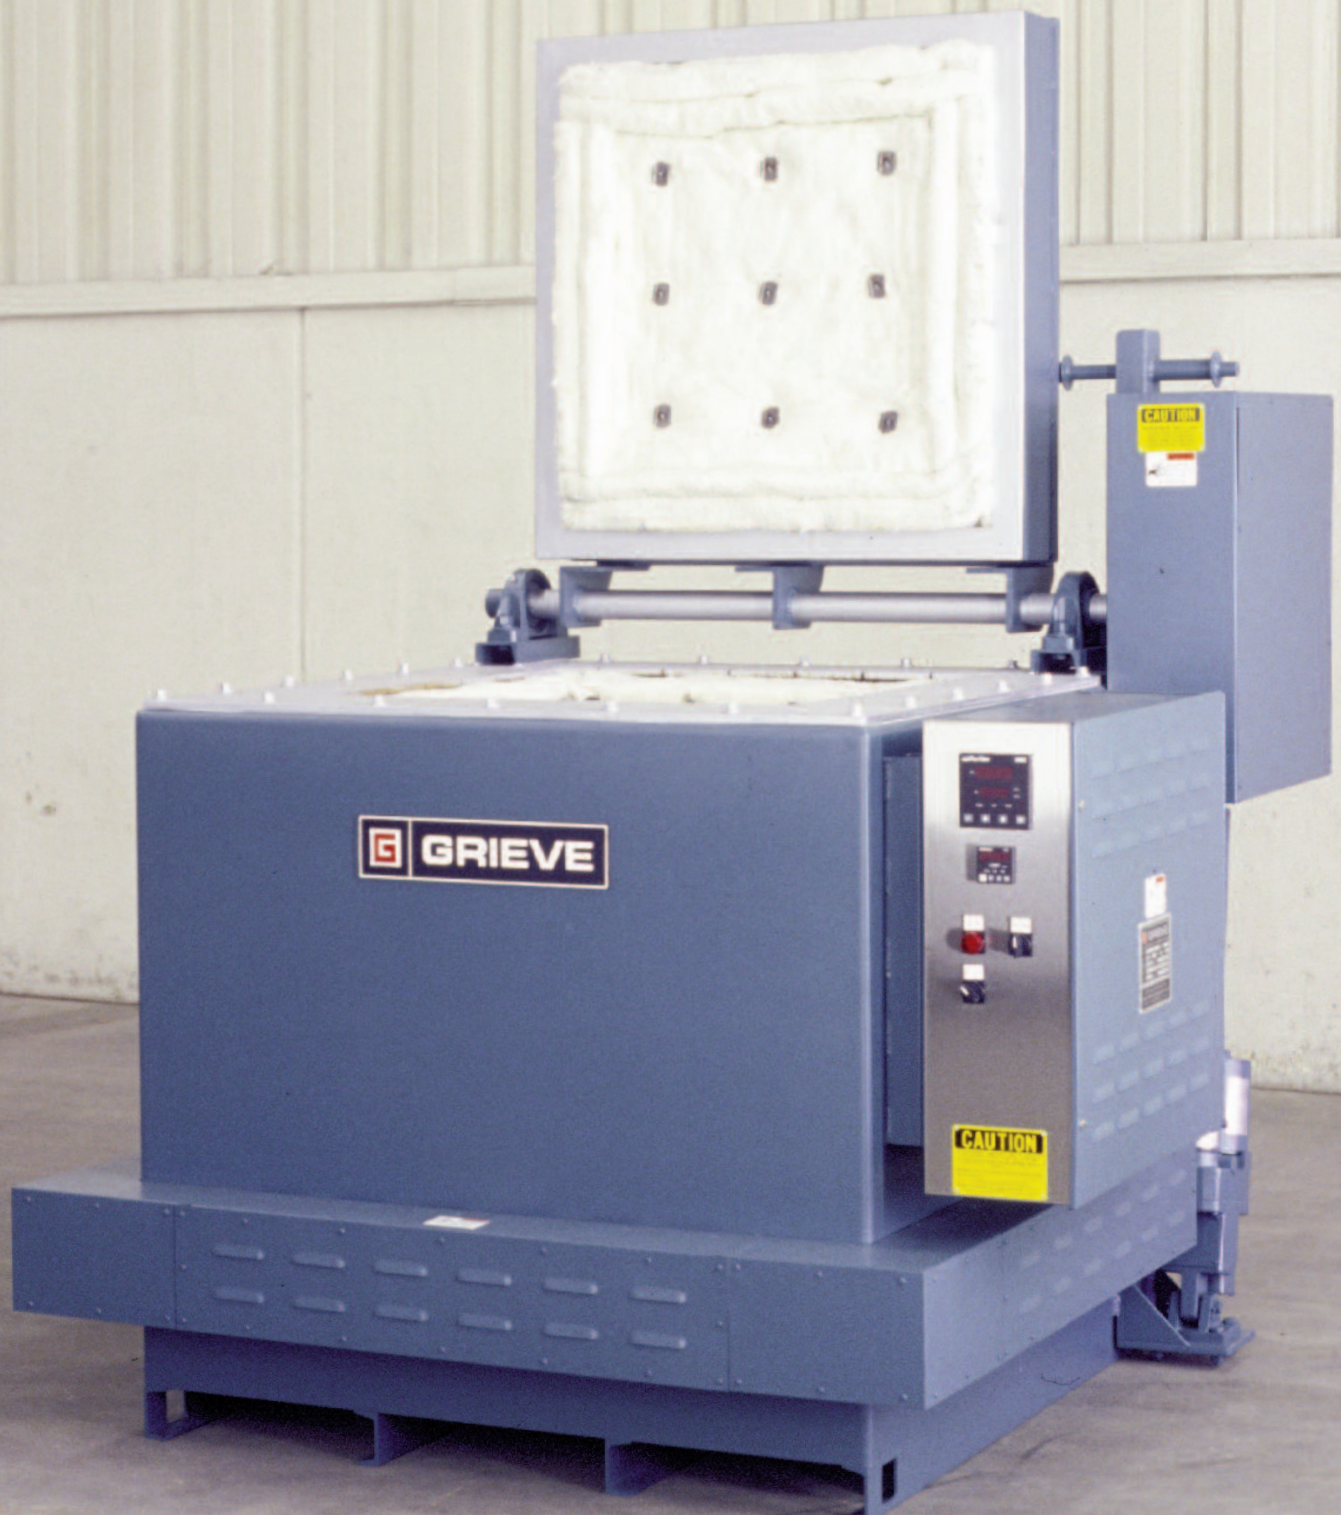

**THE GRIEVE CORPORATION**

500 Hart Road, Round Lake, Illinois 60073-2898 USA  
(847) 546-8225 Fax: (847) 546-9210

**No.943**