


GAS-FIRED BELT CONVEYOR OVEN, Serial No. 650199
for preheating steel parts

- maximum operating temperature: 800F
- work space dimensions: 30" wide x 108" deep x 39" high
- 24" long open belt loading zone
- 108" long insulated heat zone with recirculated airflow
- 24" long open belt unloading zone
- 400,000 BTU/HR installed in a modulating natural gas burner
- 24" wide, 1" x 1" stainless steel conveyor belt with 1/4-HP motor drive to index belt
- 4200 CFM, 3-HP recirculating blower providing vertical downward airflow
- 6" insulated walls
- aluminized steel interior and exterior
- motor operated vertical lift doors
- safety equipment required by IRI, FM and National Fire Protection Association Standard 86 for gas-heated equipment including 325 CFM, 1/3-HP powered forced exhauster
- digital indicating temperature controller

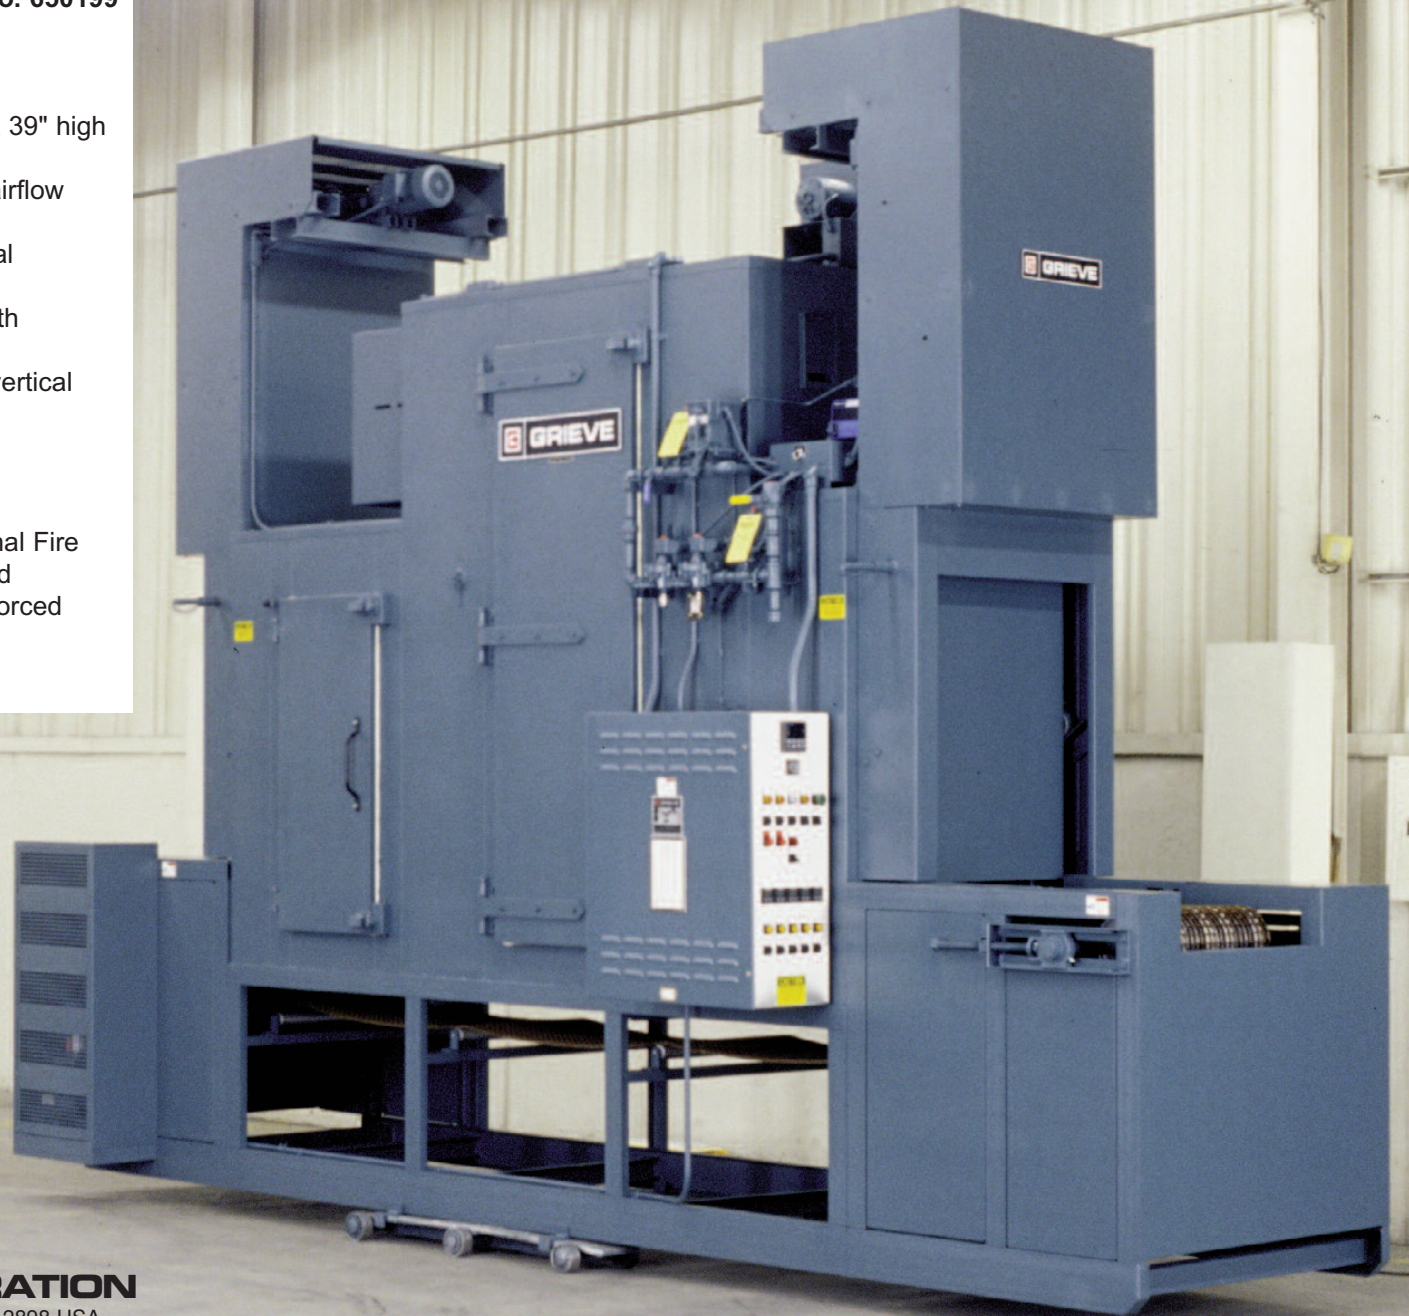

THE GRIEVE CORPORATION

500 Hart Road, Round Lake, Illinois 60073-2898 USA
(847) 546-8225 Fax: (847) 546-9210

No.956